


PZ1 and PZ2 are rectified inputs for VIN
See datasheet for electrical specs for VIN

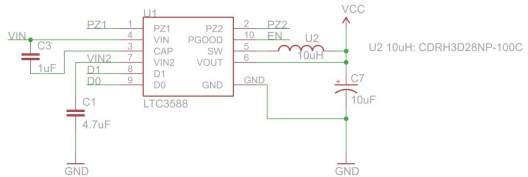

On the board 1 is VIN and 0 is GND
0 is default

