


# USER MANUAL

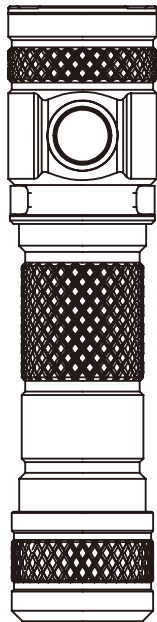

## SPECIFICATIONS

| FL 1 STANDARD | HIGH                         | MED        | LOW       | MOON       |
|---------------|------------------------------|------------|-----------|------------|
| 14500         | 900 LUMENS                   | 200 LUMENS | 18 LUMENS | 0.2 LUMENS |
|               | 58min                        | 2.5h       | 31h       | 20days     |
| AA            | 240 LUMENS                   | 38 LUMENS  | 6 LUMENS  | 0.1 LUMENS |
|               | 1.1h                         | 5h         | 70h       | 30days     |
|               | 95m (Max Beam Distance)      |            |           |            |
|               | 2269cd (Peak Beam Intensity) |            |           |            |
|               | 1m (Impact Resistant)        |            |           |            |
|               | Waterproof IPX-7             |            |           |            |

### ( EN ) English

**ON/OFF:** Single click the side switch to turn the light on/off. When the light is turned on again, it will return to the previous brightness level selected.

**CHANGE BRIGHTNESS LEVEL:** When the flashlight is on, press and hold the side switch to automatically cycle through moonlight, low, medium, high modes. The mode is

selected when the side switch has been released.

**MOONLIGHT MODE:** When the flashlight is off, press and hold the side switch for over one second to access the moonlight mode. If the memorized mode is moonlight, single click the switch to access it.

**Direct Access to Turbo Mode:** When the flashlight is on, quickly double click the switch to access Turbo mode.

**STROBE & SOS:** When the flashlight is off, quickly double click the side switch to enter the strobe mode. Another quickly double click to enter SOS mode. To quit this mode, single click to turn the flashlight off.

**LOCKOUT/UNLOCK:** When the flashlight is off, quickly triple click to access the button lockout mode (the flashlight will show 3 solid flashes and will then switch off to activate the lockout mode). Another quickly triple click to unlock it.

### (CHS)简体中文

**开/关机:** 单按按键开关机。开机时, 手电点亮在记忆存储的亮度。

**改变亮度:** 长按按键, 输出从当前亮度开始, 按月光->低->中->高顺序改变, 释放按键时选定亮度。

开启月光档: 关机状态下按住按键1秒以上月光开启。如前次关机为月光, 单按按键。

**快捷极亮:** 开机状态时, 快速双按按键进入极亮模式。

**爆闪, SOS模式:** 关机状态时, 快速连接两次进入爆闪, 再次快速连接两次进入SOS模式。

**锁键与解锁:** 关机状态下, 快速连接三次, 此时手电会闪烁三次, 手电即进入锁键状态。再次快速连接三次, 即可解锁。

## User Interface

