

# TM-610

## SINOTIMER

# 1.Introduce

-Industry first utility function:

- Built-in calendar, 10 holiday times can be set in a year
- EXT port(extended length can reach 100 meters)
- 16 groups procedure controls(ON/OFF)
- 32 pulse controls(can be used for bell or on trigger-start equipment)
- Countdown function

-Can be programmed, or manually controlled for easy use

-Imported digital chip, intelligent and stable system

-LCD display, LED work instruction

-Built-in lithium battery, when a power failure, data will not be lost and timer will travel time as usual and be in auto-sleep

-Key parts adopt imported components

-Standard width: 17.5mm

-Standard installation with Din 35mm

-Widely used in industry, house, building, corollary equipment, etc.

#### 2. Technical data

Rated voltage:	220-240VAC	load capacity:	AC250V 16A COSφ=1
Mains frequency:	50Hz	Load Inductive :	AC250V 10A COSφ=0.6
Procedure setting:	16 on/off program	EXT switch:	cable length≤100m
Pulse program:	32 channels duration:1-99sec	Contact point:	1group
Holiday program:	10	Contact resistance between contacts:	$\leqslant$ 100m $\Omega$
Countdown:	duration: 1-99min 59sec	Insulation resistance between contacts:	≥100MΩ
Electrical life:	10⁵ times	Working temperature:	−10 ~ +50 °C
Mechanical life:	10 <sup>7</sup> times	Ambient humidity:	35-85% RH
Power reserve:	3Years	Storage temperature:	−10 ~ +60°C
Power:	≤ 3VA	Weight:	$\leqslant$ 90g
2			www.sinotimer.com

# TM-610

Digital time switch for DIN rail

# SINOTIMER







#### 4.Setting and operating

#### Notes:

- 1. Press "Menu" and "-" for 3 seconds, procedures will be closed but all former setting will be lost; press "Res", all procedures will be cleared.
- In any setting screen but no any operation within 30 seconds, procedure will back to clock screen automatically, and will not save setting data.
- **3**. Duing to built-in lithium battery, you can install timer in distribution box or control circuit after setting procedures.

## TM-610

Unit:mm

45.5

#### Program setting interface chart

TM-610



# Date and time setting built-in calendar, set Year, Mouth, Hour and Minute respectively.

- Press "Menu" until " ⊕" flashes, then press "OK" into clock setting interface, Mark Year will flash.
- Press"+/-" to required year ,then press "OK" to confirm .About setting mouth, day ,hour and minute ,same operation as setting year.
- After finishing setting date and time, press "Menu" to exit and complete this setting.

Note: After the date is set, week will be self-synchronizing

SINOTIMER

# SINOTIMER

#### TM-610

#### 1. Program/ pulse/ countdown function setting

- **Notes:** After press "**Res**" key,the following three kinds of programs can only select one of them and cannot be used at the same time
- 1.Program setting(user can set program switch number as required at most 16 groups)
- A: Press "Menu" in clock screen , when "prog" flashes, press "OK" to confirm and enter into one setting screen, 01 on flashes.
- B: Press "OK" into time setting, marker hour and minute flashes icon
- $\ensuremath{\textbf{C}}$  : Press " $\ensuremath{\textbf{Menu}}$  ", then marker hour flashes icon.
- D: Press "+/-" setting hour and press "OK" after completing then same setting for flashing minute and press "OK" after completing.
- E: When program enters into week setting screen , marker 1(Monday) flashes .lf need to open 1 (Monday),press "+" to open and copy to marker 2 (Tuesday),or press "-" to delete 1(Monday) , again to press "+" to 2(Tuesday),You can set week in turn after finishing press "OK" to confirm and program will enter into setting screen of close time.

### Attention:

- After finishing week setting, open-needed week days will be shown in the screen.
- If all week days need to be open ,press "OK" and enter into setting screen of close time when marker Monday flashes.
- F:Repeat step b to e ,and finish setting close time and week .Press "OK" into 2nd setting or press Menu to confirm and exit.

# TM-610

- 2. pulses control program setting (user can set number of pulse control as requires, at most 32 channels)
- A: Press "Menu" in clock display screen. When marker **J** flashes, press OK into group 1 setting screen icon.
- B: Press "Menu" then marker hour flashes icon.
- C: Press "+/-" to set hour and press "OK" after finishing . set minute and press "OK" to confirm .
- **D:** Program enters into week setting screen, and setting ways please follow program setting.
- E: Press "+/-" to set pulse control time ,and the duration range is from 1-99 sec ,after finishing, press "OK" into 2nd setting or press Menu to confirm and exit.
- 3.Countdown setting (user can set countdown time, at longest time is 99 minutes and 59 seconds )
- A: After press "Rst" Key, press "+/-" key , when marker 🗊 flashers, press OK into countdown.
- B: Press "+/-" to set minutes and press "OK" after seconds flashes .
- C: Press "+/-" to set seconds and press "Prog" completing and exit.
- D: Press "+" and "-" Key, to select Auto OFF state.
- E: Press "OK" and "+" Key, can to start and close countdown.



ww.sinotimer.com

### SINOTIMER

#### Man function setting (4 state control ways /EXT setting /holiday setting )

Press "Menu" until remark **Man** flashes, press **OK** into **Man** function setting screen, press "+/-"to choose required functions ,then press **OK** into subprogram setting screen.

#### 1.Control ways setting (Auto ON/ON/Auto OFF/OFF)

- A) Press "+/-" to choose remark Auto, then press "OK" to confirm
- B) Remark OFF Auto flashes press "+/-" to choose one of control ways (Auto ON/ON/Auto OFF/OFF) ,and press "Menu" to exit after finishing setting.
- **OR:** press "+" and "-", can cycle setting Auto **ON/ON/Auto OFF/OFF** at 4 state.

# 2.EXT setting .(if need this function ,external control switch is required ,and wiring method id shown in the diagram.

- A) Press "+/-" to choose remark EXT, then press "OK" to confirm
- B) Press "+/-", there will be 2 selections :OFF EXT /ON EXT. press "Menu" after finishing choosing.

Notes:

- A) There will be remark EXT after you set to EXT ON .But it is valid for EXT control switch in the state of Auto on or Auto OFF.
- B) In the state of on or off ,the equipment will be forced to ON or OFF . If not followed by setted procedures ,it will be not valid .Only running timer in the state of Auto on or off , EXT switch is valid.
- C) When setting EXT off ,EXT input port is not valid ,timer will run by setted procedure or pulse .When setting EXT on , EXT input port is valid.There is no execution of setting procedures or pulse when EXT switch closes setting procedures or pulse execute when EXT switch opens.

#### TM-610

### SINOTIMER

- 3.Holiday setting (can set 10holiday times within 1 year and every group of ON/OFF setting is required respectively)
- A: Press "+/-" choosing " 
  , then press ok to confirm.
- B: Press "+/-" choosing ON/OFF
- C: Press "Menu" into year setting screen (set the start time of holiday first and the end time second)
- D: Press "+/-" choosing choosing required year ,then press OK into date screen.
- E: Press "+/-" choosing choosing required date ,then press OK into setting screen of holidays (dates off) automatically.
- F: Repeat step b-e ,and the system will enter into next holiday setting after setting , or press "Menu" to exit to time screen.

#### Notes:

- Do not use this product in the places with dustiness, etchant gas, direct sunlight or rain.
- Please store and use in the places with rated voltage, specific temperature and humidity
- If design and specification of product are subject to change, will not further notice.

TM-610