


SucceX-Force 5.8G

25mW/100mW/400mW/800mW

Wiring Diagram




5V Output only for FPV cameras!

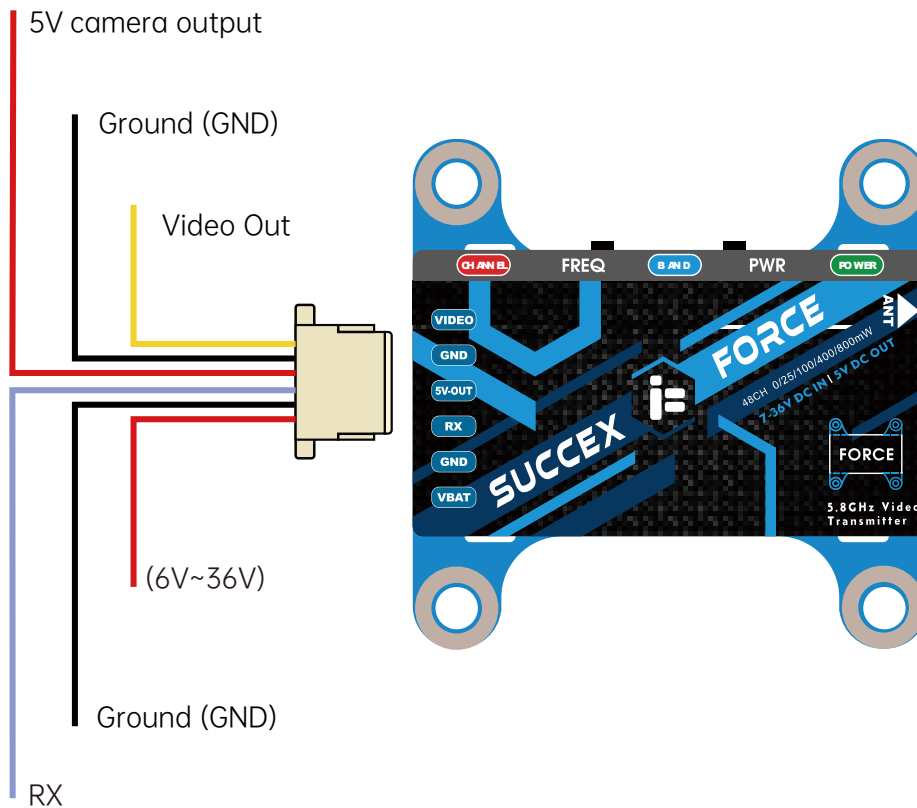

- ▲ The RX wire can be linked to any free UART TX on your Flight Control and setup for IRC Tramp VTX telemetry to change parameters of your VTX through your OSD.
- ▲ If you experience severe signal interference in your video feed please inspect your power source for electrical noise. Some common issues are too long motor screws, no additional capacitor added to your ESC, bad or noisy motors, bad or noisy ESC.

Indicator LED and Buttons

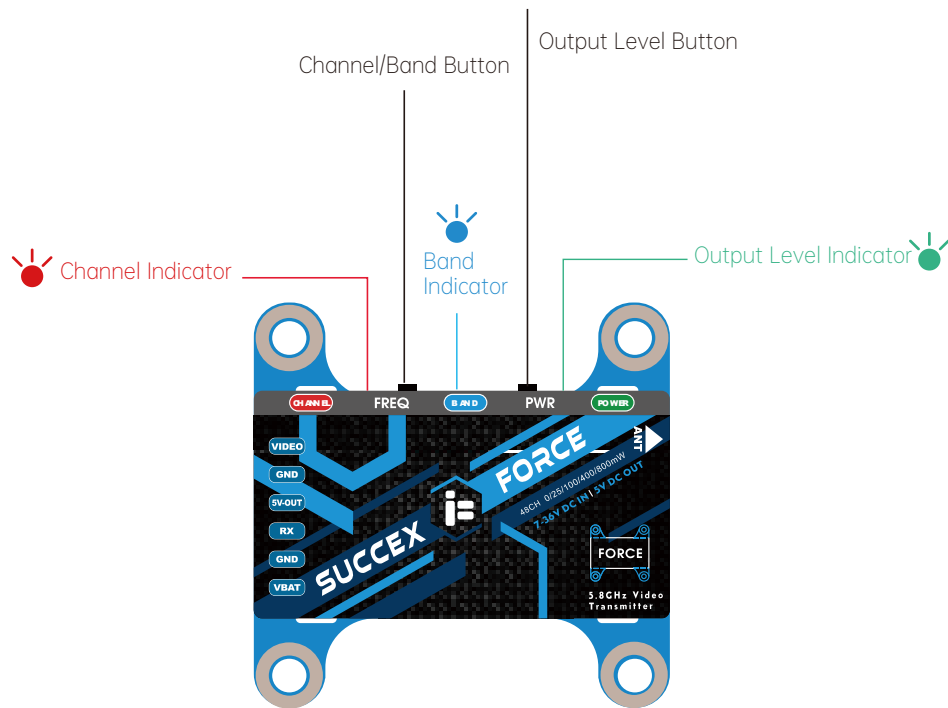

Power Level Selection

Long Press for 2 seconds to select Power Level

Power	PIT	25mW	100mW	400mW	800mW
Green LED	light ON	Flash 1x	Flash 2x	Flash 3x	Flash 4x

Band Selection

Long Press for 3 seconds to enter Band selection

Group	BAND A	BAND B	BAND E	BAND F	RaceBand	LowRace
Blue LED	Flash 1x	Flash 2x	Flash 3x	Flash 4x	Flash 5x	Flash 6x

Channel Selection

Short Press to enter the Channel selection

Group	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
Red LED	Flash 1x	Flash 2x	Flash 3x	Flash 4x	Flash 5x	Flash 6x	Flash 7x	Flash 8x

RF Frequency Table

BAND	CHANNEL							
	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
A	5865M	5845M	5825M	5805M	5785M	5765M	5745M	5725M
B	5733M	5752M	5771M	5790M	5809M	5828M	5847M	5866M
E	5705M	5685M	5665M	5645M	5885M	5905M	5925M	5945M
F	5740M	5760M	5780M	5800M	5820M	5840M	5860M	5880M
R	5658M	5695M	5732M	5769M	5806M	5843M	5880M	5917M
L	5362M	5399M	5436M	5473M	5510M	5547M	5584M	5621M