



DIGITAL HOSE END TIMER

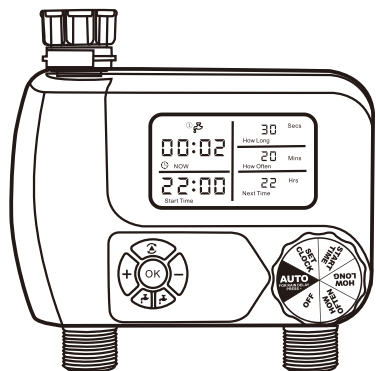

CONTROL BUTTONS

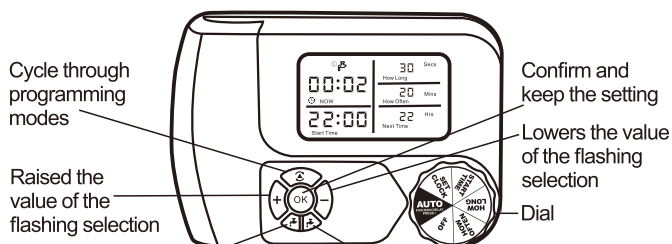

Cycle through programming modes

Raised the value of the flashing selection

change to first tube/ For instant watering of first tube/stop instant watering of first tube

change to second tube/ For instant watering of second tube/stop instant watering of second tube

Confirm and keep the setting

Lowers the value of the flashing selection

Dial

Maximum operating pressure: 80PSI For irrigation use only

INSTALLING THE BATTERY




2 x AA ALKALINE BATTERIES ARE RECOMMENDED

Remove the battery cover – keep battery compartment dry – install the 2xAA Battery by lining up the connections.

Place the battery inside the compartment and reinstall the battery cover.

NOTE: When battery is first connected, it takes up to 1 minute for the battery indicator to assess the battery strength.

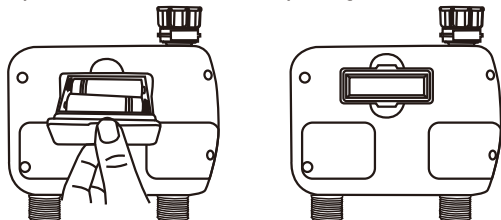

MAINTENANCE




Remove and clean the screen washer on inlet side of the timer every few months.

Remove battery if timer is not used for an extended time.

In freezing conditions, un-install the timer and bring it indoors to prevent damage.

HOW TO INSTALL

Attach the timer inlet to the outdoor faucet/spigot turning clockwise – hand tighten only. From the timer outlet connect a drip irrigation system or a garden hose.

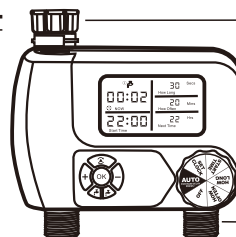

Timer inlet: 3/4 in. female hose thread with screen washer

Timer outlet: 3/4 in. male hose thread

A SETTING - DAY&TIME



Push left

until ①

show in screen

then we can start to set first tube program

Set the current time

Turn turntable to “SET CLOCK” to

set hours then push

to set minutes

Adjust using

to increasing or decreasing

After set, Press

to confirm and save the setting



B SETTING-START TIME



Set the first time watering

Turn turntable to “START TIME”

set hours then push

to set minutes

Adjust

using

to increasing or decreasing

After set, Press

C SETTING - HOW LONG



Set watering time


Turn turntable to “HOW LONG” set the watering time.

Adjust using


to increasing or decreasing.

(Watering time is 5-55seconds/per 5seconds,1-59minutes/per 1minute,1-99hour/per 1hour)

After set, Press

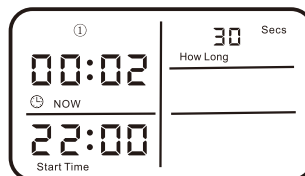

D SETTING - HOW OFTEN

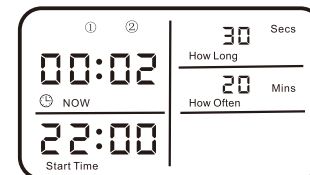

Set the watering frequency

Turn turntable to “HOW OFTEN” set the watering frequency.

Adjust using


to increasing or decreasing.

(Watering frequency is 1-59minutes/per 1minute,1-99hour/per 1hour)

After set, Press

After we finish the first tube setting. Then push right until show in screen. We can start to set second tube program

E MANUEL OPERATION

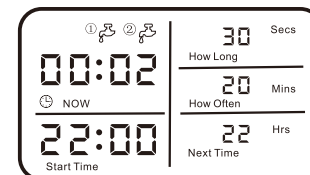

To instantly first tube water.

Push left

3seconds until

show in screen.

Then how long screen will flash. You can adjust water time by .

After setting. Press to confirm. then when time arrive, it will stop by itself.

The same operate of second tube.

When it is watering as automatic set. Press

3seconds, It can stop this time.

These operate will not influence the automatic setting.

F DELAY WATERING



Used to shut- down timer in winter or when it is raining. Set schedules will be retained. You must turn this feature off to resume programmed watering schedules.

Turn turntable to “ OFF”. Then screen information will missing. The all program will stop work. It will be no useful, even you press any button

Turn turntable to “Auto”, Then screen information will appear. The water timer will be working as you setting.