

Warranty card

 
Maintenance reasons: _____

Consumer Name: _____

Consumer contact information: _____

Consumer address: _____

Safety instructions and operation manual for charged electric mower

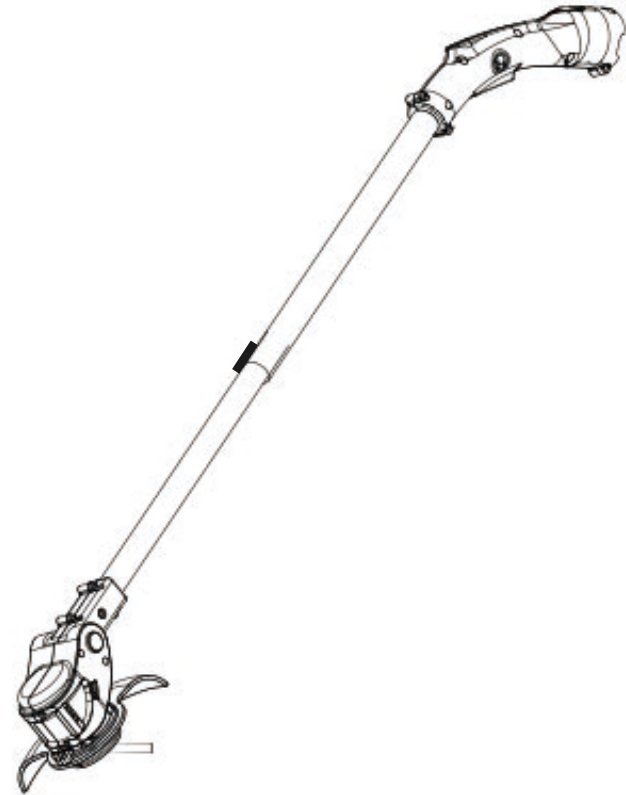


Before using this product, be sure to read through and fully understand this manual carefully before using, maintaining and maintaining the machine.
We reserve the right to change product specifications according to product improvement needs.

— . Safety matters

1. Prohibit children from using this equipment
2. Use equipment in the following environments: sufficient light, no one else in the mowing area
3. Grounds with steel pipes and many stones are forbidden to be used in rainy days.
4. Check the equipment carefully before use. If it is found that the equipment is damaged or worn out, first replace the spare parts and then use the equipment.
5. Don't wear loose clothes when using. At the same time, hair, hands and feet are far away from the running parts of the equipment.
6. It is forbidden to expose the equipment to rainy days or humid places so as to prevent water from entering batteries and motors from causing damage.
9. The power supply must be disconnected when unattended equipment, obstacle clearance, abnormal vibration of equipment and blade replacement are needed. Wait until the blade stops working completely before doing other operations on the equipment.

 Safety self-locking

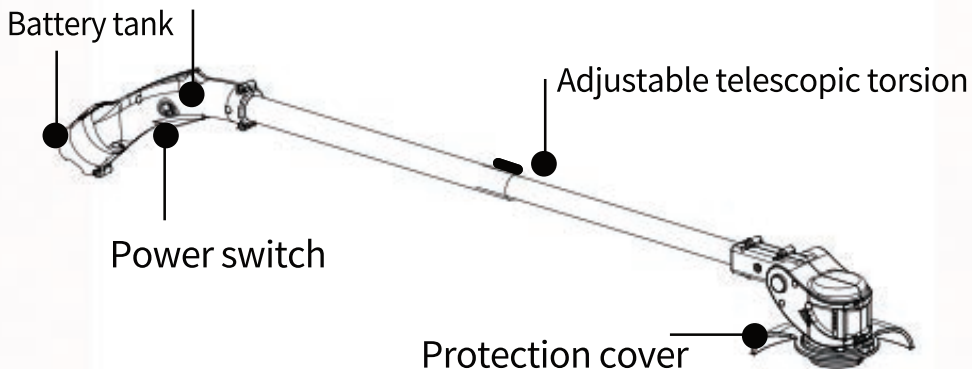

Model: YY-GCJ00 charging time: 30/1 hour
Material: Steel pipe/aluminium pipe, ABS engineering plastics
idle speed: 18000 rpm
Battery: 12 volt lithium battery no-load time: about 2 hours/3 hours
Standard accessories: batteries, chargers, blades

! This machine is suitable for family use, only suitable for mowing grass in garden lawn.

≡ . Operational Guidelines

1. Push the button down to adjust the length of the telescopic rod.



2. Sheath Installation

3. Angle adjustment of motor case head: press the circular button to adjust the shell angle:



4. Installation of blade: the slot used to fix the blade on the top of the lawn mower, insert the blade into the slot, align the screw hole, and turn into the slot. Screw can

