


# AirF7 Lite

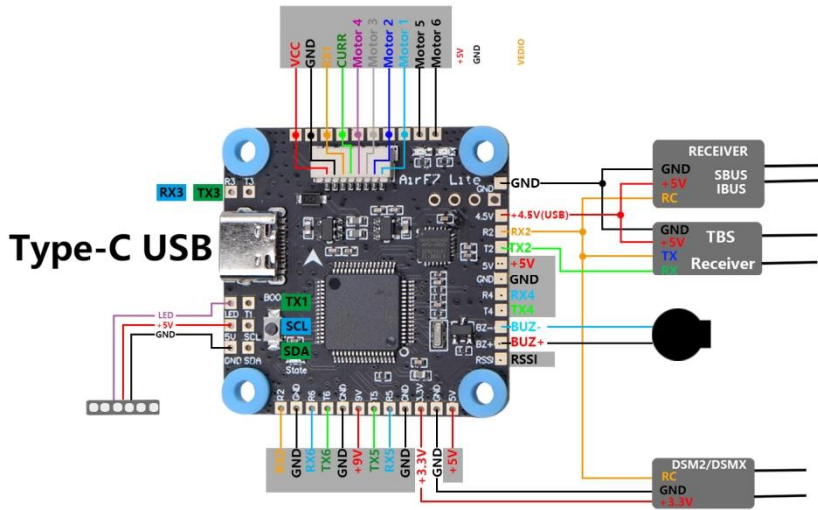

UART2  115200

When use SBUS/IBUS/DSM receiver, turn on Ports **UART2** as serial RX

