

Wireless Audible and Visible Alarm User Manual


Packing List

After you unpack the product package, check whether the product is intact and that all accessories are included and complete. The following figures show the items that should be contained in the product package.





Appearance and Components Product appearance

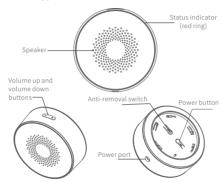

Product Features

- Generates visible alarms and 95 dB audible alarms.
- 2. Monitors the voltage and reports low voltage alarms.
- Periodically sends online reports to the gateway.
- 4. Uses a surveillance-dedicated anti-removal design.
- Supports wireless transmission and is easy to install.
- 6. Uses excellent flame-retardant materials for the cover, which is also radiation-resistant and heat-resistant.

Power-On and External Power Supply

- 1. When the product is powered on for the first time, the status indicator will be on for 3s.
- 2. To power the product on or off, press and hold the power button for 2s to 3s.
- 3. To make the product enter the network configuration mode, press and hold the volume up and volume down buttons simultaneously for 5s.
- 4. To make the product exit the network configuration mode, press and hold the volume up and volume down buttons simultaneously for 5s to 10s.

Press and hold the volume up and volume down buttons simultaneously.



Note:

When the product receives alarm information from the gateway, the status indicator will blink and the buzzer will generate an alarm sound. To clear the alarm, send an alarm clearance message to the gateway through the app.

Basic Functions

- 1. Press and hold the volume up and volume down buttons simultaneously for 5s to make the product enter the network configuration mode. During network configuration, the status indicator will blink. If network configuration is successful, the status indicator will be steady on for 3s. If network configuration fails, the status indicator will turn itself off.
- 2. When the buzzer generates an audible alarm, press and hold a volume button to adjust the buzzer's alarmsound volume
- 3. Under normal conditions, the anti-removal switch is connected. If the product is removed the anti-removal switch will be disconnected and an alarm will be generated. To clear the alarm, press the anti-removal switch three times or send an alarm clearance command through the app. When the anti-removal switch is connected, the product will enter the alarm state automatically. 4. Status indicator
- When the product is powered on, the status indicator will be steady on for 3s and the buzzer will beep twice.
- If the battery voltage is decreased to 3.2 V, the status indicator will blink twice at a 20s interval. When the product is powered off, the buzzer will beep once.
- During network configuration, the status indicator will blink.
- If network configuration is successful, the status indicator will be steady on for 3s and then off. If network configuration fails, the status indicator will turn itself off.

Installation Position and Precautions

- 1. Install the product on an indoor tile, gypsum wall, or painted wood.
- 2. Building materials, such as reinforced concrete, will shorten the wireless communication distance.



Product Installation

Add the product to the gateway as an accessory based on the gateway user manual.

1. Rotate the mounting base counterclockwise to remove it from the



2. Power on the product.






3. Use expansion screws or a 3M sticker to fix the mounting base on a wall. Rotate the product clockwise into the mounting base.

If you use a 3M sticker, ensure that the wall surface is smooth and even. Clean the surface before mounting to prevent the product from falling



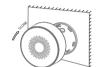

4. Use a power adapter to connect the product to the power supply.



Technical Parameters

Wireless Technology	ZigBee
Working Voltage	5 V (power adapter)
Transmission Frequency	2.4 GHz
Working Temperature	-10°C to +55°C
Built-in Battery	3.7 V lithium battery
Standby Time	Over 24 hours
Relative Humidity	< 90%
Dimensions	Φ80 mm x 34.5 mm

Toxic or Hazardous Substances or Elements of this Product

Toxic or Hazardous Substances or Ele			ces or Eleme	nts		
Component Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr (VI))	Polybrominated biphenyls (PBBs)	Polybromina diphenyl ett (PBDEs)
LED	0	0	0	0	0	0
PCB	×	0	0	0	0	0
Cover and other components	×	0	0	0	0	0

This table complies with SJ/T 11364.

- O: indicates that the toxic or hazardous substance amount contained in all homogeneous materials of a component does not exceed that
- stipulated in GB/T 26572. X: indicates that the toxic or hazardous substance amount contained in at least one of the homogeneous materials of a component exceeds that stipulated in GB/T 26572.

Warranty Certificate

Warranty policy:

- 1. If the product has quality problems within 15 days of the payment date, you can apply to replace the product with one of the same
- 2. If the product has quality problems within 12 months of the payment date, you can apply to have the product repaired.

What is not covered under this warranty:

- 1. The product owner has no warranty certificate or the warranty service has expired.
- 2. Damage caused by improper use, maintenance, or storage
- 3. Damage caused by disassembly and repair without Tuya's
- authorization
- 4. Damage caused by force majeure 5. Normal discoloration and wear after the product has been used

User Form

User information (Specify real information. Tuya promises to use the information only for after-sales services.)

Name

one number		Phone number	
nail		Email	
		Zip code	
		Address	
oduct information	1	Product inform	ation
ame	Model	Name	Mode
	Product SN		Produ
rvice O Return	○ Replace ○ Repair	Service ORe	turn 🔘 Re
ult symptoms		Fault symptom	s
		Handling date.	
aintenance persor	nnel signature	Maintenance p	ersonnel si



Vendor Form

Name

User information (Specify real	information. Tuya
promises to use the information	only for after-sales
services.)	

Email _		
Zip code		
Address		
Product	informatio	n
Name		Model
Color		Product SN
Service	○ Return	○ Replace ○ Repair
Fault syn	nptoms	
Mainten:	ance nerso	nnel signature