
CP-F56 (智能夹)单色单面折页说明书-73*105mm-128G铜版印刷

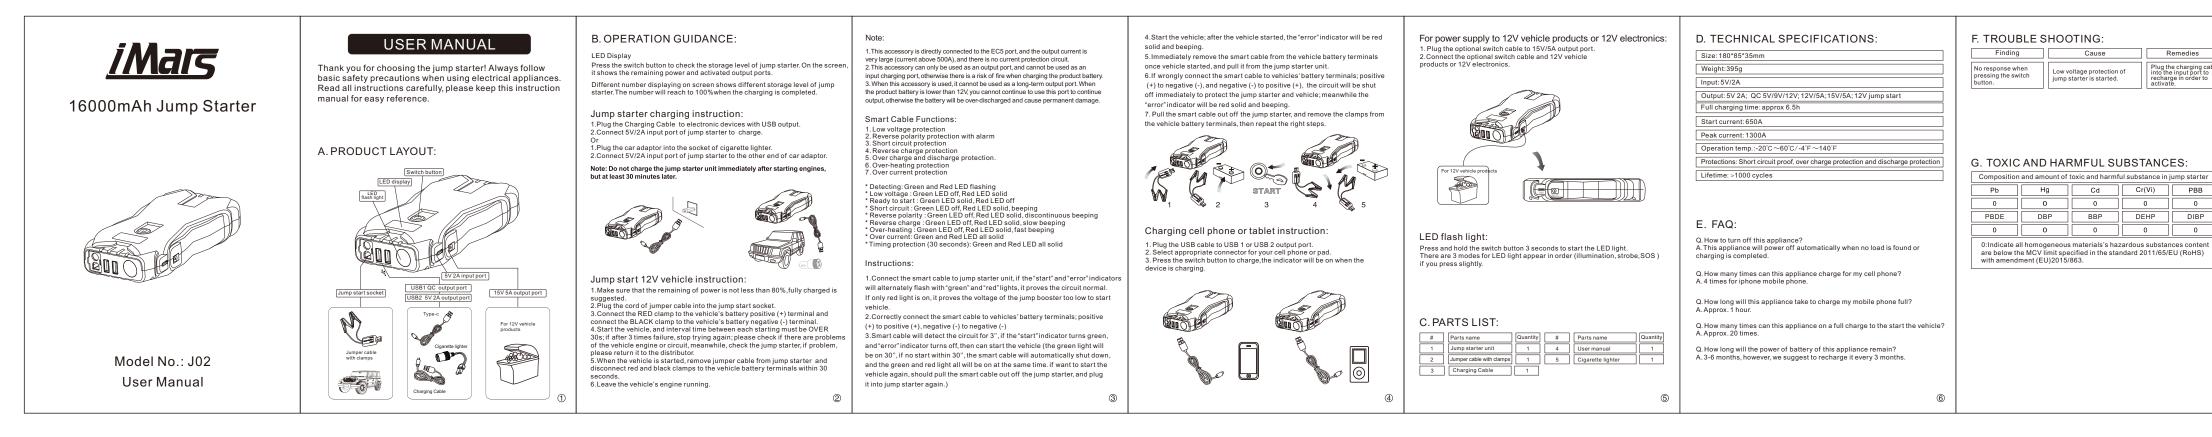

H. WARNING:

Remedies

Plug the charging c

recharge in order to

0	Do not al
0	Do not in
0	Do not o
	presence
0	Do not m
	may repa
0	Do not ex
0	Do not st
0	Charge of
0	Charge of
0	Under ex
	tiquid off
	the batte
	water an

1. DO remove the jump starter unit from the vehicle within 30s. 2. DO NOT connect the two clamps. Otherwise, it may be dangerous! 3. DO NOT disassemble the host. Otherwise, it may be dangerous!

Always take care when using the appliance

- This appliance is not intended for using by young or infirm persons without supervision.
- Do not use as a toy.
 - allow the appliance to become wet.
 - mmerse the appliance in water .
 - operate the appliance in explosive atmospheres, such as in the
 - ce of flammable liquids, gases or dust . nodify or disassemble Jump starter. Only a suitably qualified tech
 - pair this unit.
 - expose the appliance to heat .
 - store in locations where the temperature may exceed 70°C.
 - only at ambient temperatures between 0°C- 60°C.
 - only using the charger provided with the appliance .
 - extreme conditions, battery leakage may occur. Carefully wipe he
- If using a cloth and avoid skin contact when you notice liquid on eries. In case of skin or eye contact, rinse immediately within clear water and seek medical attention.
- At the end of its useful life, discard the appliance with due care for our environment.

I. WARRANTY INFORMATION:

1. We offer a limited warranty for this product against any defects in material and workmanship for a period of 12 months since the date of the factory. The conditions of the warranty are as follows.

2. The warranty is only valid upon presentation of the original receipt (from dealer/retailer) by the original purchaser with the product to be repaired or replaced

3. The warranty is invalid if the serial number, date of purchase and label has been removed.

4. The warranty does not cover damage or product failure resulting from normalwear and tear, physical abuse, improper installation, modification or repairs by unauthorized third parties.

5. We do not assume responsibility for any loss or damage incurred during shipment or as a result of a force majeure.

6. We are not liable for any incidental or consequential damages arising from the use or misuse of the product.

7. All warranty claims are limited to repair or replacement of defective product and at the sole discretion of us.

8. If we repair or replace the product, the product will be covered for the remaining time of the original warranty period. Repair or replacement may involve the use of reconditioned units which are equivalent in funcion Replaced part or product becomes the property of us.

9. Consumable components such as batteries and accessories are not covered by the warranty.



