



LINK EVERYTHING FOR CAT'S LIFE
智联万物 为猫而生



 
Website : www.catlinks.cn
Brand owner : Shanghai Lianchong Intelligent Co.,Ltd
Add : No. 800, Naxian Road, Pudong New District, Shanghai

CATLINK YOUNG Automatic Cat Litter Box

User Manual

*Please read the Manual carefully before use
and keep it properly*

- Note:**
1. Make sure that you place the litter box on a solid level floor.
 2. Avoid placing the litter box against a wall or any other object.
 3. Avoid moving or touching the litter box when it is connected to an electrical power supply

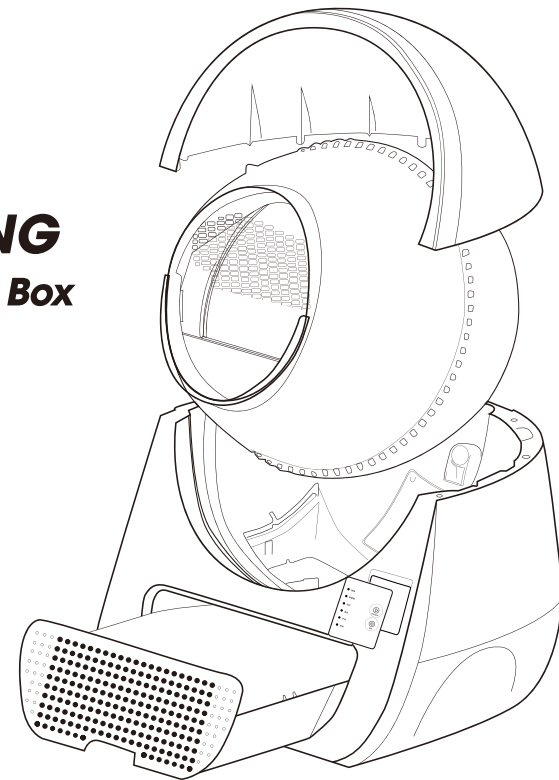

v8-20200709

User Manual

Contents

<i>Packing List and Notes before Use</i>	03
<i>Control Panel Description</i>	04
<i>Button Functions</i>	05
<i>Mode Description</i>	06
<i>How to Set Delay Time & Control Panel Indicator Status Description</i>	07
<i>Cat Sensor</i>	08
<i>Trash Box Cleaning Warning</i>	09
<i>Cleaning and Other Notices</i>	10
<i>Safety Performance</i>	11
<i>Warranty Terms</i>	12
<i>Non-Warranty Terms</i>	13
<i>Product Specification</i>	14
<i>Hazardous Substances Table</i>	15
<i>Warranty Card</i>	16

Packing List and Notes before Use.

Packing List

- Automatic Cat Litter Box x1
- Power Adapter x1
- Garbage Bag x1
- User Manual x1



Automatic Cat Litter Box



Power Adapter



Garbage Bag



User Manual

Notes before Use (or Preparations before Power Supply Connection)

1. Put the litter box horizontally



*No objects on the bottom of the litter box.

Make sure that the lid is installed and the device is placed on a solid level floor.

2. Eliminate the disturbance



Do not lean against walls or other objects

3. Power on and do self-checking



Do not touch the litter box during self-checking (including pressing the button and pulling the trash box)

4. Put in the cat litter




*Press the Clean bottom to run for one turn after putting in the cat litter.

Use 4.5 kg of cat litter at most at a time (below the tick mark of ball cabin)

- Use bentonite cat litter only.
- Avoid putting your hands or other objects into the gaps of an operating device to prevent injury.

Control Panel Description

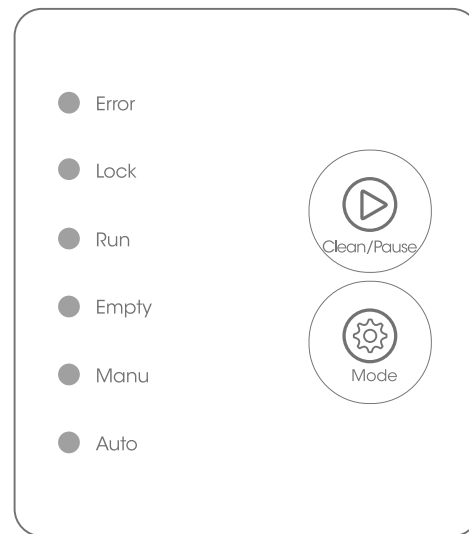

Button Functions

1. Mode button



The mode will be switched in order from Auto, Manual, Empty in a cyclic manner each time you press the button.

2. Clean/Pause button



Press the button to start or stop the operation.

Note: This button only works in the Manual mode and the Empty mode

3. Lock button



Press and hold the Mode button and the Clean/Pause button. Release the buttons when you hear a " Beep ". If the Lock indicator is on, the locking is successfully enabled. If you want to disable the panel locking, repeat the above-mentioned operations. If the Lock indicator is off, the panel locking is successfully disabled.

Mode Description

1. Auto mode

In this mode, if the device detects a cat's entering and leaving, it will automatically clean the ball cabin once after the delay time has passed. The delay time is 3 minutes by default.

2. Manual mode

In this mode, you can press the Clean/Pause button to clean the ball cabin. If you press the button again during the cleaning, the cleaning will stop. If you press again, the cleaning will continue.

3. Empty mode

In this mode, you can press the Clean/Pause button to empty the cat litter in the ball cabin. After the emptying is complete, you need to press the button again to restore the ball cabin. If you press the button during the emptying or restoration, the process will stop. If you press again, the process will continue until completion.

Note: It must be operated in the Manual mode when replacing or adding car litter. After replacement or addition, press the clean key to make the machine run for one turn before other modes can be switched to for normal use.

Note: Once the machine starts to rotate, only the Pause button can be operated, and the cleaning cycle cannot be terminated unless the self-checking is resumed after the power is cut off

How to Set Delay Time

Setting delay time: Firstly switch to Auto mode, long press Mode button, release after hearing the "Beep" sounds for 3 times; the indicator light flashes, enter the setting time state, press and then switch to the corresponding indicator light through the Mode button to select the delay time. After the selection is complete, long press the Mode button again, and release it when you hear the "Beep" sounds for 3 times. The Auto indicator is on, which means the setting is successful.

3 min: The Auto indicator blinking **5 min:** Manual indicator blinking **10 min:** Empty indicator flickers

Control Panel Indicator Status Description

1. **Auto** Auto mode indicator is on

The device is in the Auto mode. The device is available for a cat to use and will sense the cat's entering and leaving and operate automatically.

2. **Manu** Manual mode indicator is on

The device is in the Manual mode. The device is available for a cat to use and needs to be manually operated.

3. **Empty** Empty mode indicator is on

The device is in the Empty mode. The device is operating and not available for a cat to use until the emptying is complete.

4. **Lock** Lock indicator is on

The device's panel is locked when this indicator is on. The indicator will be off when panel is unlocked.

5. **Run** The Run indicator is on

The Run indicator will be on when the device is running, or off when it is stopped.

6. **Error** Error indicator is on

Constantly on: The device is in the cat-protecting status (the cat enters the ball cabin when the device is running). After the cat leaves, the device will continue running until the running is completed.

Constantly on: Anti-pinch device is triggered (the motor stops working). After confirming that the cat is safe, you can press the Clean/Pause button to cancel the cat protection status.

Blinking: The trash box is full, please empty the trash box..

Note: *If no indicator lights on after the device is powered on, please contact the customer service to help to handle it.*

Cat Sensor

- It can detect a cats entering and leaving the ball cabin.
- In the Auto mode, the device will automatically start cleaning after the cat leaving and the set delay time has passed. The countdown will be restarted if the sensor detects a cat during the countdown.

Note: *The sensor will only be triggered when the cat' s weight is 1.5 kilogram or heavier. Therefore, this device does not apply to cats that weigh less than 1.5 kilogram.*

Trash Box Cleaning Warning

- There is an infrared sensor on the side of the trash box to detect whether the trash box is full. When the trash box is full, the error indicator will blink
- Each time the ball cabin rotates to the initial position, a detection will be performed. It can continue to run for 15 times after the first detection of the flashing of the full trash box Error indicator, and the machine can only be started after cleaning the trash box. Please clean up as soon as possible during this period to prevent the poop from blocking the ball bin.

Note: To ensure optimal effects, it is suggested that the activated carbon deodorization cotton be aired or replaced regularly. It should be exposed to the sun once a month and is recommended to be replaced every three months. However the actual frequency shall be decided based on the number of cats and actual conditions.

Note: Power must be cut off when taking out the trash box and replacing the garbage bag.


Cleaning and Other Notices

Lid The lid can be washed with water

Ball cabin It can be removed and washed with water directly (no soaking). It should be dried before re-installation.

Base Not washable. Wipe with wet wipes

Trash box Take out the filter cotton, wash trash box with water and dry it before re-installation

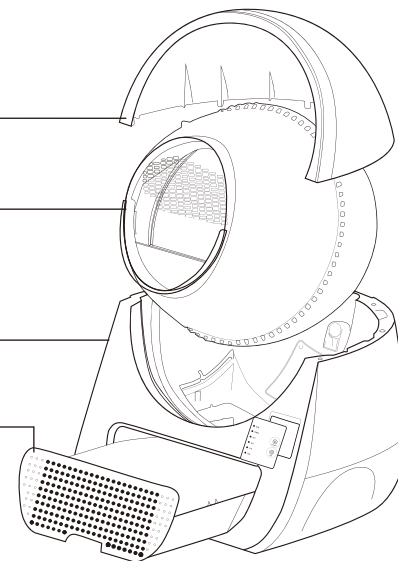

Other Notices

- Plug or unplug the socket directly for powering on/off. Do not frequently plug and unplug the device power connection.
- Do not drag or touch the device when it is powered on.
- Do not drag the device. Please grasp the concave handles on both sides of the bottom to move it.

Safety Performance

1. Accidental cat entering

If the cat sensor detects a cat's entering the device during cleaning, the ball cabin will stop spinning until the cat leaves.

2. Anti-pinch design

To best ensure cat safely the device has an anti-pinch design. If the anti-pinch function is triggered during device operation, the ball cabin will stop spinning immediately. Then spin in the reverse direction and stop again. Wait for someone to confirm that the cat is safe and press the Clean/Pause button, and the device continues to run.

3. Spinning pause design

If the device suffers an external force or is hit by an object with a force of over 1.5 kilogram during operation, the ball cabin will stop spinning until the force is removed.

Warranty Terms

- Non-artificial functional damage to the product is entitled to warranty services if the product is still under warranty. If the product has quality issues within seven days of purchase, the buyer can have a full refund of the invoice price or replace the product with a new one of the same model and specifications.
- If the buyer applies for replacement or return within 7 days without reasons. Ensure that the products and accessories are complete and there is no cat litter in the machine and the package without any breakages, scratches or damage that may affect second-time sale.
- If the product has quality issues within 15 days of purchase, the buyer can replace the product with a new one of the same model and specification. For returned products under warranty our company will have them inspected by authorized service personnel and buyer can choose to repair; refurbish or replace the products. However, replaced parts will not returned to the buyer. If no faults are found after inspection, the products will be mailed back.
- The warranty period of this product is one year.

Non-warranty Terms

Warranty services do not cover the following (including but limited to):

- The related invoice is missing or the warrant expires.
- Damage is caused by force majeure, such as fire, flood and lightning.
- Damage is caused by improper usage, maintenance and custody based on the user manual.
- Damage is caused non-authorized service personnel.
- Color fading, wear and tear and consumption are caused by normal usage.
- The product cannot be used due to the consumers network problem.
- The power adapter returned for repair has obvious hardware damage, cracks, broken pins, deformation, cord damage, a broken cord, or exposed wires.

Such power adapter will not be repaired or replaced.

Note: If any of the above occurs, it is advised that you seek solutions with the responsible party or paid services or buy a new product.

Product Specification

Product Name	CATLINK YOUNG
Model	CL-03
Package dimensions	63*61*81 (cm)
Product Dimensions	60*58*71 (cm)
Machine material	PP plastic
Weight	10kg
Display	Led
Bottom	2
Input power	12V/2A
Rated voltage	12VDC
Rated power	Standby1W/Running5W
Ambient temperature	0-35°C
Weighing	✓
Cat's weight range	1.5-10kg

Hazardous Substances Table

Part Name		Hazardous Substances					
		Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybromi- nated biphenyls (PBB)	Polybrominat- ed diphenyl ethers (PBDE)
		0	0	0	0	0	0
Mechanical Parts	Lid/shell/wheel	0	0	0	0	0	0
	Silica gel button and belt	0	0	0	0	0	0
Motor		0	0	0	0	0	0
Circuit board/ Electronic components		0	0	0	0	0	0
Cable		0	0	0	0	0	0
Battery cell/shaft		0	0	0	0	0	0
Accessories (manual, nameplate, packaging bag and feather)		0	0	0	0	0	0
<p>This form is compiled in accordance with SJ/T11364-2014</p> <p>0: It means that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T26572</p> <p>X:It means that the hazardous substance contained in at least one of the homogeneous materials of the part exceeds the limit requirement specified in GB/T26572</p>							

Warranty Card

If the device needs to be sent back, please fill in this card and cut it out and send it back together.

Customer Information	Product Name	CATLINK YOUNG Automatic Cat Litter Box
	Shop Name	
	Customer ID	
	Customer Tel	
	Purchase Date	
Maintenance Information		

