




便携式外音电子鼓

使用说明书

2个鼓踏:(含1个踩镲,1个底鼓) 2.12首示范曲,7组鼓组,9组伴奏 3. 音量控制:9级 4. 速度控制:16级 5. 可以录制打击曲并播放 6. 音频输入接口,可接手机,IPAD,电脑等音乐格式输入的电子设备 7. 自带双立体声喇叭,可作音响使用 8.760X戏曲鼓:开机击打鼓面为戏曲音色 9.760L内置锂电池 1.全球首创便携式多功能外音电子鼓; 2.适合家庭娱乐, 朋友聚会和打鼓练习; 3.多种音色,模拟真实的打击鼓效果; 4.标准的鼓面配置,踏板扩展接口,带给您真实架子鼓的享受; 5.自带伴奏,示范曲,可自由调节播放速度,是您练鼓最佳学习工具; 6.自带录音功能,方便您随时随地记录您的音乐灵感; 7.自带2个高品质立体声喇叭,随时随地可以使用; 8.音频输入接口,可自由选择音乐歌曲来练习打鼓; 9.可外接耳机打鼓时就不会干扰到别人; 五、连接设备示意图 10.可外接音响,声音更震撼; 11.USB MIDI接口接电脑玩所有的Midi软件及电子鼓游戏(此功能仅 适用于带MIDI功能的产品,MIDI软件Sonar,Cubase,Nuendo, Ezdrummer)

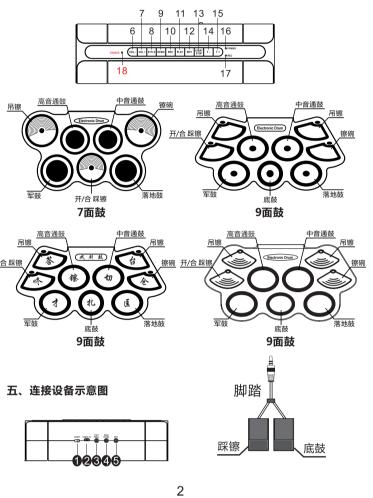



9	DEMO	示范曲: 可循环切换
10	REC	录音:按下REC键录音灯闪烁可录制
11	PLAY	播放录音
12	RHY	播放伴奏
13	START/STOP	开始/停止伴奏,录音,示范曲
14	T-	速度-:示范曲和伴奏的速度控制
15	T+	速度+:示范曲和伴奏的速度控制
16	POWER LED	电源指示灯, 插上电源灯亮
17	REC LED	按下录音键,录音指示灯闪烁,即可录音
18	CHARGE	充电指示灯,仅适用锂电池版本

#### 七、踏板输入


1,本鼓支持一个HI-HAT踏板和底鼓踏板作为触发源,两个踏板均为 单声道输入; 2,当脚踏没有接入FOOT PEDAL接口时,敲打HI-HAT鼓盘发CLOSE (闭镲)的声音;当把脚踏插头接入本鼓背面的FOOT PEDAL接口 时,踩下踩镲踏板时,敲打开/合踩镲鼓盘时发CLOSE(闭镲)的

声音;没有踩下踏板时,敲打鼓盘发OPEN(开镲)的声音。 3,将脚踏插入本鼓背面的FOOT PEDAL接口时,其中一个脚踏为底鼓 功能,踩下脚踏,发出底鼓声音,松开不发声,此款鼓如需底鼓功能 必须接踏板,踩下带有底鼓功能的踏板才可使用。

# 八、开关功能

拨动 "ON/OFF"电源开关钮至 "ON"状态,此时LED电源灯亮表示 本鼓已开机;

- 1,只要您将本鼓的USB接口与计算机的USB接口妥当连接,便能在
- 2,使用USB数据传送功能,需要完成下述操作; \* 使用标准的USB连接线,连接计算机的USB接口与本鼓的USB接口
- \* 支持WIN XP/ WIN7 /WIN8 and Mac OS X系统免驱,支持热插拔; \* 兼容Sonar, Curbase , Nuendo, Ezdrummer等所有主流音序器 及VST/VSTi插件,支持电脑及平板各种MIDI电子鼓游戏;

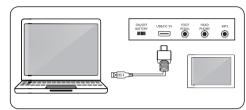

注:在使用过程中,1分钟无任何动作,自动进入休眠状态,任意敲打鼓面即可唤醒.


#### 十、简单故障处理

故障现象	故障原因	排除方法		
源指示灯不亮	外接电源未插好	请检查电源线连接正常		
音异常	外接电源电压不足	更换电源		
踏无反应	插头未插到位	需完全插到位或旋转一下		
	插头未插到位	需完全插到位或旋转一下		
机或音响无声	连接插孔不正确	检查插孔是否插对		
	音响音量没有调好	调节好外音设备音量		
5				


2.请不要将本电子鼓置于过热或灰尘过多的地方工作。 3.在摆放时,请注意与收音机。电视机等强电磁仪器保持距离,以免产 牛干扰。 4.勿将重物放在电子鼓机上,避免冲击碰撞。 5.请不要将本电子鼓放在潮湿或过热的地方,以免损坏。 6.请不要将本电子鼓以90°度或大程度的折叠挤压,以免损坏。 7.不要将尖锐的物件与本电子鼓共存放或碰撞,以免损坏。 十二、产品规格: 759: 442(长) \*318(宽)\*62MM 重量: 760G 760: 480(长)\*303宽)\*62MM 重量: 820G 760X: 480(长)\*303(宽)\*62MM 重量: 820G 760L: 480(长)\*303(宽)\*62MM 重量: 820G 762: 483.3(长)\*303.3(宽)\*62MM 重量: 1171G 2.760L输入电压: U S B DC 5V/1000mAh 3.材质: 硅胶

1.在使用外部设备输入音源时请注意文件的格式。

十一、注意事项

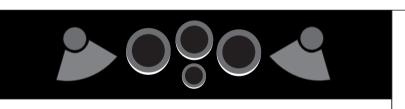

**ELECTRONIC DRUM Operating Manual** 

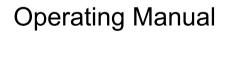





Thank you sincerely for buying our hand roll drum kit. We are specialized in developed and manufactured hand roll drum kit and piano for over 15years. This hand roll drum kit is a handy size product which very easy to carry, in order to have a best experience effect, please pay attention to the operation, wish you enjoy it, thanks again for your cooperation!

电子鼓\*1,脚踏\*1,鼓棒\*2,说明书\*1,USB线\*1,3.5音频线\*1,电源适配器\*1

I.Specification: 7 drum pad: (include crash cymbal, ride cymbal, open/close hi-hat, snare, high tom, low tom, floor tom) 9 drum pad: (include 2 crash cymbal, ride cymbal, open/close hi-hat, snare,

base drum, hìgh tom, low tom, floor tom ) 2 drum pedals: (include 1 hi-hat, 1 base drum) 2. 12demo songs,7drum sounds,9accompaniment

3. Volume Control: lever 9 4. Speed Control:lever 16

Could record and play 6. Audio input, match your cellphone, tablet, PC and other device which could support music.

7. With speaker ,using as stereo 8. Drama drum kit:open and click the pads is drama tone 9.760L with Li\_battery

## II.Features:

1. The world's first Multinational portable, and professional drum 2. Fit for family entertainment/friends gathering/and drum practice

3. Multi-sounds, simulated the really drum kits 4. The standard drum configuration and the extension interface for pedal could bring you real game experience about drum


5. Include accompaniment/ demo songs, control the playing speed free, this is the best choice for drum learning 6. Include recording function, get all your inspiration in record easily


7. With two high-quanlity stereo speakers 8. audio input, chose any music you like to practice 9. Could connect with your earphone will not disturb others when you using this. 10. Support to connect a external spekaer, the sounds will be much shocking


11. USB MIDI port, connect PC to play with all the Midi software and electronic drum games, MIDI software like: Sonar, Cubase, Nuendo, Ezdrummer (this only work if the model with MIDI function) III.Accessories:


Drum Kits\*1, Pedals\*1, Manual\*1, Usb Cable\*1, 3.5 Audio Cable\*1, Drum Stick\*2 USB Adapter\*1


IV. The appearance of drum kits

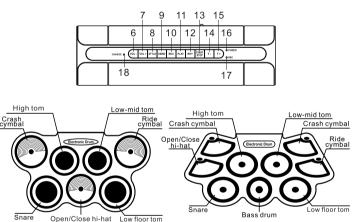


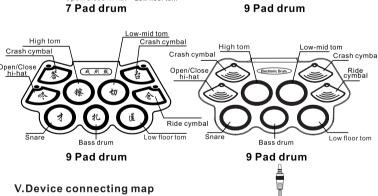

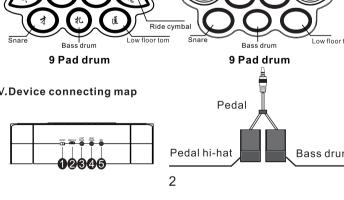

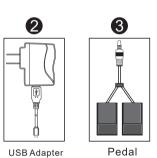

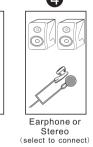

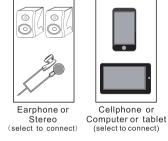

## VI.Function Description

No.	Name	Function Description
1	ON/OFF	Battery power switch
2	USB/DC 5V	USB port for power, by AC adapter or power bank
3	FOOT PEDAL	Pedals for Hi-Hat and Bass Drum
4	HEAD PHONE	Audio output interface
5	Мр3	Audio input interface
6	VOL-	Volume down
7	VOL+	Volume up
8	STYLE	Recycle different drum sounds
	•	

9	DEMO	Recycle demo songs
10	REC	Press "REC" ,when the LED light, the device could record
11	PLAY	Play the recording
12	RHY	Play accompaniment
13	START/STOP	Start to play/stop playing accompaniment the recording demo songs
14	T-	Control the playing speed of demo songs and accompaniment
15	T+	Control the playing speed of demo songs and accompaniment
16	POWER LED	Plug in the power adapter, the LED light
17	REC LED	Press "REC ",the LED light
18	CHARGE	Charging LED indicator, only for lithium battery version.

## VII.Pedal Instruction

- 1. This drum kits support one pedal Hi-hat and one bass drum as ,both of them were single channel input.
- 2. When the pedal doesn't plug into the "FOOT PEDAL" jack, Sounds will be Close hi-hat if you click "Open/close Hi-hat"; When you inject the pedal in jack , sounds will be Close hi-hat if you step on the pedal; Sounds will be Open hi-
- hat while you step off. 3. Once you inject the pedal in the side FOOT PEDAL jack, one of the pedal has "Bass drum" function, the other one is functioned for "Pedal Hi-hat"; If you need Bass drum when you playing , you have to step on the specified pedal.
- Mark: The pedal can not use mutually, for each one has its specified function

## VIII.POWER ON/OFF

1. When you Switch on, you can tell from the LED light that this drum can be used. 2. After you switch on the drum kits, you can change the volume as you need.

#### IX.USB MIDI function (only work if the model with MIDI function) 1. When you completely connecting the usb cable between the drum kits and computer ,the MIDI Data could transmit well 2.If you need transmitting USB Data ,you should finish below step carefully

\*Please use standard usb cable \*Compatible with Win XP/Vista/7/8 and Mac OSX, drive free and hot plug supporting. \*Compatible with Sonar, Cubase, Nuendo, Ezdrummer, Etc, major Sequancer sofrware and VST/VSTi and all kinds of MIDI Drum kits games.

Note: The drum kit will enter into sleep situation without any action after 1 minute, wake up it by playing any pads.

## X.Troubleshooting

Failure phenomenon	Reason	Solution
Power indicator does not work	External power adapter is not plugged well or USB cable is not isserted well	Please check the external power cable
Abnormal sound	External power adapter Voltage shortage	Please Change another external power adapter
Pedal does not work	The interface is not connecting well	Please completely plug it
No sounds (Headphone or audio)	1.No power supply 2. volume is not adjusted well 3. earphone not connected to the right interface of our drum	Please check the level of VOL and make sure all the interface are connected well

# i.Cautions: 1. Do not use the drum kit in a wet, high temperature or dusty area

2 .Keep the drum kit level when in use, Do not place the drum kit near areas with strong electric waves 3 .Do not place the heavy objects on the product, to avoid impacting of the collision 4 .Do not pull or twist the body or drum kits with 90, it may damage the function, 5 .Do not tamp with the wiring of this product with a cutter or other sharp tools,it may damage the functions, 6 .When rolling up the drum kits after use ,do not roll up too tight.

# ii.Specification:

3.Material:Silicone

1.Product size 759:442(L)\*318(W)\*62MM Weight:760G 760:480(L)\*330(W)\*62MM Weight:820G 760X:480(L)\*330(W)\*62MM Weight:820G 760L:480(L)\*330(W)\*62MM Weight:820G 762:483.3(L)\*303.3(W)\*62MM Weight:1171G 2.760L Input:USB DC 5V 1000mAh