

s of tone,128 kinds of rhythms

Drum kit function.
 Sustain and vibrato function
 ¹4aster volume control key,tempo control key.

ne/speaker output interface.

/idi Out,USB 5V power adapter.

II Icons specfication of panel function



1	8.8.8.	LED display	18	RHY+	RHY+
2	Tone+	Tone+	19	RHY-	RHY-
3	Tone-	Tone-	20	Program	Program
4	PLAY	Play	21	Synch	Synch
5	REC	Record	22	Vibrato	Vibrato
6		Start/Stop	23	Sustain	Sustain
7	Demo	Demo	24	٠	Power Indicator
8	Insert	Insert	25	î	Volume Control+
9	Single	Single chord	26	•	Charging Indicator
10	Tutorial	Tutorial	27	A	Volume Control-
11	Fingered	Fingered chord	28	Drum Kit	Drum Kit
12	Δ	Metronome	29	USB charge	USB charge
13	\$	Tempo Control+	30		MIDI OUT/USB 5V
14	Reset	Reset	31	Ô	Headphone/Speaker interface
15	0	Tempo Control-	32	Õ	Sustain input interface
16	Trans	Trans	33	OFF/ON	Power ON/OFF

gs for this tone number is "000",press "Tone+/Tone-" to choose what you li erent tones from 000 to 127 directly by press the numbers.

Il automatically enter into the playback mode ,LCD with number"000", s at the basic rhythm when it is in rhythm mode.

could play piano with demo so

• Press the "Tutorial"to enter into the function.

 Press "REC", when it indicate "REC" at LED display, you can record now.
 "Press" AY" button, LED display "REP". n it is in "PLAY" mode, user could prss " ▶]] " button to stop i u need record again, every settings will be back to initial.

'ly records rhythm and edit your beats when press button "Program". program function stoped and play your beats which you have just now. stop playing beats.

ing " (▶ / ◀))" to control volume which you need, the initial seetting is level 12, and the MAX volume i

• Press" Vibrato" to star this funtion, and press it again , function stoped.

ess "Sustain" to start this function, and press it again, function stoped.

• Press"Drum Kit", all the sounds will change into precussion sound, and stop it when you press it again.
11 Single/fingered chard

• Press "Synch" button, LED display "ON" to enter single/fingered mode, then press ">||"button, LED display "000", press "Single" button to start single chord, LED display "C01", or press "Fingered" button ort fingered chord, LED display "C02", Press ">||"button to start single chord, LED display "C01", or press "Fingered" button of the press ">||"button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button of the press ">||"button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button of the press ">||"button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "Fingered" button to start single chord, LED display "C01", or press "

Jnction:low range,61 keys(from C-f# interval total 19 keys), Jys(from A2-f# interval total 34 keys),play the coordinate chord with voice of the chord will change according the high or low of the kev Jser can choose different rhythm with single/fingered.

12.Tenpo Press" ☆ "and" → " to turn up and slow down the tempo.

13.MetronomeMetronome function control, press twice, function stop.

le if there is no action after 3minite, press any key can wake ι

ess "Reset" button, the piano will return to the default mode.

both for Flats and sharps, press "Trans" to choose, the LED will shows: 1,2,3 4,5,6,0,-6,-5,-4,-3,-2,-1 total 13 level.

 $_{
m /}$ applicable for bluetooth audio version)1.9 Bluetooth MIDI Func'

IV Accessory one:lists of tone

Tone Number	Name	Tone Number	Name
Т00	Acoustic Grand Piano	T35	Fretless Bass
T01	Bright Acoustic Piano	T36	Slap Bass 1
T02	Electric Grand Piano	T37	Slap Bass 2
Т03	Honky-tonk Piano	Т38	Synth Bass 1
T04	Rhodes Piano	Т39	Synth Bass 2
T05	Chorused Piano	T40	Violin
T06	Harpsichord	T41	Viola
T07	Clavichord	T42	Cello
T08	Celesta	T43	Contrabass
Т09	Glockenspiel	T44	Tremolo Strings
T10	Music box	T45	Pizzicato Strings
T11	Vibraphone	T46	Orchestral Harp
T12	Marimba	T47	Timpani
T13	Xylophone	T48	String Ensemble 1
T14	Tubular Bells	T49	String Ensemble 2
T15	Dulcimer	T50	Synth Strings 1
T16	Hammond Organ	T51	Synth Strings 2
T17	Percussive Organ	T52	Choir Aahs
T18	Rock Organ	T53	Voice Oohs
T19	Church Organ	T54	Synth Voice
T20	Reed Organ	T55	Orchestra Hit
T21	Accordian	T56	Trumpet
T22	Harmonica	T57	Trombone
T23	Tango Accordian	T58	Tuba
T24	Acoustic Guitar (nylon)	T59	Muted Trumpet
T25	Acoustic Guitar (steel)	T60	French Horn
T26	Electric Guitar (jazz)	T61	Brass Section
T27	Electric Guitar (clean)	T62	Synth Brass 1
T28	Electric Guitar (muted)	T63	Synth Brass 2
T29	Overdriven Guitar	T64	Soprano Sax
Т30	Distortion Guitar	T65	Alto Sax
T31	Guitar Harmonics	T66	Tenor Sax
Т32	Acoustic Bass	T67	Baritone Sax
Т33	Electric Bass(finger)	T68	Oboe
Т34	Electric Bass (pick)	Т69	English Horn

Tone Number	Name	Tone Number	Name
Т70	Bassoon	Т99	FX 4 (atmosphere
T71	Clarinet	T100	FX 5 (brightness)
T72	Piccolo	T101	FX 6 (goblins)
T73	Flute	T102	FX 7 (echoes)
T74	Recorder	T103	FX 8 (sci-fi)
T75	Pan Flute	T104	Sitar
T76	Bottle Blow	T105	Banjo
Т77	Shakuhachi	T106	Shamisen
T78	Whistle	T107	Koto
Т79	Ocarina	T108	Kalimba
Т80	Lead 1 (square)	T109	Bagpipe
T81	Lead 2 (sawtooth)	T110	Fiddle
T82	Lead 3 (caliope lead)	T111	Shanai
Т83	Lead 4 (chiff lead)	T112	Tinkle Bell
Т84	Lead 5 (charang)	T113	Agogo
T85	Lead 6 (voice)	T114	Steel Drums
Т86	Lead 7 (fifths)	T115	Woodblock
Т87	Lead 8 (bass+lead)	T116	Taiko Drum
Т88	Pad 1 (new age)	T117	Melodic Tom
Т89	Pad 2 (warm)	T118	Synth Drum
Т90	Pad 3 (polysynth)	T119	Reverse Cymbal
T91	Pad 4 (choir)	T120	Guitar Fret Noise
Т92	Pad 5 (bowed)	T121	Breath Noise
Т93	Pad 6 (metallic)	T122	Seashore
Т94	Pad 7 (halo)	T123	Bird Tweet
Т95	Pad 8 (sweep)	T124	Telephone Ring
Т96	FX 1 (rain)	T125	Helicopter
Т97	FX 2 (soundtrack)	T126	Applause
Т98	FX 3 (crystal)	T127	Gunshot

hythm Number	Name	Rhythm Number	Name
R000	80sPop	R035	American march
R001	16Beat pop	R036	March style
R002	8Ballad	R037	Tarante
R003	8Beat soul	R038	Funk soul
R004	70sRock	R039	Rock waltz
R005	Afro pop	R040	Piano bar
R006	Rap pop	R041	Jazz waltz1
R007	60sSoul	R042	Jazz waltz2
R008	70sSoul	R043	16Beat tune
R009	Funky soul	R044	Poka dance
R010	16Beat slide	R045	Waltz
R011	The twist	R046	Cha-cha
R012	British pop	R047	Rumba
R013	Hard rock	R048	Rock rap
R014	Fusion jazz	R049	Bullfight dance
R015	Funkslide	R050	Samba1
R016	Fusion slide	R051	Samba2
R017	Brisk rock1	R052	Tango1
R018	Brisk rock2	R053	Tango2
R019	Passionate rock	R054	Fox step
R020	Jazz rock	R055	Jazz waltz
R021	Fast gospel	R056	Argentine Tango
R022	Poka rock	R057	Italian Tango
R023	Rock billie	R058	Bossanoval
R024	Rock roll	R059	Shuffle1
R025	Rock cha-cha	R060	Shuffle2
R026	Rock classic	R061	House
R027	Rock slide	R062	Merengue
R028	Rockpop	R063	Salsa
R029	Early boca	R064	Disco Latin
R030	Росарор	R065	Thailand
R031	Blues1	R066	Reggae1
R032	Blues2	R067	Salsa
R033	Blues3	R068	Indian improvisatior
R034	Popular waltz	R069	Merengue

Rhythm Number	Name	Rhythm Number	Name
R070	Polka	R099	Disco foxtrot
R071	16Reggae	R100	Euro soul
R072	Slow rock1	R101	Disco funk1
R073	Slow rock2	R102	Disco funk2
R074	Slow soul5	R103	Jazz samba
R075	Jorpo	R104	Disco Party
R076	Lambada	R105	Popular Samba
R077	Love ballad	R106	Club dance
R078	Plena	R107	Modern blues
R079	China	R108	Melancholy Foxtro
R080	Acid	R109	Mambo
R081	8Beat modern	R110	Disco soul
R082	Country folk	R111	Disco
R083	Love songs	R112	Cobmo
R084	Citypop	R113	Swing beat
R085	Electronic pop	R114	Krump
R086	Auditory folk	R115	Band marche1
R087	Piano Ballads	R116	Band marche2
R088	soul8.mid	R117	Band marche3
R089	Rock folk	R118	Big band1
R090	Slow and light	R119	Big band2
R091	Similar ballad	R120	Wild pop
R092	Majestic pop	R121	Southern jazz
R093	Kinetic1	R122	Popularjazz
R094	Kinetic2	R123	Jazz band
R095	Funk disco	R124	Jazz club
R096	Saturday night	R125	Habanera
R097	Twist	R126	Bachata1
R098	Euro beat	R127	Bachata1
I Accessory th	ree:name lists of demo		
Demo Number	Name	Demo Number	Name
D00	Jasmine	D15	Sweet honey
D01	Why are the flowers so red	D16	Susanna
D02	Butterfly Lovers	D17	Do-Re-Mi
D03	Entering a new era	D18	Moon River
D04	Girl of Alishan	D19	Mary has a little sheep
D05	Qinghai Tibet Plateau	D20	Hotels in the Pacific
D06	InThePlace PeachBlossom	D21	Crazy 1900
		7	

D07
D08
D09
D10
D11
D12
D12

indicator as follow

Cannot put battery into fire to avoid explosion. Must fix the battery right. Please connect the 5V power adapter on time when the battery runs out.
2. The hand-roll piano can be clean with soft and clean towel.
3. It should be rolled well after use.
4. Do not put the piano in hot and humid place.
VIII Instruction for the use of hand-roll piano

When using the piano, it should be put in flat place, and do not move it during playing or the normal function may be effected and damaged.
The piano cannot be rolled too tight when putting it away, in case the normal function of the key is damaged and the product life is shortened.
Do not put the piano in the hot and humid place. Do not put the piano in the hot and humid place. Cannot split any part of the piano. Cannot put the piano in the place with strong wave, in case some function is damaged.

Vox dance remix	D22	Family Restaurant
Liuyang River	D23	Johnny the surfer
Curvy Moon	D24	Sinbad hands
Childhood	D25	New paradise
Good days	D26	Happy birthday
Go home often	D27	Carmen
Night of grassland	D28	Short song
Radiant	D29	Jingle bells
	Liuyang River Curvy Moon Childhood Good days Go home often Night of grassland	Liuyang RiverD23Curvy MoonD24ChildhoodD25Good daysD26Go home oftenD27Night of grasslandD28

This piano use rechargeable lithium battery(1100MA),please check the working position of Charging LED

Charging state	Red light	Green light
	CHRG	STDBY
Charging	Light on	Light off
Fully charged	Light off	Light on
Battery misplaceed	Light off	Light off
Standby	Light off	Light off

IX Trobule shooting
If the sound is abnormal or the piano key is invalid, please press & to turn off, then press & again to
reactions the grining.

_____ 8 _____