 


DIGITAL PIANO

Operation Instructions

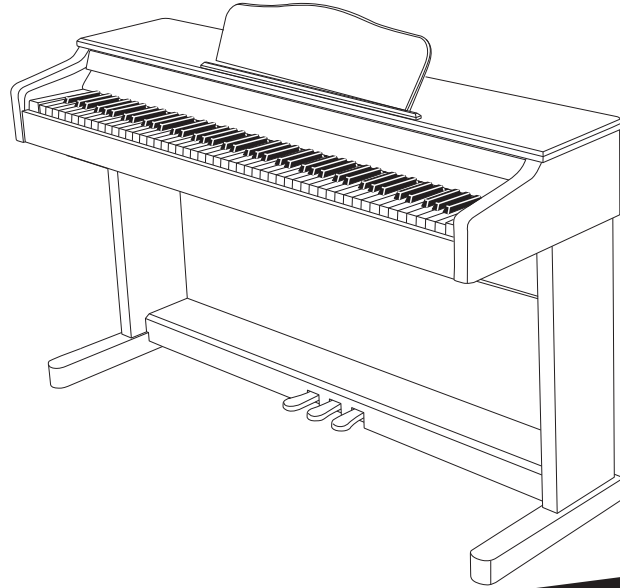

This product is subject to change without notice!

Thank you for choosing and purchasing this digital piano. This digital piano is elegant and exquisite, and it is the perfect combination of the latest electronic technology in the contemporary era.

- ◆ This manual must be read in detail before using this instrument.
- ◆ Please be sure to keep all user documents in good custody so that they can be consulted when needed in the future.

Using DREAM sound source


Its core uses the French DREAM top sound source, the digital sampling, brings the lifelike auditory experience for your performance.

88 progressive heavy hammer keys

The 88-key progressive lever hammer keyboard gives you the real touch of playing on the grand piano.

Headphone Jack

External double headphone Jack, can be easily played without affecting others.

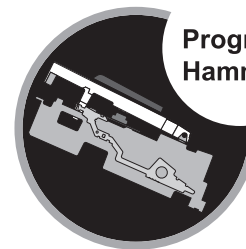


Progressive Heavy Hammer Keys

REMINDE:

This product is an electronic acoustic music product. It is normal that there is a little current sound in the horn (two speakers or one of them, or headphones) after power on.

Please keep away from "radio, television, antenna receiver, router, refrigerator, television, electrical appliances with motor and other RF electrical interference sources" during use.

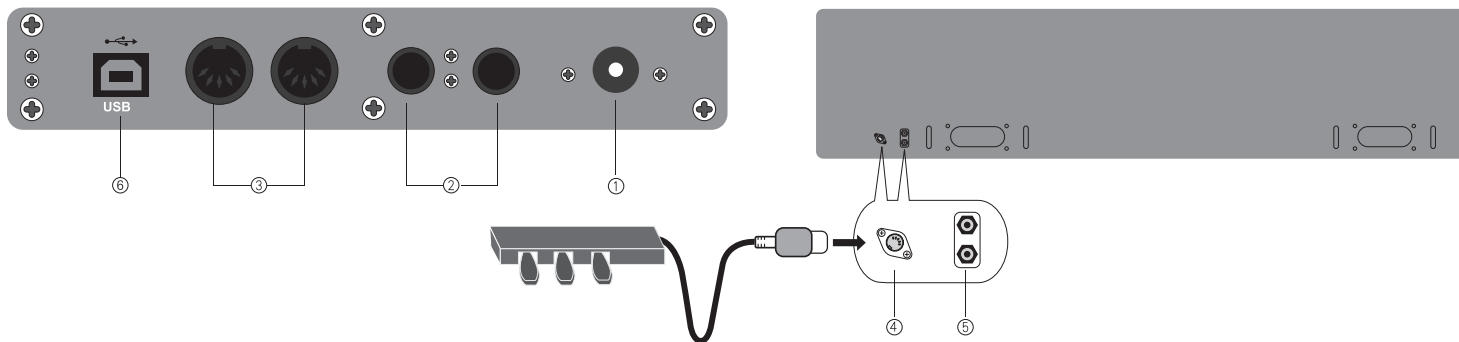

1 Power Cord Connection

1. When using, connect the power cord as shown in the figure, insert one end into the electrical socket in the operation panel at the bottom of the piano, and the other end into the 220V household power socket. (Fig. 1)
2. If you do not use this product for a long time, please pull out the power cord plug and keep it properly.

2 Audio input / output plug

1. Audio output socket can be connected to large speaker equipment. (Fig.2)
2. The audio input socket connects the external sound source to the electric piano for playback. (Fig. 2)

3 MIDI input / output socket

The MIDI interface of the digital piano can be used to interact with the music device with MIDI. Through the music software pre installed on the computer and tablet, we can learn or play the keyboard to perform, compose, store and other functions. (Fig.3)

4 pedal Jack


The foot pedal connector is located on the bottom left of the piano. Insert the pedal wire end plug into the circular socket at the bottom of the piano, and you can connect three kinds of pedal sound effect functions! The order is: weak tone, delayed sound, delayed sound. (Fig.4)

5 Double headphone Jack



The headphone jack is located on the bottom left side of the piano. Connecting headphones will automatically cut off the output of the built-in speakers of the electronic organ so that you don't bother others while playing. There are two headphone sockets in this product, which can be inserted into two headphones at the same time. (Fig.5)

6 USB Transport interface

Using the USB transmission interface to connect with the computer Through the computer installed Music software, to learn or play the keyboard to play, composition, storage and other functional operations. Edited music and built-in accompaniment to music software. It can be played by software connected to the digital piano or played by accompaniment music (Fig.6)

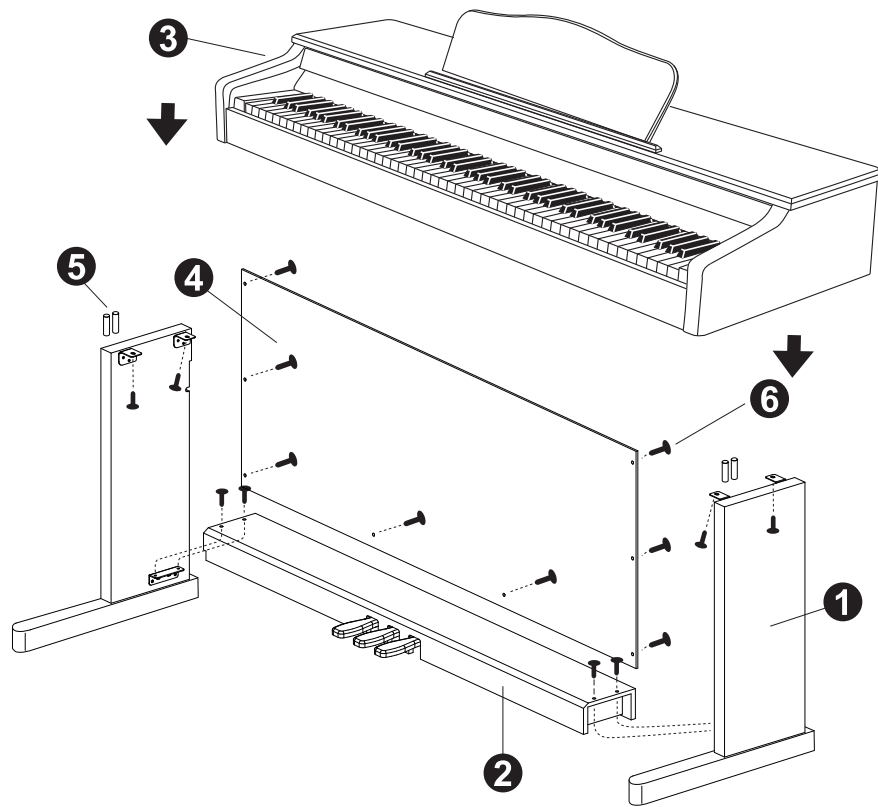

- 1** Left / Right Support Plate
- 2** Pedal Beam
- 3** Organ Body
- 4** Back Fixing Plate
- 5** Wood bolt
- 6** Screw

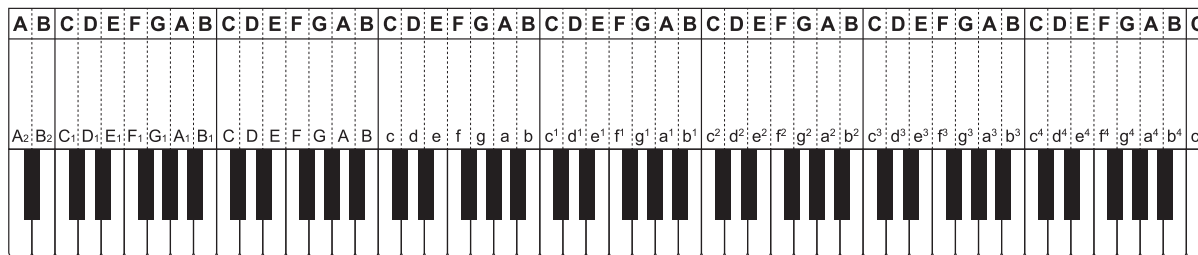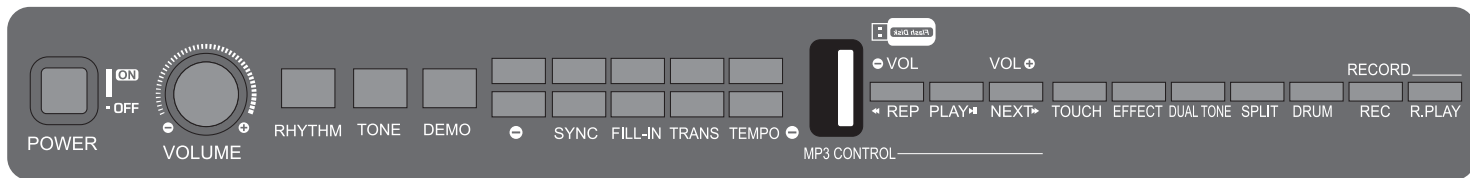

1 Power ON



Connect the power adapter to the power socket and turn on the power switch to operate normally. The default voice is grand piano.

2 Master Volume

Adjust the main volume knob on the control panel, turn the knob clockwise to increase the volume, and turn the knob anticlockwise to decrease the volume.

3 Tone Setting

1. This machine contains 238 kinds of voice colors.
2. The default voice is grand piano (000). Press the [voice] button, the display will change the voice through the [+ / -] button. (see Appendix 1 for timbre table)
3. Double click the voice to return to the piano voice.

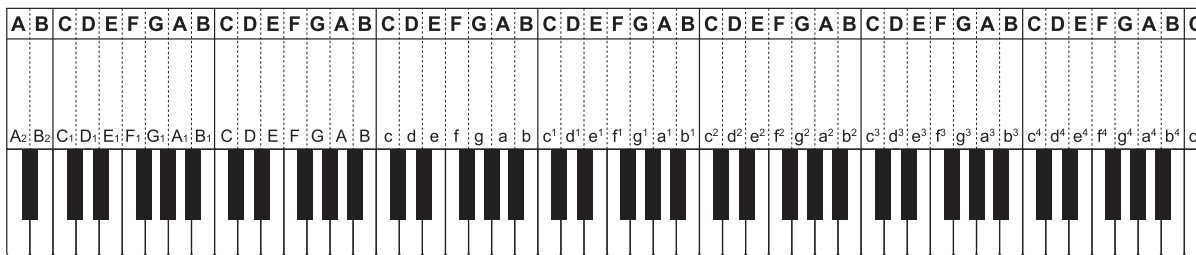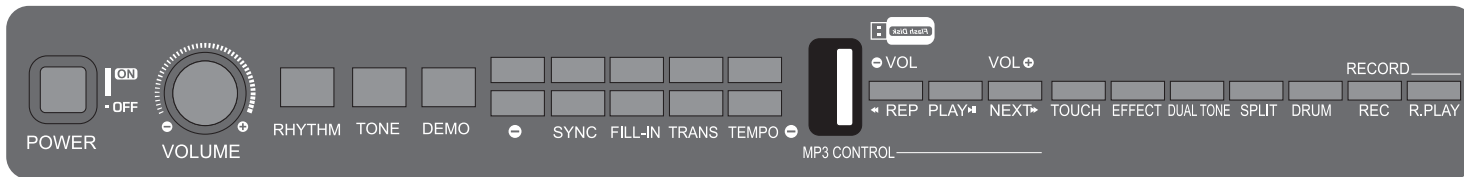

1 Demonstration Song

Demonstration music playing:

Press the [demo] button to start playing the demo. Select the track with the [+ / -] key, and press the [demo] key again to stop playing the demo (see Appendix 2 for the list of demo tracks)

2 Strength Curve

1. Three force curves can be set: light, standard, heavy (t00-t02) and force switch.



The default power is T01

2. Press the [force] button repeatedly to enter the force curve setting, and select the corresponding curve: t00-t02, TOF.

3 Accompaniment Function

rhythm selector

1. There are 200 rhythms, 000-200. (refer to Appendix 3 for rhythm table) after power on, the default is No. 000 rhythm. Press the [rhythm] key to enter the rhythm selection state, and use the [+ /] key to select the corresponding rhythm.

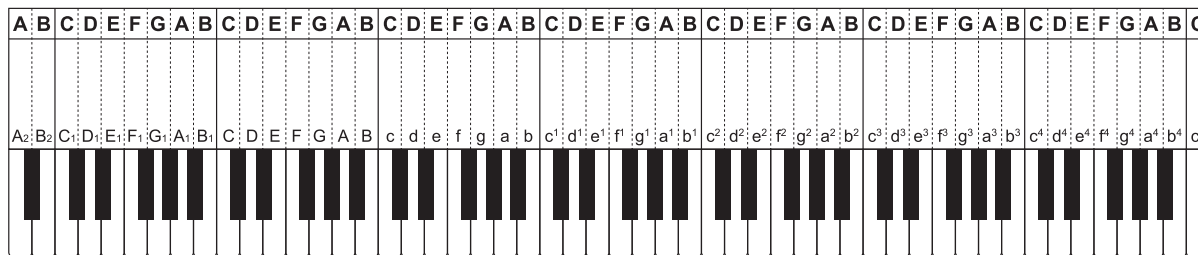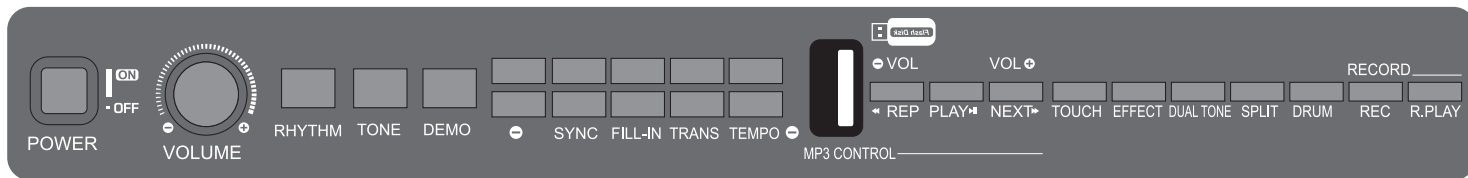

1 Adjust Style Speed

1. Use the [metronome + / -] key to adjust the accompaniment speed. The adjustable range is 20-280 beats / min.
2. When the accompaniment stops, select the rhythm, and the speed is automatically set as the preset value of the rhythm; when the rhythm is played, switch the rhythm, and the speed does not return to the preset value.
3. Press + - at the same time to return to the default

2 Opening Accompaniment

There are two modes of accompaniment on:



Press the [sync / start] key to enter the accompaniment preparation status. Start playing, the accompaniment will start automatically, press the [start / stop] button, the accompaniment will stop.

1. Manual start

Press the [start / stop] key, the style will start immediately; press the [start / stop] key again, the style will stop immediately.

3 Insert Settings

In style mode, press the [insert] key to insert an interval in the rhythm. Long press will continue to insert the style. After releasing the key, the interlude will play for a while and enter the rhythm.

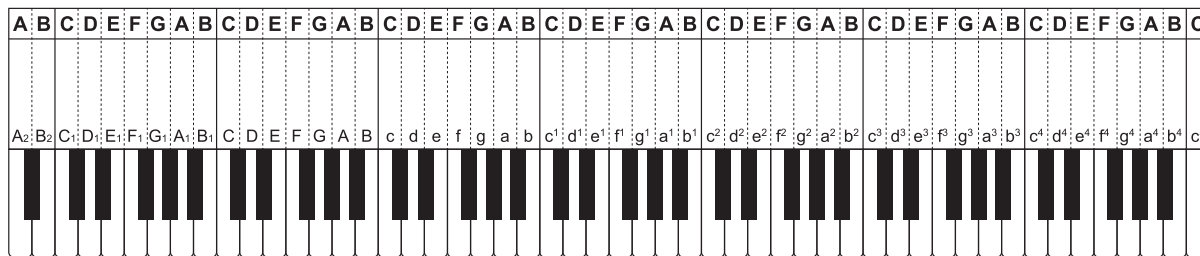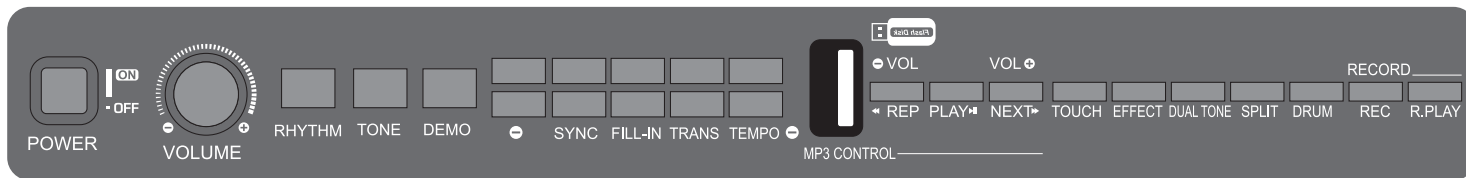

1 Automatic Chord

This machine contains two chord modes: single finger and multi finger. Press the [integrated chord] key to turn on the automatic chord function. At this time, playing the left half of the keyboard will automatically identify single finger and multi finger, and match the corresponding chord. Press the [integrated chord] button again to close the automatic chord function.



2 Metronome

1. Press the [metronome] key, metronome function starts, and the default speed is the speed of the first rhythm.
2. Use the [metronome + / -] key to adjust the metronome speed range: 20-280 beats / min.
3. Press the [metronome] key again to exit the metronome function, and the current speed will be saved.

Note: restarting the electric piano will restore the default speed.

3 Beat Settings

Long press the [metronome] key to enter the metronome type selection state. Use the [+ / -] key to select the corresponding beat type: (1-4, 2-4, 3-4, 4-4, 3-8, 6-8). After selection, press the [metronome] key or there is no operation for more than 2 seconds to confirm the metronome type selection.

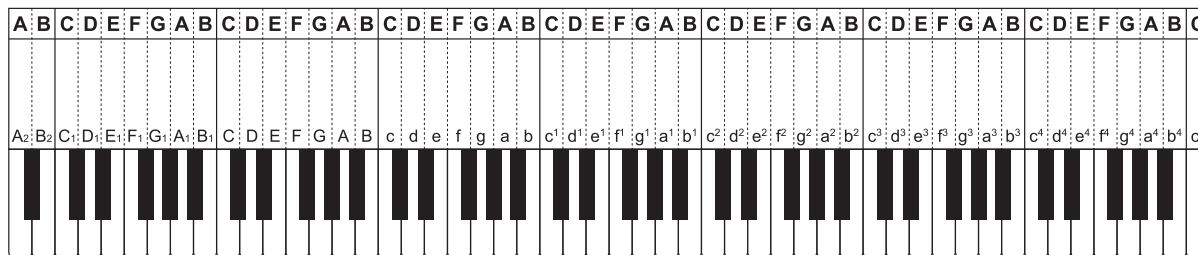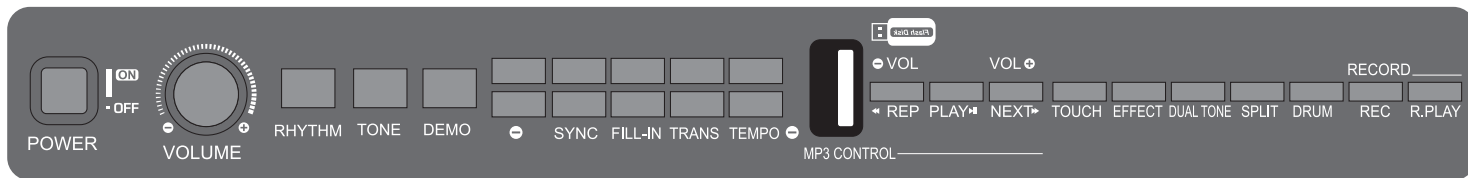

1 Transpose Settings



At the same time, press the [+] and [-] keys to enter the transfer selection status. Press the [+ / -] key to select the corresponding transfer plus or minus 12 levels. Press [voice] or [rhythm] to exit the mode or wait for 2 seconds to exit the mode automatically

2 Dual Voice Settings

This function key is an on / off sequential function. Select the first tone by pressing the [+ / -] key, and then press the [dual tone] key to enter the second tone selection [+ / -] key to select the second tone.

3 Dual Keyboard Settings

When the function key on / off sequence function is on, the scale of piano keys a1-b4 will be played as a scale of a2-b5, and the scale of C5-C9 will be played as a scale of C4-C8. You can use the [+ / -] key to select the main voice to replace the original voice of C5 ~ C9 keys.

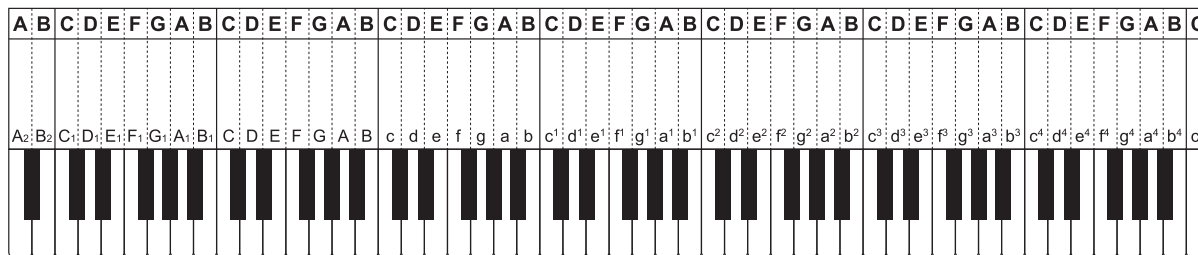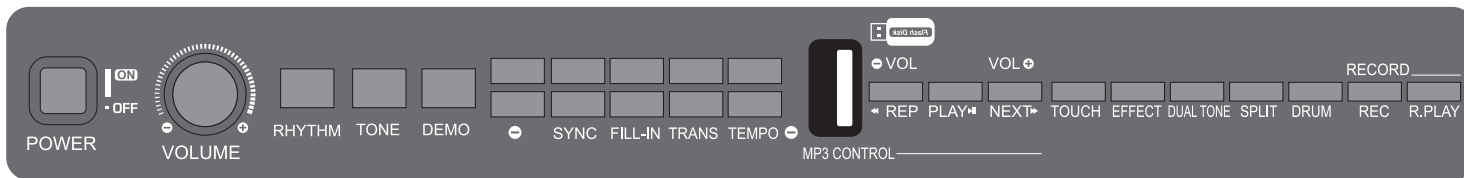

1 Dual Keyboard Settings



This function key is on / off sequential function. Press this key to get the drum beating tone on the corresponding piano key.

2 Recording Settings

Press the [record] key to enter the recording mode, and make metronome sound. If you do not need metronome, you can use the [metronome] key to turn off. At this time, press any piano key to start recording, and then press the [record] key to stop recording.

3 Playback Settings

After recording the track, press the [play] button to start playing the recorded track.

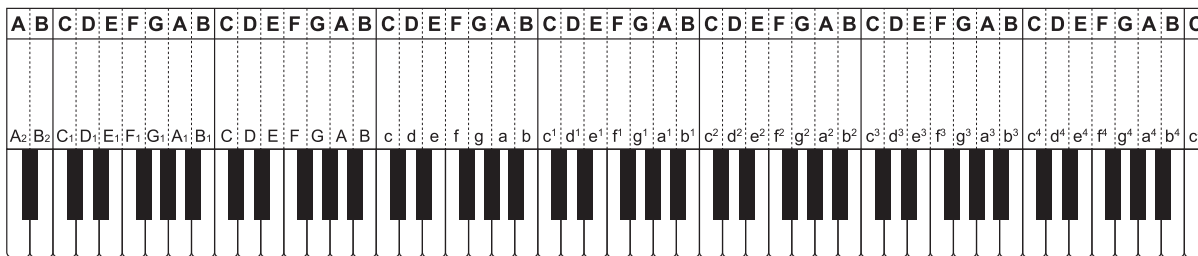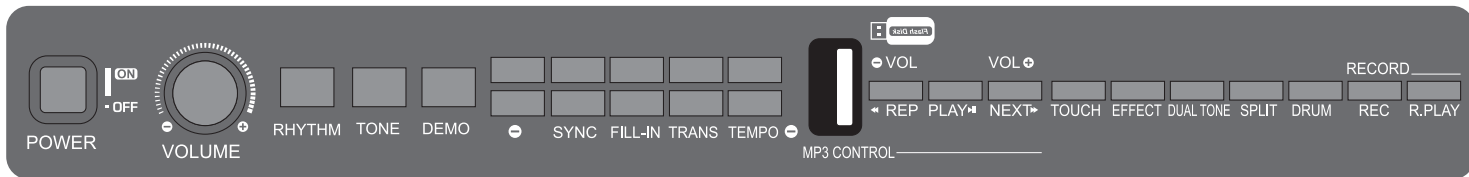

1 Effect Settings

This function key on / off sequential function
 Press this key to turn on the DSP effect.

2 MP3 Settings

- Press the [MP3 play] key to play or pause the MP3 song
- Press the short [MP3 previous] button to play the previous MP3 song
- Press the long [last MP3] button to reduce the volume of MP3
- Press the short [next MP3] button to play the next MP3 song
- Press the long [next MP3] button to increase the volume of MP3



CATEGORY	TIMBRE	MIDI PG#	MIDI BANK	NAME
Piano	1	1	0	Acoustic Grand Piano
	2	2	0	Bright Acoustic Piano
	3	3	0	Electric Grand Piano
	4	4	0	Honky-tonk Piano
	5	5	0	Electric Piano1
	6	6	0	Electric Piano2
	7	7	0	Harpsichord
	8	8	0	Clavichord
Percussion Instruments	9	9	0	Celesta
	10	10	0	Glockenspiel
	11	11	0	Music box
	12	12	0	Vibraphone
	13	13	0	Marimba
	14	14	0	Xylophone
	15	15	0	Tubular Bells
	16	16	0	Dulcimer
Organ	17	17	0	Hammond Organ
	18	18	0	Percussive Organ
	19	19	0	Rock Organ
	20	20	0	Church Organ
	21	21	0	Reed Organ
	22	22	0	Accordian
	23	23	0	Harmonica
	24	24	0	Tango Accordion
Guitar	25	25	0	Acoustic Guitar (nylon)
	26	26	0	Acoustic Guitar (steel)
	27	27	0	Electric Guitar (jazz)
	28	28	0	Electric Guitar (clean)
	29	29	0	Electric Guitar (muted)
	30	30	0	Overdriven Guitar
	31	31	0	Distortion Guitar
	32	32	0	Guitar Harmonics
Bass	33	33	0	Acoustic Bas
	34	34	0	Electric Bass (finger)
	35	35	0	Electric Bass (pick)
	36	36	0	Fretless Bass
	37	37	0	Slap Bass 1
	38	38	0	Slap Bass 2
	39	39	0	Synth Bass 1
	40	40	0	Synth Bass 2

CATEGORY	TIMBRE	MIDI PG#	MIDI BANK	NAME
String Music	41	41	0	Violin
	42	42	0	Viola
	43	43	0	Cello
	44	44	0	Contrabass
	45	45	0	Tremolo Strings
	46	46	0	Pizzicato Strings
	47	47	0	Orchestral Harp
	48	48	0	Timpani
Instrumental Ensemble	49	49	0	String Ensemble 1
	50	50	0	String Ensemble 2
	51	51	0	Synth Strings 1
	52	52	0	Synth Strings 2
	53	53	0	Choir Aahs
	54	54	0	Voice Oohs
	55	55	0	Synth Voice
	56	56	0	Orchestra Hit
Brass	57	57	0	Trumpet
	58	58	0	Trombone
	59	59	0	Tuba
	60	60	0	Muted Trumpet
	61	61	0	French Horn
	62	62	0	Brass Section
	63	63	0	Synth Brass 1
	64	64	0	Synth Brass 2
Reed	65	65	0	Soprano Sax
	66	66	0	Alto Sax
	67	67	0	Tenor Sax
	68	68	0	Baritone Sax
	69	69	0	Oboe
	70	70	0	English Horn
	71	71	0	Bassoon
	72	72	0	Clarinet
Pipe	73	73	0	Piccolo
	74	74	0	Flute
	75	75	0	Recorder
	76	76	0	Pan Flute
	77	77	0	Bottle Blow
	78	78	0	Shakuhachi
	79	79	0	Whistle
	80	80	0	Ocarina



CATEGORY	TIMBRE	MIDI PG#	MIDI BANK	NAME
Polyphonic Theme	81	81	0	Lead 1 (square)
	82	82	0	Lead 2 (sawtooth)
	83	83	0	Lead 3 (calliope lead)
	84	84	0	Lead 4 (chiff lead)
	85	85	0	Lead 5 (charang)
	86	86	0	Lead 6 (voice)
	87	87	0	Lead 7 (fifths)
	88	88	0	Lead 8 (bass+lead)
Synth Substrate	89	89	0	Pad 1 (new age)
	90	90	0	Pad 2 (warm)
	91	91	0	Pad 3 (polysynth)
	92	92	0	Pad 4 (choir)
	93	93	0	Pad 5 (bowed)
	94	94	0	Pad 6 (metallic)
	95	95	0	Pad 7 (halo)
	96	96	0	Pad 8 (sweep)
Polyphonic Effect	97	97	0	FX 1 (rain)
	98	98	0	FX 2 (soundtrack)
	99	99	0	FX 3 (crystal)
	100	100	0	FX 4 (atmosphere)
	101	101	0	FX 5 (brightness)
	102	102	0	FX 6 (goblins)
	103	103	0	FX 7 (echoes)
	104	104	0	FX 8 (sci-fi)
Nation	105	105	0	Sitar
	106	106	0	Banjo
	107	107	0	Shamisen
	108	108	0	Koto
	109	109	0	Kalimba
	110	110	0	Bagpipe
	111	111	0	Fiddle
	112	112	0	Shanai
Percussion	113	113	0	Tinkle Bell
	114	114	0	Agogo
	115	115	0	Steel Drums
	116	116	0	Woodblock
	117	117	0	Taiko Drum
	118	118	0	Melodic Tom
	119	119	0	Synth Drum
	120	120	0	Reverse Cymbal

CATEGORY	TIMBRE	MIDI PG#	MIDI BANK	NAME
Sound Effects	121	121	0	Guitar Fret Noise
	122	122	0	Breath Noise
	123	123	0	Seashore
	124	124	0	Bird Tweet
	125	125	0	Telephone Ring
	126	126	0	Helicopter
	127	127	0	Applause
	128	128	0	Gunshot
Piano Group 2	129	1	8	Piano w
	130	1	16	Piano d
	131	4	1	HonkyTonk w
	132	5	8	Detuned EP
	133	5	24	60s E.Piano
	134	7	1	Harpichord 2
	135	8	1	Clavichord 2
Percussion Instruments 2	136	9	8	Celesta 2
	137	10	8	Glockenspiel2
	138	11	8	Music Box 2
	139	12	8	Vibraphone 2
	140	13	8	Marimba 2
	141	13	8	Marimba 2
	142	14	8	Xylophone 2
	143	15	8	Tubular-bell 2
Organ 2	144	17	8	Detuned Or
	145	17	16	60's Organ
	146	24	1	Bandoneon
Guitar 2	147	25	8	Ukulele
	148	26	16	Mandolin
	149	27	8	Hawaiian Gt
	150	28	8	Chorus Gt
	151	29	8	Funk Gt
	152	31	8	Feedback Gt
Bass & Electronic sound	153	33	1	Synth 1
	154	33	2	Synth 2
	155	35	1	Synth 3
	156	35	2	Synth 4
	157	36	1	Synth 5
	158	36	2	Synth 6
	159	36	3	Synth 7

CATEGORY	TIMBRE	MIDI PG#	MIDI BANK	NAME
String Music 2	160	41	1	Violin 2
	161	43	1	Cello 2
	162	47	1	Harp 2
	163	49	8	Strings
Instrumental Ensemble 2	164	53	1	Choir Aahs2
	165	54	1	Voice doo 2
Brass 2	166	57	1	Trumpet 2
	167	58	1	Trombone 2
	168	60	1	MuteTrumpet 2
	169	61	1	French Horn 2
Reed 2	170	62	1	Brass 2
	171	65	1	Soprano Sax 2
	172	69	1	Oboe 2
	173	70	1	EnglishHorn 2
Pipe 2	174	72	1	Clarinet 2
	175	73	1	Piccolo 2
	176	74	1	Flute 2
	177	76	1	Pan Flute 2
Polyphonic Theme 2	178	78	1	Shakuhachi 2
	179	81	1	Square 2
	180	81	8	Sine Wave
	181	86	8	Vox Lead
Polyphonic Effect 2	182	92	8	Space Voice
	183	99	1	Syn Mallet
	184	103	1	Echo Bell
	185	103	2	Echo Pan
Nation 2	186	105	1	Sitar 2
	187	116	8	Castanets
Percussion 2	188	117	8	Concert BD
	189	119	8	808 Tom
	190	119	9	Electric Percussion
	191	121	1	Gt.CutNoise
Sound Effects 2	192	121	2	String Slap
	193	122	1	Fl.KeyClick
	194	123	2	Thunder
	195	123	3	Wind
	196	123	4	Stream
	197	123	5	Bubble
	198	124	1	Dog
	199	125	2	Creaking

CATEGORY	TIMBRE	MIDI PG#	MIDI BANK	NAME
Sound Effects 2	200	125	3	Door
	201	126	9	Burst Noise
	202	127	1	Laughing
	203	127	2	Screaming
	204	127	4	Heart Beat
	205	127	5	Footsteps
	206	128	3	Explosion
Folk Percussion Instrument	207	9	100	Luo
	208	13	100	Pai Gu
	209	14	100	Qin
	210	15	100	Bian Zhong
Folk Plucked String Instrument	211	16	100	Yang Qin
	212	25	100	Liu Qin
	213	26	100	Pi Pa
	214	27	100	Zhong Ruan
	215	28	100	Da Ruan
	216	29	100	Yue Qin
	217	107	100	San Xian
	218	108	100	Gu Zheng
	219	108	101	Gu Qin
Folk Musical Instrument 1	220	22	100	Shen
	221	65	100	Na Zi
	222	69	100	Bi Li
	223	70	100	Guan Zi
	224	72	100	Ba Wu
	225	73	100	Di Zi
Folk Musical Instrument 2	226	75	100	Hu Lu Si
	227	76	100	Pai Xiao
	228	77	100	South Xiao
	229	78	100	Xiao
	230	79	100	Kou Di
	231	80	100	Xun
	232	41	100	Gao Hu
Folk Bowstring Instrument	233	42	100	Er Hu
	234	43	100	Zhong Hu
	235	43	101	Ma Tou Qin
	236	81	100	Ban Hu
	237	82	100	Jing Hu
	238	49	100	Hu Ensemble



TIMBRE	NAME
1	FUNK
2	RIVER OF DREAM
3	DANCING QUEEN
4	DONNA LEE
5	FORGET
6	CHOPIN:GRANDE VALSE BRILLANTE
7	ACROSS THE SEA
8	XAVER SCHARWENKA:POLISH DANCE Op.3 No.1
9	RED CHERRY AND WHITE APPLE BLOSSOM
10	COUNTRY GARDEN
11	COURANTE
12	JUST DRUNK
13	CARRY ME BACK TO OLD VIGINNY
14	EARLY AUTUMN
15	TWIST VARIATION
16	DANSE NEGRE Op.58
17	PALM LEAF
18	D MAJOR TANGO
19	SYMPHONY NO.94 SURPRISE
20	KATYUSHA
21	DESAFINADO
22	BEETHOVEN BAGATELLES
23	IN THE HALL OF THE MOUNTAIN KING
24	EXPLORING
25	PERELUDE III
26	GRAND MARCH
27	PARAPHRASE
28	DANGEROUS AREA
29	FUTURE
30	SUNSHINE BEACH
31	JUNE SAMBA
32	KENNYG:SONGBIRD
33	L'INVERNO IN F MINOR
34	WINE
35	BLUES
36	FEELING
37	TURKEY
38	ETUDE IN F SHARP MAJOR
39	FUNNY GENTLEMAN
40	I DO IT FOR YOU

TIMBRE	NAME
41	BEETHOVEN PIANO SONTA No.30
42	CARMEN
43	AMERICAN PATROL
44	MENDELSSOHN:RONDO IN D MAJOR
45	AURORA OF CITY
46	WISH U CHRISTMAS
47	NO STOPPING GALOP
48	LAST SUMMER
49	JAZZ
50	RHYTHM OF THE RAIN
51	TWINKLE TWINKLE VARIATION
52	ATLANTIS
53	FLYING TRAPEZE
54	TROIS ECOSAISES Op.72,No.3-5
55	ALLEGRO CON BRIO
56	LEMON TREE
57	ARABESQUE
58	CHILDHOOD
59	JUST THE TWO OF US
60	SEE SHORE
61	ALL KIND OF MY EVERYTHING
62	NOCTURNE Op.9 No2
63	SOMETHING IN THE AIR
64	COMFORT
65	LET IT SNOW
66	BINGO
67	LIEBESTRAUM
68	PERFECT HAPPINESS
69	TOCCATA
70	LA BAMBA
71	RANDO CAPRICCIO
72	SCHERZO
73	LA CAMPANELLA
74	LOCKOUT
75	ROMANCE DE AMOR
76	BARCAROLE
77	CHOPIN:ETUDE IN C MINOR Op.10 No.12
78	DANCE OF YOUTH
79	GRIEG AIR
80	THE HOME COMING

TIMBRE	NAME
81	LAZY_BIRD
82	RED RIVER VALLEY
83	ENTERTAINMENT
84	CHOPIN:MAZURKA Op.39 No.10
85	THE BEAR IN THE FOREST
86	PRIMITIVE DANCE STEPS
87	MODERN GRAY
88	MOONLIGHT
89	LOVE FOREVER
90	JARDIN SECRET
91	BALL
92	COUNTRY
93	SOMALILAND
94	MAPLE LEAF RAG
95	BRAHMS_CONCERTO
96	WALTZ IN D FLAT,OP.64 NO.1
97	COBWEB
98	HAPPY BOSSA
99	SILENT NIGHT
100	CURIOUS STORY



SORT	TIMBRE	NAME
BLUES	1	6.8BLUES
	2	4.4BLUES
	3	5.4BEAT1
	4	5.4BEAT2
	5	BOOGIEWOOGIE
	6	SOULSHUFFLE
	7	RAGTIME1
	8	RAGTIME2
	9	SHUFFLE1
	10	SHUFFLE2
	11	SHUFFLE3
	12	SHUFFLE4
	13	BLUES1
	14	BLUES2
	15	BLUES3
	16	BLUES4
	17	TWIST1
	18	TWIST2
	19	TWIST3
	20	TWIST4
	21	GOSPEL1
	22	GOSPEL2
	23	GOSPEL3
	24	R&B
	25	SWING1
	26	SWING2
	27	BLUEBOOGIE
JAZZ	28	JAZZ1
	29	JAZZ2
	30	JAZZ3
	31	JAZZ4
	32	JAZZ5
	33	JAZZBALLAD
	34	JAZZWALTZ
	35	JAZZBAND1
	36	JAZZBAND2
	37	JAZZBAND3
	38	SWINGJAZZ
	39	COOLJAZZ
	40	DIXIELAND1

SORT	TIMBRE	NAME
JAZZ	41	DIXIELAND2
	42	FUSION
	43	LANGE
	44	SOUL1
	45	SOUL2
	46	SOUL3
	47	FOXTROT1
FOX TROT	48	FOXTROT2
	49	FOXTROT3
	50	FOXTROT4
	51	FOXTROT5
	52	FOXTROT6
	53	FOXTROT7
	54	FOXTROT8
COUNTRY	55	FOXTROT9
	56	COUNTRY1
	57	COUNTRY2
	58	COUNTRY3
	59	COUNTRY4
	60	COUNTRY5
	61	COUNTRY6
	62	COUNTRY7
	63	COUNTRY8
	64	COUNTRY9
	65	COUNTRY10
	66	COUNTRY11
	67	COUNTRY12
LATIN	68	COUNTRY13
	69	COUNTRY14
	70	COUNTRY15
	71	COUNTRY16
	72	COUNTRYPOP
	73	COUNTRYSHUFFLE1
	74	COUNTRYSHUFFLE2
75	COUNTRYSWING	
LATIN	76	LATIN1
	77	LATIN2
	78	LATIN3
	79	LATIN4
	80	LATIN5

SORT	TIMBRE	NAME
LATIN	81	LATIN6
	82	TANGO1
	83	TANGO2
	84	RUMBA1
	85	RUMBA2
	86	RUMBA3
	87	CHACHA1
	88	CHACHA2
	89	CHACHA3
	90	CHACHA4
BOSSANOVA	91	CHACHA5
	92	CHACHA6
	93	BOSSANOVA1
	94	BOSSANOVA2
	95	BOSSANOVA3
	96	SAMBA1
	97	SAMBA2
	98	SAMBA3
	99	MAMBO1
	100	MAMBO2
DANCE	101	MAMBO3
	102	REGGAE1
	103	REGGAE2
	104	SALSA1
	105	SALSA2
	106	MODERN1
	107	MODERN2
	108	DANCE1
	109	DANCE2
	110	DANCE3
DANCE	111	DANCE4
	112	DANCE5
	113	DANCE6
	114	DANCE7
	115	70DISCO1
	116	70DISCO2
	117	DISCO1
	118	DISCO2
	119	DISCO3
	120	VAPERWAVE

SORT	TIMBRE	NAME
FUNK	121	FUNK1
	122	FUNK2
	123	FUNK3
	124	FUNK4
	125	FUNK5
	126	FUNK6
	127	FUNK7
R&B	128	R&B1
	129	R&B2
	130	R&B3
	131	R&B4
	132	R&B5
	133	R&B6
POP	134	16BEAT1
	135	16BEAT2
	136	16BEAT3
	137	16BEAT4
	138	16BEAT5
	139	16BEAT6
	140	16BEAT7
	141	16BEAT8
	142	POP1
	143	POP2
	144	POP3
	145	POP4
	146	POP5
ROCK	147	POP6
	148	POP7
	149	POP8
	150	VINTAGE1
	151	VINTAGE2
	152	FOLKPOP
	153	NEWAGE
	154	POPBOSSA1
	155	POPBOSSA2
	156	POP RAP
157	POPSAMBA	
ROCK	158	8BEAT1
	159	8BEAT2
	160	8BEAT3

SORT	TIMBRE	NAME
ROCK	161	8BEAT4
	162	8BEAT5
	163	8BEAT6
	164	8BEAT7
	165	8BEAT8
	166	8BEAT9
	167	8BEATROCK1
	168	8BEATROCK2
	169	Rock1
	170	Rock2
ROCK	171	Rock3
	172	Rock4
	173	Rock5
	174	INDIEROCK1
	175	INDIEROCK2
	176	60thRock
	177	GlamMetal1
	178	GlamMetal2
	179	GlamMetal3
	180	PunkRock1
ROCK	181	PunkRock2
	182	PunkRock3
	183	PunkRock4
	184	PunkRock5
	185	JIVEROCK
	186	ROCKSHUFFLE
	187	ROCK'N'ROLL1
	188	ROCK'N'ROLL2
	189	BEGUINE1
	190	BEGUINE2
ORIENTAL	191	CARIBBEAN
	192	BOLERO
	193	DANGDUT
	194	CHINA
	195	JIANGNAN
	196	XIZANG
	197	YUNNAN
	198	HAWAII
	199	GUARACHA
	200	CHARLESTON



To do a good job in the maintenance and protection of this product plays a very important role in prolonging the service life and reducing the health of the product.

1 Avoid Heat, Moisture, Or Direct Sunlight

Do not overexpose the product to direct sunlight, or place it near the air conditioner, or in an extremely hot place.

2 Not To Be Used Near A Television Or Radio

This product may cause video or audio interference to the reception of television and radio. If this happens, the product should be removed from the TV or radio.

3 Paint, Diluent Or Similar Chemicals Shall Not Be U

Clean the product with a soft piece of cloth that is wet with a weak aqueous solution and a neutral washing agent. Soak the cloth in the bath and screw a thousand until it is close to drying.

4 Do Not Shake, Avoid Collision

The product should be careful and light when moving, strictly forbid severe vibration and collision, so as not to make the shell damaged or the internal electronic components damaged.

Accessories List

Name	QUANTITY
Power Cord	1 PCS
Piano Subject	1 PCS
Pedal Beam	1PCS
Left / Right Support Plate	2 PCS
Left / Right Bracing Column	2 PCS
Back Fixing Plate	1PCS
Wood Bolt	4 PCS
Screw	16 POS
Manual	1 COPY


Instrument Parameter

Key: 88	Pitch: ≤ 3 points
Range: A2~C5	Output power: ≥ 25Wx 2
Style: vertical piano	Power parameters: DC 18V 50/60Hz



POWER SUPPLY

This product can be powered by standard indoor wall socket. Please use only the power cord specified by this product. Please turn off the power supply when it is not used temporarily. When it is not used for a long time, please unplug the power cord and keep it properly.

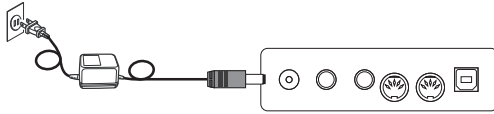

SIGN

In order to ensure your safe and correct use of the product, to prevent injury to users and others and financial damage, this manual and the product are marked with a series of safety signs. Various signs and their meanings are as follows:

Warning

This sign indicates that there is a potential risk of death or serious injury if the sign is ignored and the product is misoperated.

Be careful

This sign indicates that if this sign is ignored and the product is misoperated, there is a potential risk of personal injury or other financial damage.

LOGO EXAMPLE

This triangle flag () indicates what the user should pay attention to. (the left case is careful to be electrocuted)

A circular sign with a slash, (), indicates the prohibition. A diagram in or next to a logo. Express the content of the specific prohibition. (on the left, disassembly is prohibited)

A black dot (●) indicates what must be observed. The illustrations in this sign indicate the specific contents that must be observed. (in the left example, the power plug must be unplugged from the socket)

WARNING

Smoke, Odour, Overheat

In case of smoke, peculiar smell or overheating, continued use of the product may cause fire and electric shock. In case of the above situation, the following operations shall be performed immediately.

1. switch it off.
2. Unplug the plug from the power outlet.
3. Contact your dealer

Power cord

Improper use of power cord may cause fire and electric shock.

The following precautions must be observed.

The special power cord specified for this product must be used. The AC power supply with the output voltage within the rated voltage range of the household must be used.

Do not overload the power socket and extension cord.

Improper handling of the power line, resulting in damage or breakage, may cause fire and electric shock. The following precautions must be observed.

Do not place heavy objects or heat them on the power line.

Do not attempt to modify or over bend the power cord.

Do not twist or pull the power cord. If the power cord or plug is damaged, replace the power cord of the same specification type.

Do not touch the power cord and plug with wet hands, otherwise it may cause electric shock.

Please use the power cord where there is no splashing. There is a risk of fire and electric shock caused by water.

Do not place vases or any other containers containing water on this product. There is a risk of fire and electric shock caused by water.

Do not allow minors to plug in or touch the power cord or connecting board. Minors are useless in safety knowledge of electricity, which may cause the risk of electric shock.



BE CAREFUL

Improper use of power cord may cause fire and electric shock. The following precautions must be observed.

Do not place the power cord near the furnace or other heat sources.

Do not pull the power cord when unplugging from the power outlet.

The plug body must be grasped. The power cord must be plugged into the power outlet.

Make sure the power is off before connecting or disconnecting the power cord.

In case of thunderstorm or before traveling or other long-term departure, the power cord shall be unplugged from the power socket on the wall.

At least once a year, unplug the power cord from the power socket on the wall and clean the dust accumulated around the plug.





Don't Burn Away This Product

Do not place this product in the fire. Otherwise, it will lead to the burning of wooden products and the explosion of internal electronic components, which may cause fire and personal injury.



Water And Foreign Bodies

Water, other liquids and (metal sheet, etc.) entering the product may cause fire and electric shock. In case of the above situation, the following operations shall be performed immediately.



1. switch it off.
2. If you are using a power cord for power, unplug it from the wall outlet.
3. Contact your dealer.

Disassembly And Transformation

Do not disassemble or modify the product in any way. Otherwise, there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and maintenance work shall be entrusted to your dealer.



Fall Or Impact

The product is in danger of falling, fire and electric shock. In case of any damage caused by the above-mentioned or strong impact, the following operations shall be carried out immediately.



1. switch it off.
2. If you are using a power cord for power, unplug it from the wall outlet.
3. Contact your dealer.

Plastic Bag

Do not let anyone cover the plastic bag used for packaging this product on the head or put it into the mouth, otherwise there is a risk of suffocation. Families with children should pay special attention to it.



Keep Distance From The Product Bracket

Climbing on the piano body or its bracket may cause its overturning or damage. Families with young children should pay special attention to it.



Placement

Climbing on the piano body or its bracket may cause its overturning or damage. Families with young children should pay special attention to it.



Avoid placing the product on an uneven surface or any other unstable place. Otherwise, it will cause falling of this product may cause personal injury.

Movement Of Products

Before moving this product, you must unplug the power cord from the power socket on the wall and all other cables and connecting wires. Otherwise, it may cause damage to the wire, fire and electric shock.



Cleaning

Before cleaning this product, you must unplug the power cord plug from the power socket on the wall, otherwise it may cause fire and electric shock.



Interface

Only specified equipment and devices can be connected on the interface of this product. Connecting non designated equipment or devices may cause fire and electric shock.



Position Selection

Avoid placing the product in the following places. Otherwise, it may cause fire and electric shock.



A place where the temperature is high or dusty. Kitchen or other place with fumes. Places exposed to direct sunlight or any other places that may cause high temperature of this product.

Volume

Do not play music at a high volume for a long time. Pay special attention when using headphones. Too high a volume can damage your hearing.



Heavy Object

Do not place heavy objects on this product. Otherwise, the top of the product will be too heavy, which may cause the product to overturn or the objects on it to fall, thus causing the danger of personal injury.



Correct Assembly Of Bracket

If the bracket is not assembled correctly, it will overturn, cause the product to fall, and cause the danger of personal injury. Therefore, the assembly must be carried out according to the instructions in the attached instructions to ensure that the product is correctly installed on its bracket.



