
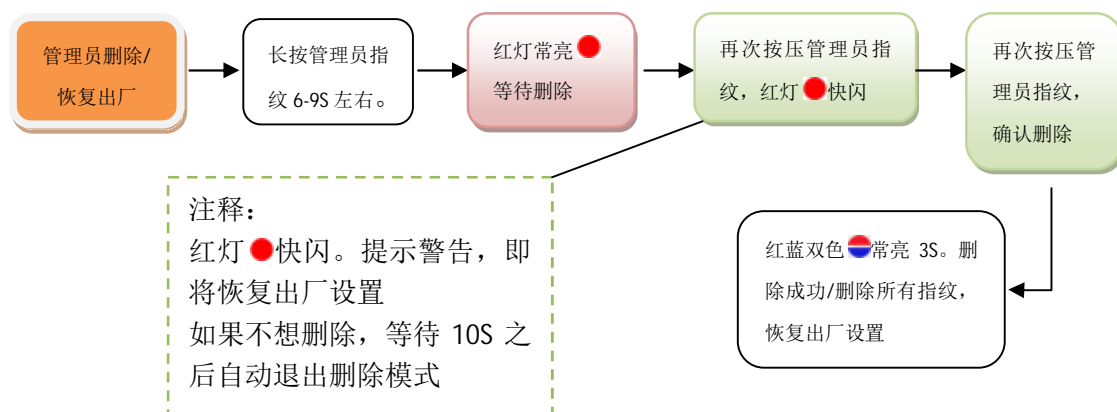
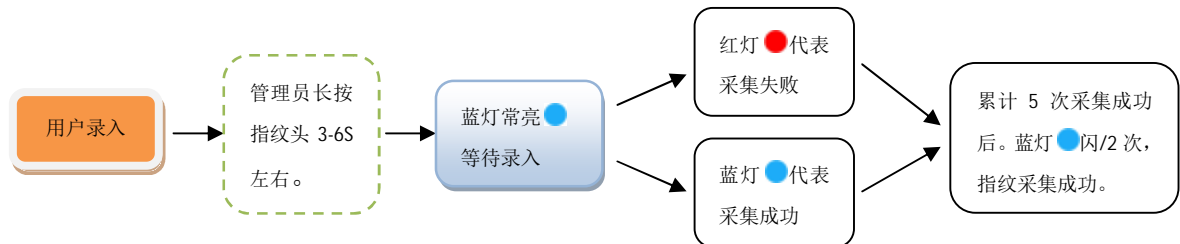


中英文使用说明




注：建议用户录入指纹数 ≥ 2 枚备用，防止某个手指脱皮无法识别


正在充电	绿灯常亮
充满	绿灯灭
指纹比对成功(开锁)	蓝灯闪 2 次(已录入指纹)
指纹比对成功(开锁)	蓝灯闪 1 次(未录入指纹)
指纹比对失败	红灯闪 1 次
指纹添加成功(录入模式下)	蓝灯闪 2 次
指纹删除成功	红、蓝灯常亮 3S
电量低	红灯闪 3 次(开锁成功后)

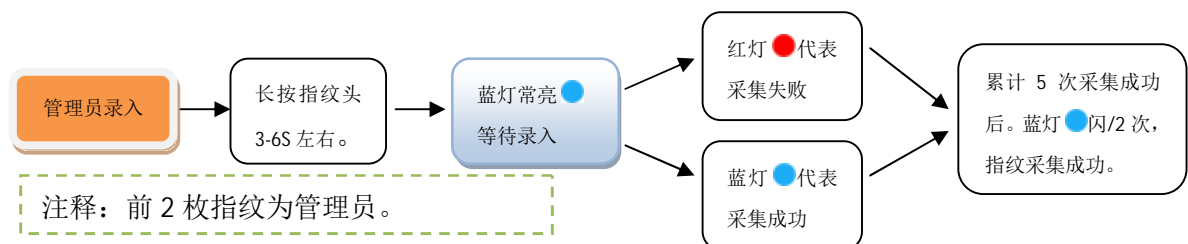

Note: it is recommended that users input the number of fingerprints after ≥ 2 for use.

Prevent a finger from peeling unrecognized

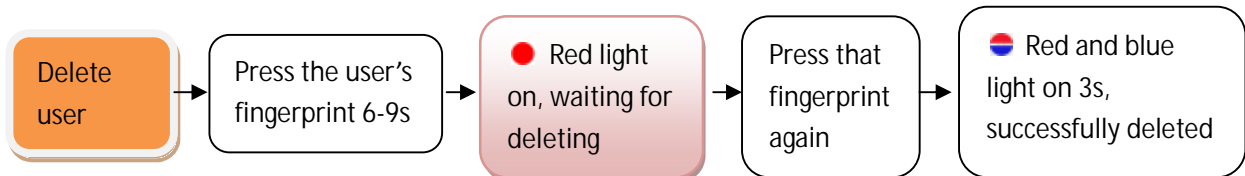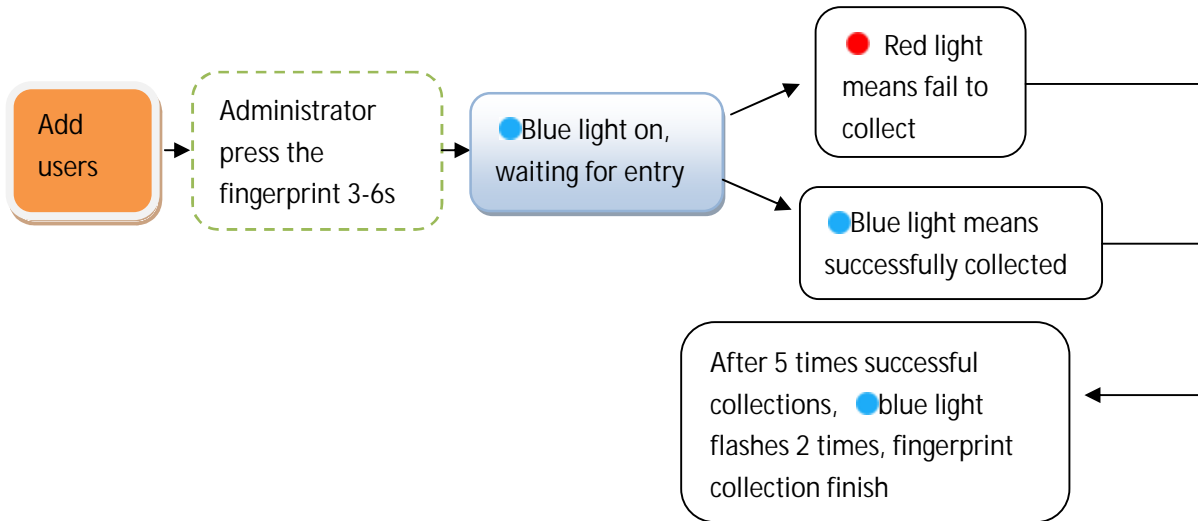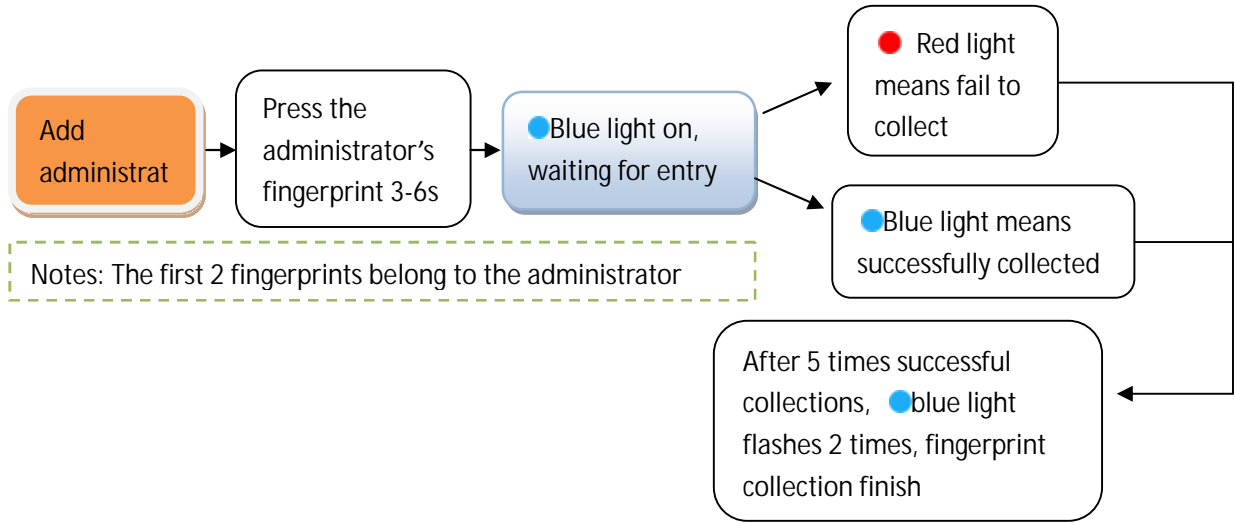

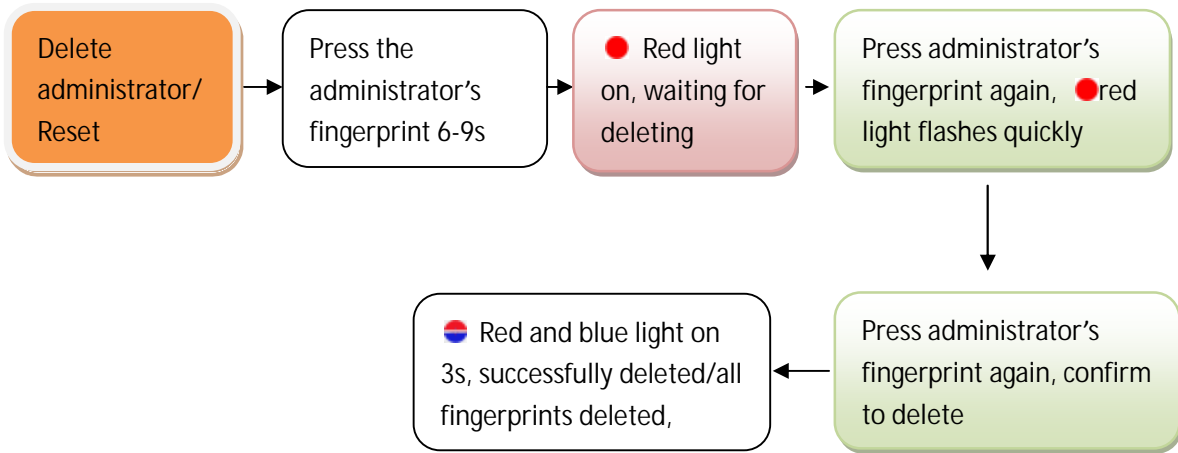

Notes: It's warning signal that factory settings will be restored soon when the red light flashes quickly, wait for 10 seconds to automatically exit the delete mode if you don't want.