

(PKE + Button Start System)

(Model: E-2)


TECHNICAL PARAMETER	
Working Voltage: 12V	Static Current: 8mA
Output Current (MAX): Siren: 10AX1	Working Frequency: 433MHZ
TRANSMITTER	
Working Voltage: 3V	Static Current: 0mA
Battery: 3V / 2032	Working Frequency: 433MHZ


Descriptions:

1、Arm Status(PKE mode)

Operation: leave the car with the remote control more than 3 meters, lock the car, and flash the button lamp once. The car will unlock itself with a remote control about 2 meters from the car. The horn will ring twice and the button light will flash twice.

2、 Disarm status(manual mode)

Operation: short press the  on the remote control, then the car locks off and the key lights flash once the horn rings.

Operation: press the remote  control briefly, then the car opens the lock and the button lamp flashes twice.

3、 Auto Central Lock

After driving 15 seconds,if step the brake,it can be locked car doors automatically; when stop car,car doors would be unlocked by itseif.

4、 Trunk Release

In disarm mode, press  button for 5 seconds, trunk will be open and the horn signaled 。


5、 Remote the Car


In arm mode, press  button for 5 seconds to start the car remotely.

6、 The system reset


 
In arm mode, long press red switch for 5 seconds to reset the car system.



7、 PKE mode switch:

OFF: In disarm mode,long press  5 seconds,the siren sound twice.

 
ON: In disarm mode,long press  5 seconds,the siren sound once.

8、 the Mute Arm mode switch: (search key or trunk key)

ON: In disarm mode,long press  +  one seconds,the siren sound once.

OFF: In disarm mode,long press  +  one seconds,the siren sound once.

9、 Find Car (search key or trunk key)

Press the remote  buttons in the middle,the siren sound and the light will chirp constantly for 15 seconds.

10、 open door alarm

When the car is locked for 5 seconds, the system will alarm if the door is opened illegally

11、 Learning remote

A :Long press the red switch of the host machine for 10 seconds, and then press the button of the remote control for short while the button lamp is on.

B :A host can learn 4 remote controls, learning to exit the learning mode automatically after 5 seconds

Note: when learning the fifth remote control, the first one will be automatically squeezed out

12、 Remote control start the Car (Remote start)

Operation: leave the car more than 5 meters and lock the door. Press the remote (search key or trunk key) control for 5 seconds to start the car remotely And lock the door.

 
Description: after the remote control starts, the timer function of 18 minutes will be carried out, the car will be automatically put out after 18 minutes, and the timing will be automatically cancelled after stepping on the brake.

Note: if the foot brake wire is directly connected to 12V, the car cannot be remotely started.

Note: you can't remotely start the car while sitting in the car in induction mode.


二、 A key to start, one - click Shutdown and open ACC audio and on the dashboard diagram

1. Brakes shorter in 1 seconds the starter motor

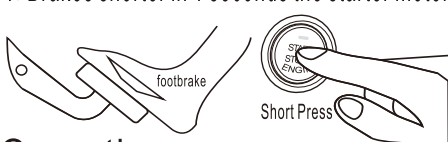


Operation:
In disarm the security state stepped foot brake, short press the Start button 1 seconds the system starts, long after the start button LED is lit.

 2. Brakes shorter in 1 seconds the engine

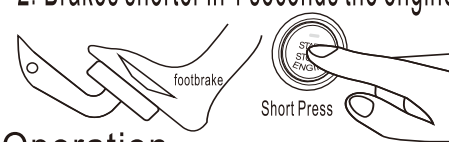


Operation:
When the engine operation, foot brake, on my, and then press the start button to shut down 1 seconds short, after the fire button LED is off.

 3. Open ACC and not on the brakes shorter in on mode switch

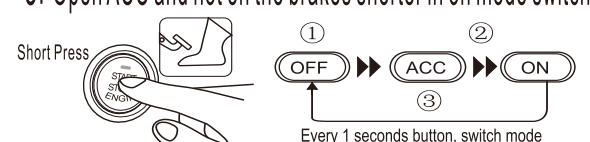


Operation:
Do not put on the brakes, open ACC audio short by 1 seconds, and then open short by 1 seconds on the dashboard, and then short by close, the system can loop

 4. Long press to start the operation (special use)

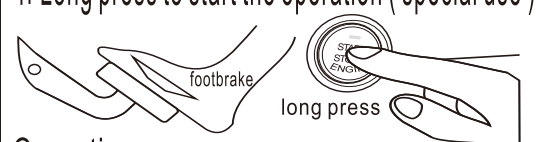

Operation: (According to the motor protection up to 3 seconds long)
If you start or when poor engine in cold weather is not easy to foot on the brakes and long Press the start button to start the car, after engine starting can be let go.

 PKE+Remote Start+Push Button Start+Hopping Code+Trunk+Car Alarm

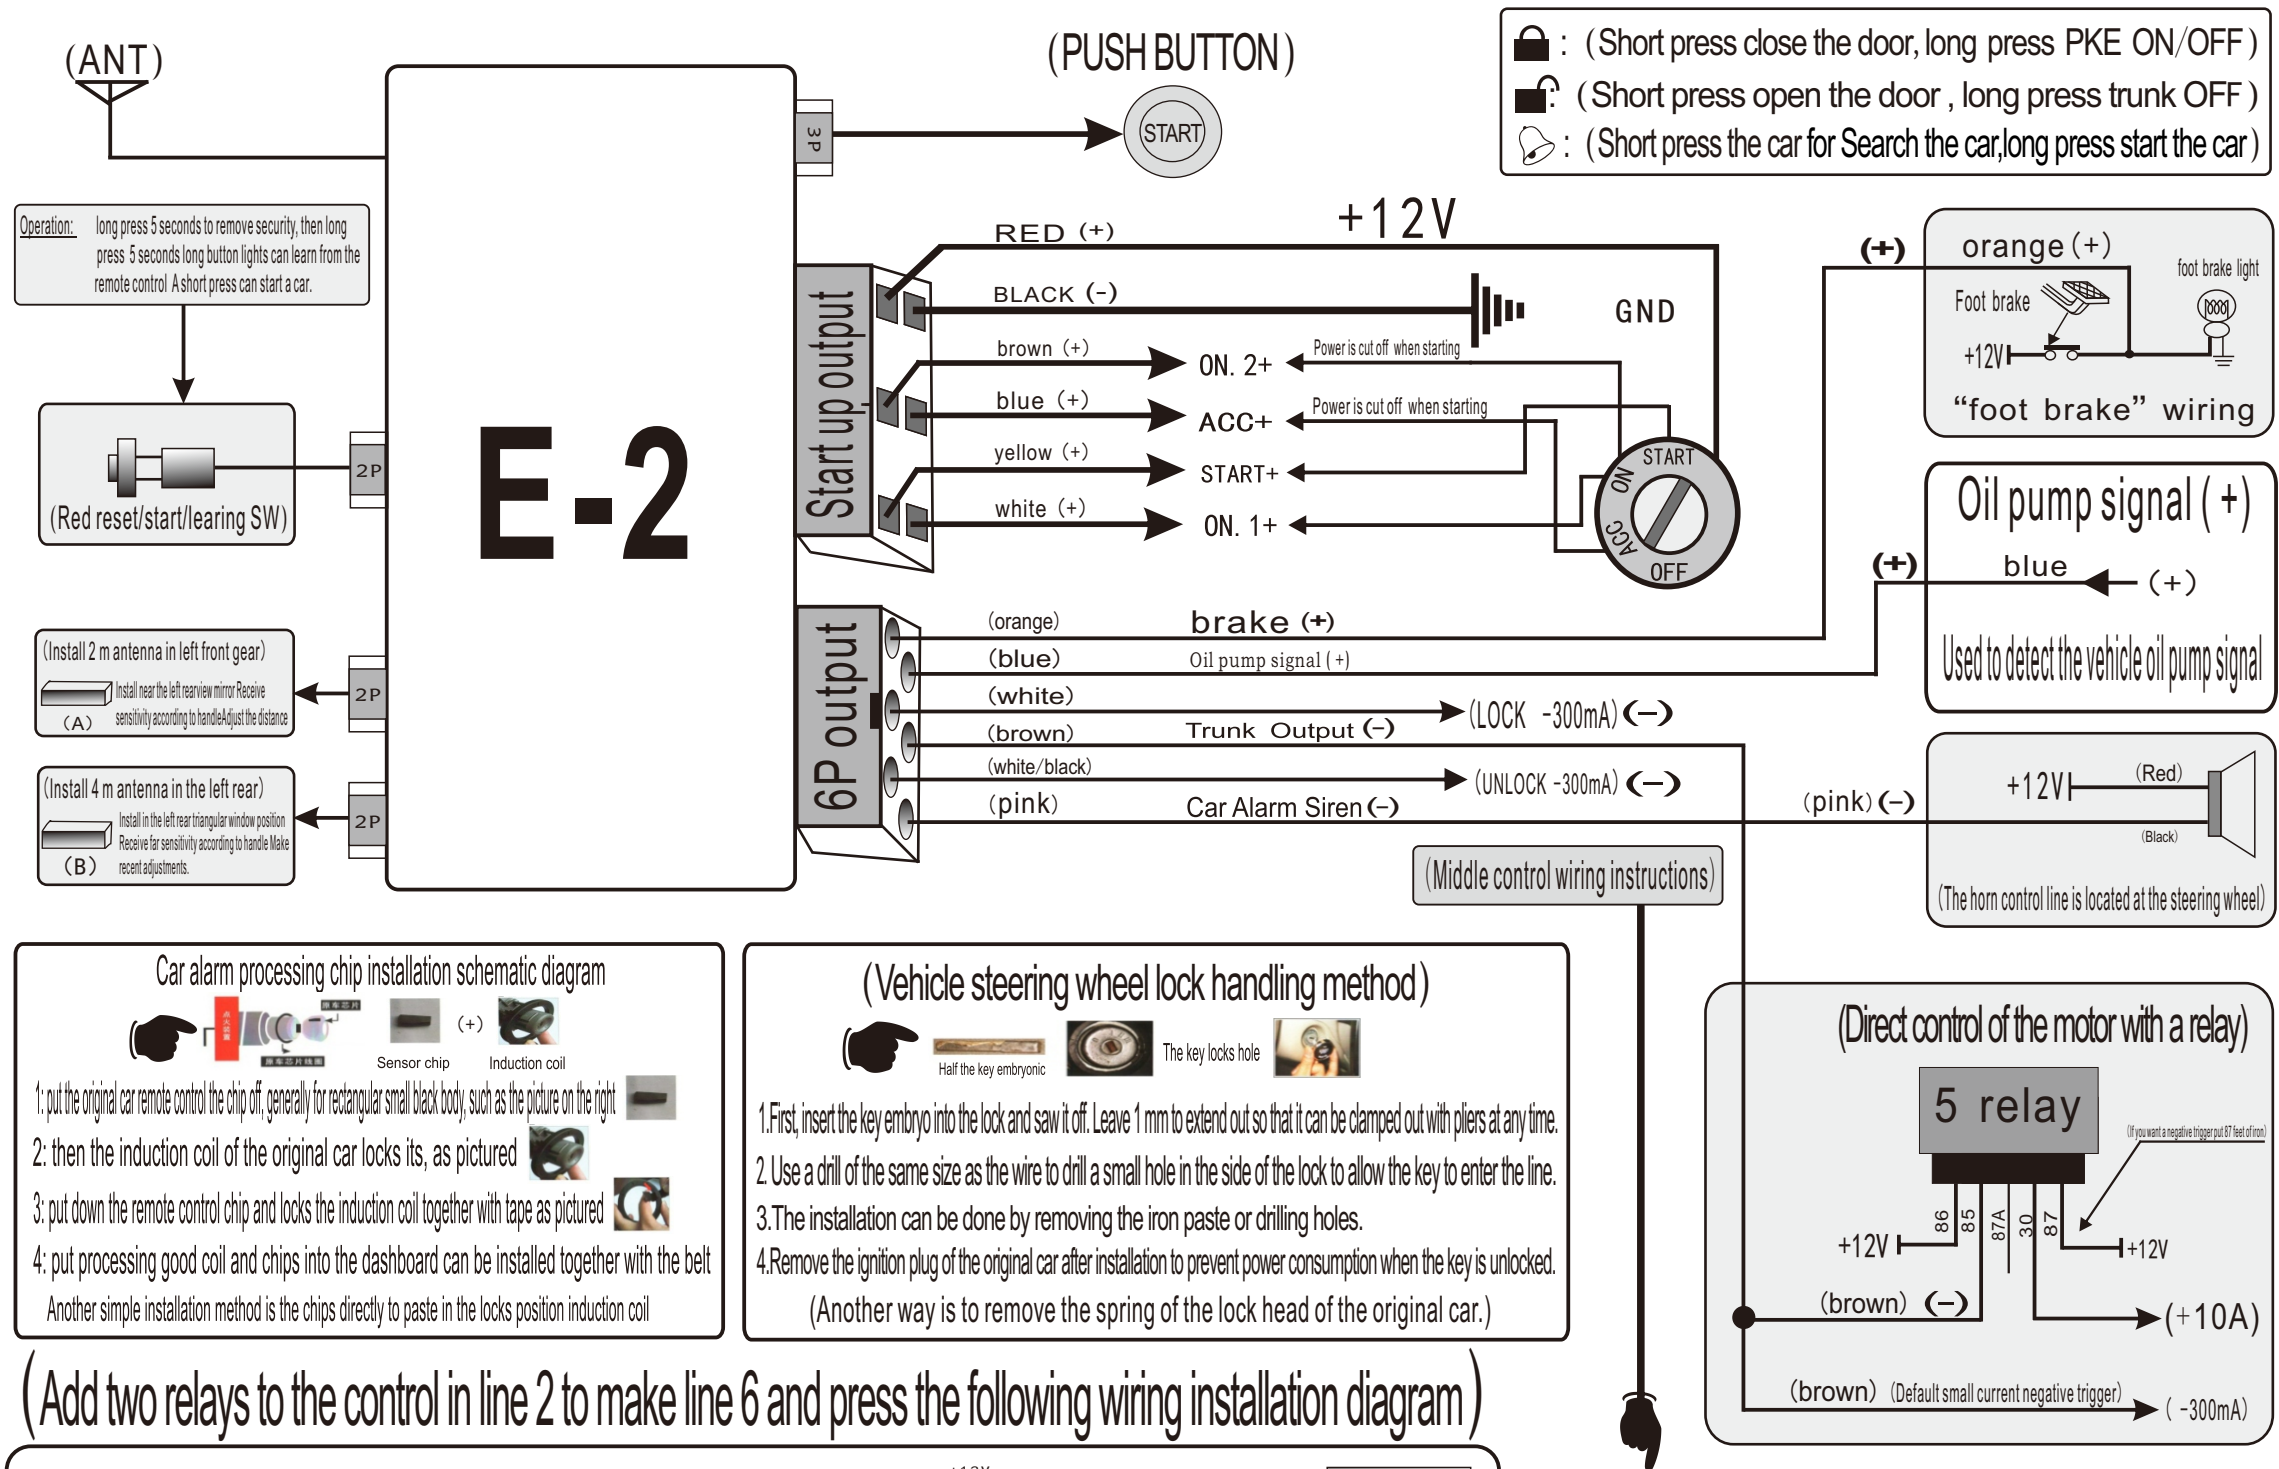

(Add two relays to the control in line 2 to make line 6 and press the following wiring installation diagram)

