

Apply the brand and code list

BRAND	CODE	BRAND	CODE	BRAND	CODE	BRAND	CODE	BRAND	CODE	BRAND	CODE
GREE	000-019	HITACHI	674-689	CHANGLING	284-295	ZUODAN	860	SHANGLING	408-413	MTSUKA	905
HAER	020-037	PANASONIC	690-705	CHUANGHUA	296-302	NISO	861	SHENBAO	414-417	NOFGA	906
MIDEA	038-048	CARRIER	706-718	DAJINKING	303-304	TRANE	862-865	SHENGFENG	418-419	OPAL	907
CHANGHONG	049-071	FUJITSU	719-736	DAMUZHI	305	SUNBURG	866	SHUAIKANG	420-422	PEREG	908
CHIGO	072-089	SHENGBAO	737-743	DAYU	306-311	NATIONAL	867	SHUANGLING	423-424	PLOCT	909
HABA0	090-108	SHARP	744-750	DONGXIA	312-316	COMBINE	868	SHUANGLU	425-428	RHCSS	910
KE.ON	109-118	DAIKIN	751-774	DUNAN	317-319	LOKEN-SEBO	869	SONGXING	429	SAPORO	911
TC.	119	NEITIAN	775-786	GAIHA	320-330	HANSHINJ	870	SUOHUA	430-431	SENSOR	912
Gaanz	134-142	WHIRLPOOL	787-791	GRER	331-341	YOUNIAIER	871	SUOYI	432	SOWA	913-914
HUALING	143-158	YCRK	792-793	GUQIAO	335-336	QIONGSHENG	872	TIANJIN	433	SPEED	915
CHUNLAN	159-166	LIANGYU	794	GUANGDA	337-341	JOHNSO	873-874	TIANYUAN	435-440	STARIGHI-SIRCON	916
AUX	167-184	DAYU	796-797	AWAGO	342	CHENGYUAN	875	WANBAO	441-445	TADAIR	917-924
SHINCO	185-188	MCQUAY	798-803	HUAKE	343	HUANGHE	876-877	WEILI	446-452	ADELONG	925
AUCMA	189-207	AKIPA	804	HUAMEI	344-346	YIDONG	878	WUFENG	453-456	AOLNBASI	926-927
HISENSE	208-217	KL MATAIR	805-810	HUIFENG	347-353	SWAN	879	XILENG	457-460	CHUANYAN	928
FELU	208-221	KRIS	811	JIALE	354	SERENE	880	XIANKE	461-465	DAKE	929
DONGBAO	222-228	NIKKO	812-813	JIANGNAN	355	ACSOM	881	XIAOYA	466-473	LONGHE	930
DONGXINBAO	229	DAOTIAN	814-817	JIESHIDA	356-358	AMICO	882	XINGHE	474-477	PUYI	931
XINFEI	230-239	TECO	818-828	JINBEIJING	359	ALPIN	883-886	PANDA	478-483	SANYE	932
MINGXINBOYIN	240	CHANGGU	829-831	JINSONG	360-363	AMICO	887	YANGZI	484-491	SONGLINXIA	933
AIDELONG	242-247	KCLIN	839	KONKA	364-367	APTON	888	YAOMA	492-496	TAIYA	934
AITE	248-253	SIGMA	840-843	UNI-AIR	368-370	BOERKA	889	Electolux	497	WANGZI	935
AOLI	254-255	SANZUAN	844	KANGLI	371-374	COLROLLA	890	YINGYAN	505-515	XONGDI	936
AOKE	256-259	CHANGFENG	845	LANBO	375-386	CONSUL	891	YUTU	516-530	HEMLTON	937
BA XUE	260-261	SOGO	846	LEHUA	387-389	DE.ONGHI	892	JINDA	531	SAIJU	938
GAOSHIDA	262-263	SCVA	847	LIKAIER	390-393	ELCO	893	ZHONGYI	534-536	SAJU DENK	939-941
BE JINGJINGDIAN	264	NISO	848-849	MEILING	394-397	ELECTER	894-899	SANYO	537-588	MINGYI	942-943
LITTLESWAN	266-269	SHAMEI	850	HICON	398	FEDDERS	900	MTSUBISHI	589-635	FEIGE	944-946
POLO	270-273	FEILU	851	QIXING	399	FELEDRICH	901	LG	636-645	SAJU DENKI	947-949
BOSHIGAO	274-277	TONLY	852-853	RICAI	400-401	FERROLOT	902	SAMSUNG	646-665	SAIJU	950-951
BOSHI	278-280	XINLE	854-858	RIJIANG	402-406	FIRST	903	TOSHIBA	666-673	OTHERS	952-999
CAXIN	281-283	XINLING	859	SHANXING	407	HE.TON	904				

The company reserves the final interpretation of this manual, the design and technical parameters, if there is any change, without prior notice.

 
K-1028E

Universal air conditioner remote control operating instructions

Product characteristics

K-1028E universal air conditioner remote control, basically can remote control most of the brands and models of air conditioner at home and abroad. Has brand point-to-point speed fast searching function, far enough from launch, set up easy, simple operation, novel appearance, comfortable nature, bring you endless convenient enjoyment. uses the large screen LCD display, make your Settings, operating at a glance, built-in clock electric heating and timing on/off function, and add lighting features, bring you more convenient!

Panel description

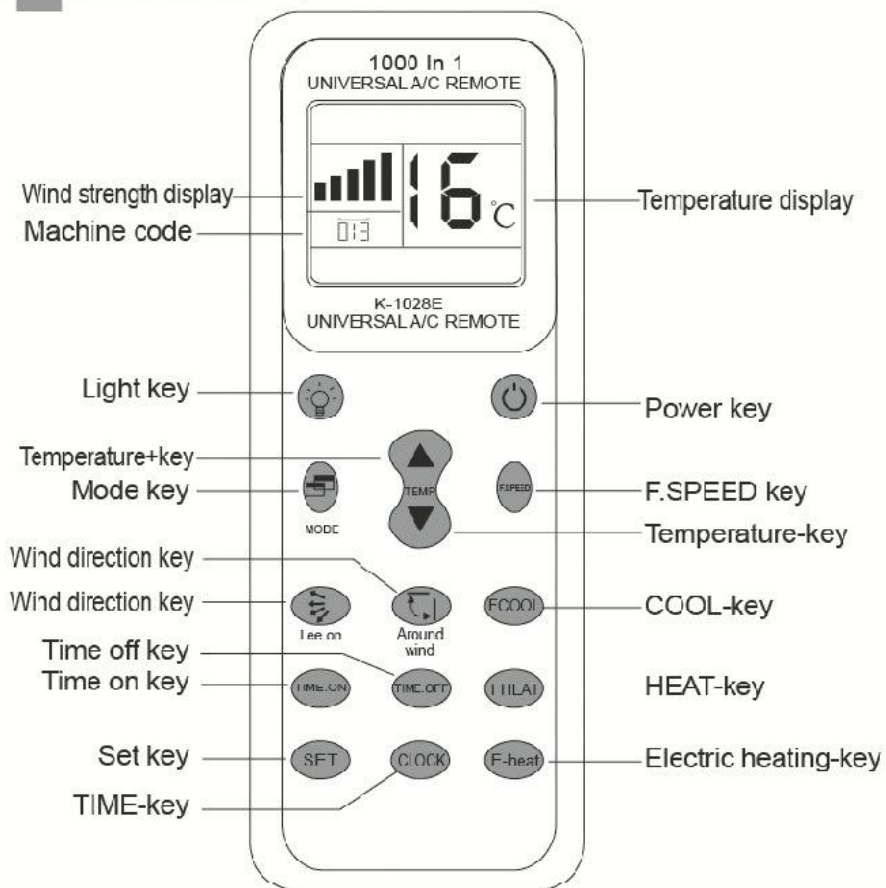

Avoid setting function

Electricity on a remote control can control the mainstream brands on the market: Gree (YBDF2), Sanlingzhonggong 388, Midea, Toshiba, Chunlan, Haier, Hualing, etc.


Setting of the remote control

There are four set the remote control method (A, B, C, D), please choose one

A Brand point-to-point speed quick search


1

Manually open the air conditioner power supply, the remote control on the air conditioner receiving window.

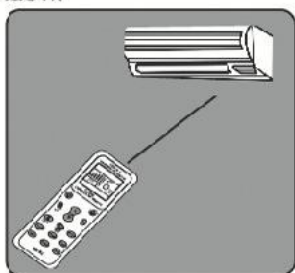





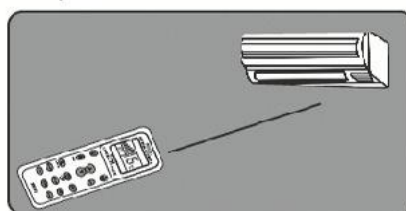







2

Corresponding you hold down the brand of "code" button, the code is shown "----" and flashing, until the air conditioner "di", automatically opens, loosen the key, set up complete.




Multifunctional brand of table

 ON/OFF	 TEMP	 TEMP	 FAN	 MODE	 LEE ON
GREE/HAIER	CHANGHONG/MIDEA	CHIGO/AUX	CHUNLAN/AUCMA	HISENSE/KELON	HABAO/OTHERS
 Around wind	 TIME.ON	 TIME.CFF	 COOL	 HEAT	 TIME
TOU/HUALING/SHANGJING	MTSUASH/SHARP	TOSHIBA/SANY/NEC	LG/SAMSUNG	Hitachi/Panasonic	Electolux/FUJITSU

B Digital automatic search suitable model

1



Manually open the air conditioner power supply, the remote control on the air conditioner receiving window.

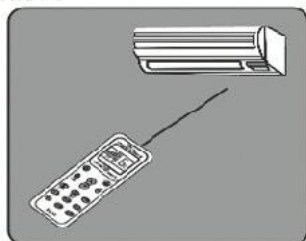

Test keys function is correct, if correct, the code is valid, if not correct please repeat step 2

2

Press "set" key not to put until the code is shown "-" and flashing into fast search suitable model state at this time, pay close attention to the status of your air conditioner, until the air conditioner automatically open, let go "set" key to stop the search.

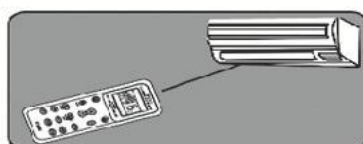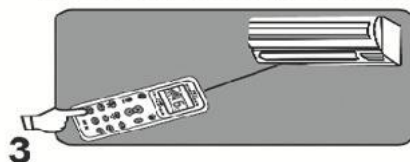

C Human input code method


1

Manually turn on air conditioning power, from the last page "code table" find out what you want to remote control models of the air conditioner, and find out the first code. For example, Haier 020-037

2

Press "set" key not to put (about 5 seconds), the model for the code in a window blink when loosening, press the "temperature▲" or "temperature▼" key, until the required code displayed on the window and flashing; such as code correctly, air conditioning opens;

BRAND	CODE
HAIER	020-037


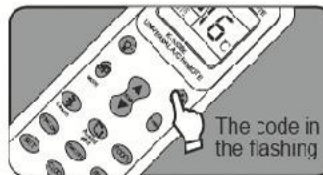


3



Press the "set" key, the selected model code will stop flashing,

4

Test the remote control button is valid, effective and set up. Invalid, repeat steps 2 to 3.

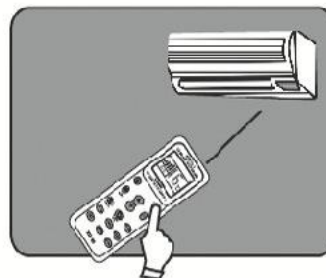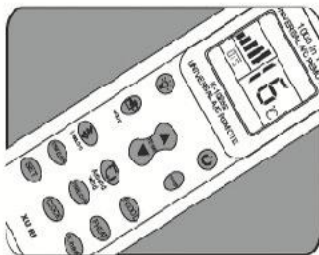


D Artificial search code method

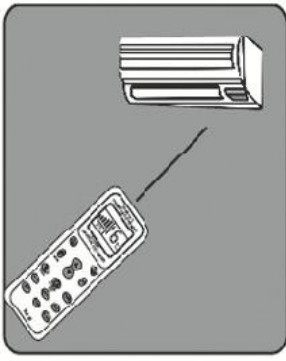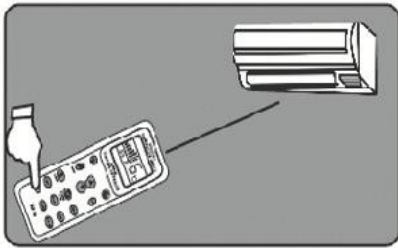1	2
Manually open the air conditioner power supply, the remote control on the air conditioner receiving window.	Press "set" key not to put (about 5 seconds), the model for the code in a window blink when loosening, According to the "temperature▲" key, pay close attention to the status of your air conditioner, until the air conditioner automatically open, according to the "set" key, and set up.
	

Set the clock function

Press the "clock" button (about 3 seconds) clock, is the state of the clock setting. Use "temperature▲" or "temperature▼" to adjust the current time, press again "clock" button to exit.

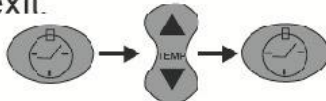

Time switch machine function

Equipped with the original remote control timing function, press the "timing" or "regular shutdown boot" key after, the air conditioner will light up regularly, said has entered the status regularly.

✘ Some timing boot function is in shutdown state.

Lighting function

In normal mode by pressing the "light" button lights 15 seconds press button automatically quit not lighting.



Pay attention to

- Make sure your air conditioner receiver is normal.
- When you prepare for long-term not use the remote control, please take out the battery.
- The improper operation of the remote control, likely disorder, internal program at this time, you just remove the battery, wait for after 35 minutes, remounted can normal use.