 
BLJ-253 AV-263C 后板使用功能说明:

## BLJ-253面板使用功能说明:



1. SD卡插口

 
2. 功能显示窗口

3 日盘插口

4.高音调节旋钮 5. 低音调节旋钮 6 音量调节旋钮 INPUT: 信号输入转换 PRFV: 选择上一曲 NFXT 选择下一曲 PLAY: MP3状态下, 为播放或暂停; FM状态下,为自动搜索电台。 RFPFAT:曲目或单曲循环

7 MP3 播放功能按钮


STOP: 停止按钮



2. 音頻輸入接口

3. 左右音箱输出接线夹 6.AC220交流电源开关

#### AV-263C 面板 使用功能说明:

 

1.MP3功能按钮 INPUT: 信号输入转换 PREV: 选择上一曲 NEXT: 选择下一曲


PLAY: MP3状态下, 为播放或暂停; FM状态下,为自动搜索电台,

2.高音调节旋钮 3 任音调节旋钮 4. 遥控接收窗口 5. 音量调节旋钮

6. U盘 SD卡 FM指示灯 7. U盘插口 8. 话筒音量控制

9. SD卡插口 10. 话筒1 输入插孔 11 话筒2 输入插孔

## 内置MP3播放器遥控器功能说明`

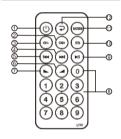

內 內置播放器待机和开机功能按键。

② FM收音状态下,下一个电台选择.

③ FM收音状态下,上一个电台选择。

④ FM收音状态下,向后微调频率. MP3播放状态下, 选择下一曲.

⑤ FM收音状态下,向前微调频率. MP3播放状态下, 选择上一曲.

⑥ 内置播放器音量增加功能按键

⑦ 内置播放器音量减少功能按键

图 内置播放器数字功能按键: MP3/FM播放时,可直接按某个数字 键,选择相对应歌曲或电台.注意:在选择1-9数字时需要等对应 的显示数字消失后,才可再按其他的数字,否则所按的数字会相

例如1:如果按5,显示5,待5消失后,即播放 第5首歌曲或电台,如果连续多按, 数字就会叠加,会播放该数字对应 的歌曲或电台。

例如2:按一下1,再接着按2,会显示12,即 播放第12首歌,依次类推.


③ 播放/暂停键:播放MP3时按压该键,系统在播放和暂停之间 切換:播放FM时,按压该键,系统会自动搜索FM电台,再压一下系统会停止搜台,在系统储存电台较少时,可按此键,让系统自动完成搜索本地能接收到的节目电台。

① EQ均衡效果选择键: MP3播放时, 按压该键, 可从播放器内置 的6种均衡效果中进行切换,

内置播放器输入模式功能转换.

① 重复模式功能按键: MP3播放时, 按压该键, 播放器在单曲重复 (ONE)和全盘重复(ALL)播放模式转换。

## BT-298A 面板 使用功能说明:

 

- 1. AC220V电源开关
- 2. SD卡插口 3 高音调节旋钮
- 4. U盘插口
- 5. 低音调节旋钮 6. 功能显示窗口 8. 话筒1 输入插孔
- 9. 话筒2 输入插孔 10. 音量调节旋钮
- 11. MP3 播放功能按钮
- MODF: 信号输入转换 ₩:选择上一曲
- : 选择下一曲 C):曲目或单曲循环
- :MP3状态下, 为播放或暂停: FM 7. 话简音量控制 状态下,按一下为自动搜索电台,


## BT-198A 面板使用功能说明:



 - 1. AC220V电源开关
- 2. U盘插口
- 3. SD卡插口 4. 话筒1 输入插孔
- 5. 遥控接收窗口
- 6. 话筒2 输入插孔 7. 话符音量控制
- 8. U盘 SD卡 FM收音状态指示灯 9. 话筒混响音量控制
- 10 高音调节旋钮 11. 低音调节旋钮
  - 12. 音乐音量调节旋钮 13. MP3 播放功能按钮 MODE: 信号输入转换
  - ₩:选择上一曲 ₩:选择下一曲
  - ▶ : MP3状态下, 为播放或暂停; FM状态下,为自动搜索电台,

## :曲目或单曲循环

## BT-298A BT-198A 后板使用功能说明:



- 1.FM 天线
- 4. 直流电源12V/5A 输入插孔
- 2. 音频输入接口 5. 蓝牙接收天线
- 3. 左右音箱输出接线夹 6. AC220V交流电源输入

## (内置蓝牙播放操作

1. 按面板上的功能转换键, 转换到蓝牙播放模式,

3. 播放手机蓝牙音乐时, 如有电话接入, 本设备会立即停止 播放音乐, 转为手机接听模式或转为对方声音进行放大, 不 需要本设备进行放大时, 可把手机上的蓝牙模式切换成听筒 模式即行.

## 故障排除

お隨现象

如果您在使用本设备时遇到下列困难,使用此故障指南 来帮助您解决这个问题,如果解决不了的问题,请咨询您最 近的经销商。

## 故障原因

没有声音

一边喇叭不响

声音不正常

严重的嗡嗡声或有吱吱噪声

### 交流电源线断开 不通电

- 连接在墙上插座或 墙上的插座是无效的
- 扬声器和设备断开
- 音量控制旋到了最小 喇叭线短路或断开
- 确保您设备正常连接
  - 没声音的那个声道没有正确连接
- 信号输入源单边 喇叭引线没接好,短路或开路
- 设备工作环境恶劣 高音和低音控制太低或太高
- 扬声器没正确连接,正负极性接反
- •
- 检查信号线是否正确连接
- 信号线的插头和插孔有脏物,接触不良

不要打开机盖, 谨防触电!





 
警告:切勿在潮湿或雨淋的地方使用本机器

非专业人员请勿拆卸机盖,需要检修时,请找有资质的维修人员检测维修.



#### Directions for use -


#### Functional description of bli-253 panel:



- 1. The SD card socket 2. Function display window
- 4. Treble adjustment knob 5.Bass control knob 6. Volume adjustment knob
- INPUT: signal INPUT conversion 3. Usb socket PREV: select the last sono NEXT: select the NEXT song
  - PLAY: in the state of MP3, PLAY or pause: FM is an automatic search station. REPEAT: track or single loop STOP: STOP button


7. Button of MP3 player function

#### Functional description of bli-253 av-263c rear panel:

 

- 2. Audio input interface 3. Left and right sound box output connector clip
- 4. Dc power supply 12V/5A input lack
- 5.AC220V ac power input
- 6.AC220 ac power switch

## Function description of av-263c panel:

 

1.MP3 function button INPUT: signal INPUT conversion 5. Volume adjustment knob PREV: select the last song NEXT: select the NEXT song

3. Bass adjusting knob


- 4. Remote receiving window 6. SD card FM indicator light on U disk 7. Heb encket PLAY: in the state of MP3, PLAY or pause; 8. Microphone volume control
- FM is an automatic search station. 9, SD card socket 2 Treble adjustment knob 10. Microphone 1 input jack 11. Microphone 2 input jack

0 4 3 4 nbuilt-in player standby and 6 power button. Under the condition of FM radio, a radio. (3) FM radio state, the last station selection.

- A FM radio frequency control condition, backward. MP3 player, select the next one.
- (5) FM radio frequency control state, forward. MP3 player, select the next one.
- 6 built-in player volume increase function keys (7) built-in player volume reduction function keys
- built-in player digital function keys: MP3/FM player, can be directly by a number Keys, select the corresponding song or radio. Note: when choosing a 1-9 number, the corresponding After the display number is gone, it is only available for a number of other digits, or the number will be Superimposed.
  - For example, if 1: is 5, 5, 5, or play
  - Fifth songs or radio stations, if the continuous multi press,
  - The number will be superimposed, which will be played on the same number.
- A song or radio
- For example, 2; press 1, then press 2, will show 12, that is, the
- Play twelfth songs, and so on. play / pause key: press the key when playing MP3, and the system is in play and pause.
  - Switch: FM playback, press the button, the system will automatically search for FM radio, again The system will stop the search. When the system is stored in a small station, it can press this button to make the system. Automatically complete the search local radio station.
- EQ balance effect selection key: MP3 player, press the key, can be built from the player The 6 equilibrium effects are switched.
- n built-in player input mode conversion.
- nepeat mode function keys: MP3 player, press the key, the player in the repeat
  - (ONE) and the total repeat (ALL) playback mode conversion.

#### Directions for use -
 
## Function description of bt-298a panel:



- 1 AC220V power switch 2. The SD card socket
- 3. Troble adjustment knob.
- 4. The rish socket 5 Base control knob
- 6. Function display window
- 7. Microphone volume control

1.AC220V power switch

3. The SD card socket

4. Microphone 1 input jack

6. Microphone 2 input jack


5.Remote receiving window

7.Microphone volume control

2 Hehencket

- 11.MP3 function button MODE: signal input conversion
- : select the previous song
- ₩: select the next song
- ⇒II: MP3, for play or pause: In the FM state, click to automatically search the station
- 8. Microphone 1 input jack : track or single cycle
- 9. Microphone 2 input jack 10. Volume adjustment knob Functional description of bt-198a panel:

## Functional description of bt-298a bt-198a back plate:

 

- 2. Audio input interface 3. Left and right sound box output connector clip
- 4. Dc power supply 12V/5A input lack 5. Bluetooth antenna
- 6.AC220 ac power switch

#### Built in Bluetooth player operation

Press the function conversion key on the panel and switch to bluetooth playback mode.

Smart phone bluetooth play operation: turn on the function of bluetooth device. Then turn on the bluetooth function on the smartphone and tag the (search Settings) on the phone

The name of the local bluetooth will be displayed on the available device. Click connect and wait for connection

When you are on, the horn will indicate (beep) that you are connected and then open your hand

The music player on the phone

Mode is ok

Music, play/pause, volume level) with the button on the machine panel (last song, Next track, play/pause, volume level) two-way control.

3. When playing the bluetooth music of mobile phone, the device will stop immediately if there is phone access Play music, turn to phone call mode or turn to the other voice for amplification, no

When this device is needed for amplification, you can switch the bluetooth mode on the phone to the receiver

#### MODE: signal input conversion ₩: select the previous song

: select the next song 8. SD card /usb/FM radio status M: MP3, for play or pause;

10. Music Treble adjustment knob

12. Music volume adjustment knob

11 Music Bass control knob


13 MP3 function button

FM is an automatic search station.

### Trouble Shooting

If you experience any of the following difficulties while using the unit use this trouble shooting guide to help you remedy the problem, should any problem persist, consult you nearest dealer

## indicator light on U disk 9.Microphone reverb volume control 😂: track or single cycle PROBLEM

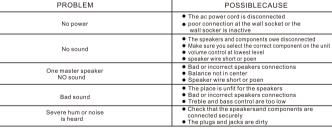





Warning: do not use this machine in wet or rain.

Non professional personnel do not remove the cover. need to repair, please find a qualification Maintenance personnel testing and maintenance.

# 蓝牙连接简易操作流程图及蓝牙问题解决方法

$\overline{}$		
功放机	功放机 (音乐信号选择 把功机上的音乐辑 选择到USB播放状	
手机蓝牙操作流程	打开手机设置  拉斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯斯	点击搜索设备 列表显示功放蓝牙名称 点击连接 音乐播放器 → 手机音量
	故障现象	故障原因及解决办法
	手机搜索不到蓝牙名称	1. 功放机上的蓝牙功能未能打开——把功放机上的蓝牙功能打开(蓝牙灯亮及显示bLUE/81指示) 2. 被另一台蓝牙设备进接————————————————————————————————————
	手机蓝牙已经连接, 但播放音乐无声音.	1. 功放机上的音频输入转换未能切换到)盘蓝牙指示模式把功放机上的音频输入转换切换到)盘蓝牙显示及指示状态。 2. 功放机上的音乐音量未开大把功放机上音乐音量调到合适听觉位置。 3. 手机上的音量未开大
	手机蓝牙已经连接, 但播放音乐有卡顿.	<ol> <li>手机离功放太远距离功放接收手机蓝牙最佳距离在4米以内。</li> <li>功放周围30CM有金属物体屏蔽把功放周围金属物件移开。</li> <li>手机播放网络歌曲卡顿手机信号不好或NIFI数据弱 关闭数据连接改用本地歌曲播放。</li> <li>手机内存不足或手机的配置过低清理手机内存或更换高配置的手机播放。</li> </ol>
	手机蓝牙已经连接, 但播放音乐只有一 个音箱响.	1. 功放上的平衡旋钮或E0调节未调整正确把功放面板平衡旋钮(BAL或BALANCE)

# 蓝牙播放设备连接操作说明

本功放蓝牙接收可支持所有蓝牙音乐设备播放连接,操作如下:

1. 把功放机上的音頻輸入选择功能(INPUT或MODE)选择到U盘播放设备(USB/SD/BT/FM) 状态,再按U盘播放选择按钮(MODE或INPUT),选择到蓝牙播放状态(带显示屏的功放,蓝牙 状态显示(bLUE)或不带显示屏的功放转换到蓝牙会有英文语音提示Bluetooth目指示灯处于快闪状态)。

## 2. 智能手机蓝牙连接操作:

第二步: 当连接成功后, 打开手机上的音乐播放器, 并把手机上音量调到最大. 选择自己喜欢听的歌曲播放即可. 如果手机没有安装音乐播放器, 可在安卓市场或应用市场下载(酷 我音乐盒)或(酷狗音乐盒).

## 3. 非智能手机蓝牙连接操作:

非安卓手机蓝牙操作:这类型的手机需要配对功放机上的蓝牙对码,即手机上的蓝牙开启后,搜索到本设备蓝牙名称,点击连接会提示输入配对的号码,这时需要输入0000或1234连接,连接成功后,喇叭会提示(哪)一声响,说明已连接上.连接后,即可播放音乐. 注意:连接前请先确认该手机是否支持营牙播放功能.

- 4.播放手机蓝牙音乐时,如有电话接入,功放上的蓝牙会立即停止播放音乐,转为手机接听模式 或转为对方声音进行放大,不需要本设备进行放大时,可把手机上的蓝牙模式切换成听筒模式即可.
- 5.播放手机上的音乐时,(上一曲,下一曲,播放/暂停,音量大小)可与机器面板上的按钮(上一曲,下一曲,播放/暂停,音量大小)双向控制。
- 6. 当功放机上的蓝牙设备被第一台手机或第一台其他机型蓝牙设备成功配对后,且处于功放上的蓝牙能识别的区域处于开启状态,若需要同一区域使用第二台手机蓝牙或另一台蓝牙设备连接时,需要关闭第一台手机蓝牙或第一台其他机型蓝牙设备,才可以进行第二台手机蓝牙或第二台其他机型蓝牙设备的配对连接.
- 7. 平板电脑连接与智能手机蓝牙连接操作相同.

$\overline{}$			
power amplifier	power amplifier (Music Signal Selection)  Enter the music on the machine Select to USB Play Status	MODE/INPUT (Touch the key to select)  Select to Bluetooth Play Status Need to press several times more conversion  The display shows bLUEtooth playback: Blue Or LED displays bluetooth status	
Mobile Phone Bluetooth Operation Process	Set up  Turn on mobile phone settin  Detection	Search equipment Bluetooth or BT	
	Open detection open	Click on the search device  The list shows the Bluetooth name of the power amplifier. click the link	
	Bluetooth or BT Connected	Music player Mobile phone volume	
	The successful connection wil take place in the Show conne to list		
Solution to Bluetooth Usage Problem	Failure phenomenon	Cause of failure and solutions	
	The phone could not find the Bluetooth name.	1. The Bluetooth function on the power amplifier has not been turned on-turn on the Bluetooth function on the power amplifier (the Bluetooth light is on and the bLUEP if indication is displayed) and the blueton of the blueton of the paired and connected Bluetooth device.  2. Search distance, too far from power amplifier-search power amplifier-search power amplifier bluetooth in close range (search within 1 meter is recommended).  4. The configuration of the mobile phone is too low, the Bluetooth version is too low, or the Bluetooth of the mobile phone itself fails-change to another mobile phone for testing.	
	The mobile phone Bluetooth has beenconnected. But there is no . sound when playing music.	1. The audio input conversion on the power amplifier failed to switch to the USB files of rive Buleotion indication mode switch the audio input conversion on the power amplifier to the USB flash drive Blueboth display and indication status. 2. The massive foulteen on the power amplifier is not turned on-turn the music volume on the power amplifier to the appropriate hearing position. 3. The volume on the mobile phone is not of-rum the volume on the handset to the maximum. 4. Compatible Problem of Player Software-Replacing with Other Music Player.	
	The mobile phone Bluetooth hasbeen connected. But there is Caton playing music.	Mobile phone is too far away from power amplifier-the best distance for power amplifier to receive mobile phone Bluedooth is within 4 neters.  Metal objects are shielded 30CM around the power amplifier-remove the metal objects around the power amplifier.  Mobile Phone Plays Ofnier Song Cation-Mobile Phone Signal Is Bad or WiFI Data Is Weak, Close Data Connection and Switch to Local Song Plays.  Insufficient memory or low configuration of the mobile phone-clean up the memory of the mobile phone or replace the mobile phone with high configuration for playing.	
	The mobile phone Bluetooth has been connected. But there is only one way to play music. A sound box rang.	The BALANCE knob or EQ adjustment on the power amplifier is not adjusted correctly-turn the power amplifier panel balance knob (BAL or BALANCE) Turn to middle or EQ fader to middle.     The speaker on the power amplifier is not connected properly-reconnect the left and right channels of the speaker cable.     The tone function of the playing software on the mobile phone is turned on and set incorrectly-change the playing software or reinstall it.	

## Operating Instructions for Bluetooth Playback Equipment Connection

This power amplifier Bluetooth receiver can support all Bluetooth music devices to play and connect. The operation is as follows:

- 1. select the audio INPUT selection function (input or MODE) on the power amplifier to the USB flash drive playback device (USB/SD/BT/FM) State, and then press the U disk play selection button (MODE or INPUT), select to Bluetooth play state (power amplifier with display screen, Bluetooth The status display (bLUE) or the power amplifier without display screen will have English voice prompt Bluetooth and the indicator light is in flash state when switching to Bluetooth).
- 2. Bluetooth connection operation of smart phone:
  - Step 1: Click the setting chart ( setup) on the mobile phone interface to enter the mobile phone system settings and find the Bluetooth option ( but it is blue), if Some mobile phones do not see the Bluetooth option. It is possible that the mobile phone system displays differently. You can find the Bluetooth option in (more settings), Slide the Bluetooth option to the right to turn on ( blue 1), after turning on the Bluetooth function, the Bluetooth option menu will appear on the mobile phone interface. Then slide the option displayed with the detection function to the right (Deutebullet), and click(search device), and it will be displayed in the The search list displays the searched Bluetooth devicename (Bluetooth or BT), and then click the device name connection. When the connection becomes After work, the mobile phone system will display (paired or connected). If the list does not show the name of the power amplifier Bluetooth device, repeat it. Tap (search device) until the list shows (Bluetooth) or (BT).

Step 2: When the connection is successful, turn on the music player on your mobile phone and turn the volume on your phone to the maximum. Select your favorite if the mobile phone does not have a music player installed, it can be downloaded from Android market or application market (cool My music box).

- 3. Non-smart phone Bluetooth connection operation:
  - Bluetooth operation of non-Android mobile phones: this type of mobile phone needs to be paired with the bluetooth pairing code on the power amplifier, i.e. after bluetooth on the mobile phone is turned on, the bluetooth name of the device is searched, clicking on the connection will prompt the input of the paired number, then 0000 or 1234 connection is required, after the connection is successful, the horn will prompt (beep) a sound to indicate that it is connected. after connection, music can be played. note: please confirm whether the mobile phone supports bluetooth playback function before connection.
- 4. When playing mobile phone Bluetooth music, if there is a phone connection, the Bluetooth on the power amplifier will immediately stop playing music, switch to the mobile phone answering mode or switch to the other party's voice for amplification. When this device is not needed for amplification, the Bluetooth mode on the handset can be switched to the handset mode.
- When playing music on the mobile phone, (previous song, next song, play/pause, volume level)
  can be controlled bi-directionally with the buttons on the machine panel (previous song, next song,
  play/pause, volume level).
- 6. When the Bluetooth device on the power amplifier is successfully paired by the first mobile phone or the Bluetooth device of the first other model, and the area recognized by Bluetooth on the power amplifier is in an open state, if the same area needs to be connected by using the Bluetooth device of the second mobile phone or another Bluetooth device, the Bluetooth device of the first mobile phone or the Bluetooth device of the first other model needs to be turned off before the pairing connection of the Bluetooth device of the second mobile phone or the Bluetooth device of the second other model can be carried out.
- 7. The connection of tablet computer is the same as the Bluetooth connection of smart phone.