L\07/**=**

LAOTIE

User Manual

TI40 PRO说明书 尺寸: 140*210mm

200g铜版纸-哑膜-骑马钉

CONTENTS

Story ———	001
duct Introduction ————————————————————————————————————	002
n Part Introduction ——————————	003
ctric Scooter Packing List ————————————————————————————————————	003
embly Instructions	004
ding Instructions	005
arge Your Scooter	006
note Control Instructions ————————————————————————————————————	007
play Manual ————————————————————————————————————	007
ecification ————	010
ety Instructions ————————————————————————————————————	011
ntenance ————	012
ntact Us —————	014

Dear Customer:

Long press "Power" Button for 3 seconds to start or shut down the

In power on condition, short press "Power" Button to switch

Note: TRIP is Single mileage, ODO is cumulative mileage, VOL is

Speed Mode Switch: In power on condition, short press "Mode" Button

Enter/Exit Settings Interface : Long press the "Mode" & "Power" Button

Detail

Brightest

1: MILE

Default: 72V

0: no sleep

Other numbers are sleep time,

Range: 1-60 (minute)

P01-P20 Switch: Short press "Mode" button to switch code number.

Value Adjustment: Short press "Mode" or "Power" Button to adjust.

be automatically power off.

Display content switch:

battery voltage.

to switch speed mode.

together for 3 second.

Parameters Settings:

Code Number Meaning

P01 Backlight brightness

P02 Mileage unit

P03 Voltage level

P04 Sleep time

Invalid

____ 800 <u>____</u>

P05

TRIP/ODO/VOL on the LCD display.

Auto OFF: After five minutes of non-using any function, the scooter will

REMOTE CONTROL INSTRUCTIONS

Lock Your Scooter

Unlock Your Scooter

Press the "Lock" button 1 time to lock the

button to remove the alert.

Scooter will be unlocked.

--- Baterry

— Trip time

Press the "Flash" button 2 times

When hear "beep" sounds 2 times, the

scooter will be on alert. Press the "unlock"

Thank you for choosing our company designed lithium battery e-scooter In life with lithium battery e-scooter you will feel the great function and excellent performance and high quality of our e-scooter which will bring you a pleasant trip.

OUR STORY ____

LAOTIE means building a strong and close relationship with customers in the East by using quality products as a bridge. The brand is centered on intelligent and environmentally friendly outings, providing professional electronic cycling products for people who pursue the limit and love outdoor sports.

LAOTIE provides customers with 100% power and fun, specializing in electric scooters, electric bikes & electric skateboards. Every product we sell is thoroughly tested internally and externally to meet the most stringent quality and safety standards.

Our future will move towards a more intelligent and modular era. LAOTIE will continue to provide better products for customers who love off-road or competition. Follow your heart and thank you for choosing

PRODUCT INTRODUCTION

Product Overview

OUR FACTORY

Our factory has more than 9,000 square meters, with an annual production capacity of 80,000 units. It has many R&D engineers with more than 10 years of experience, which specializes in OEM customization, ODM development. design, production and processing of various models. Our products have been obtained many certifications, such as European CE, RoHS, MSDS, UN38.3 and so on.Furthermore, our factory established three global overseas warehouses: EDA warehouse in Poland, Golden Eagle warehouse in Germany, and self-built warehouses in New York and strategically deployed overseas markets for independent sales.

Never Stop, Go Ahead!

Range: 0-255 (Default: 27)

Range 0-100km/h (Default: 25).

0: zero start;

1: non-zero start

The range is 0-4 (Default: 0).

0: weakest. 4: hardest

1: Softest 5: Hardest

Default: 63V

Press and hold the plus button for

5 seconds to reset ODO

0: disable cruise

1: enable cruise

The range is 1-5 (Default: 3).

100: Cancel the speed limit.

_____ 001 ____

measuring magnets

Speed limit

Zero start, non-zero

start setting

Invalid

start strength

Invalid

voltage value

optional

Invalid

Invalid

Invalid

------ 009 ------

P11 EABS switch choose

P09

P13

P18

P20

P14 Invalid

P15 Controller under

P16 ODO reset setting

P17 Automatic cruise



_____ 002 _____

Specifications

LAOTIE

TI40 Pro

Dual 4000W (peek power) Motors

Front and Rear ZOOM Oil Brake & EABS

72V43.2Ah Lithium Battery

Max Range Dual Motor 70-80 km | Single Motor 150 km

_____ 010 ____

50A Controller * 2

- ① Front Light Button
- ② Turn Light Button
- ③ Horn Button
- 4 LCD Display ⑤ Accelerator
- ⑥ ECO/ TURBO Switch Button



ELECTRIC SCOOTER PACKING LIST

_____ 003 _____

-scooter	1 PC
Charger	1 PC
lanual	1 PC
Remote Control	2 PCS
amp of Remote Control	1 PC
crews & Wrench	1 SET

Please contact us with no hesitate there is any breakage or missing when you open package .We will replace it for you as soon as possible. Have a nice day!

ASSEMBLY INSTRUCTIONS

- ① Loosen the handlebar screws, secure the handlebars, and tighten
- the screws
- ② Handlebar installation complete ③ Tighten the turn signal screw
- ④ Turn signal installation completed
- ⑤ Press the cover on the rear fender ⑥ Rear fender installed





------ 004 ------

FOLDING INSTRUCTIONS

- Loose the 4 screws to dismantle the handle ② Pull the silver screw to the right to unlock the safety lock
- ③ Press the black button down to fold the scooter 4 Done





------ 005 ------

CHARGE YOUR SCOOTER





When charging is completed, put back the rubber flap

------ 006 ------

SPECIFICATION

Items

Brand

Model

Motor

Battery

Tire

Brake

Controller

Climbing Angle 50°

Max Load 200KG

Gross Weight 69.6KG

Body Size 145x30x132m

Folding Size 153x30x53cm

Package Size 156x36x59cm

Max Speed 110 km/h

SAFETY TIPS	2	(S) (A) (A) (A) (A) (A) (A) (A) (A) (A) (A
DO NOT ride in the rain	Avoid obstacles while riding	DO NOT ride with a single hand or foot
	6	6
DO NOT ride on motor way	DO NOT rotate the handle violently while riding at a high speed	DO NOT ride in water deeper than 2cm

SAFETY INSTRUCTIONS

- This manual has been created to help you understand the safe use and maintenance of LAOTIE Ti40 Pro electric scooter.
- Please make sure the screw of the wheel tightened well and the braking system works well before driving the scooter. Persons without excellent vision, balance, coordination, reflex, muscle and bone strength and good decision-making capabilities should not use this
- The user of this product assumes ALL risks associated with its use. To minimize these RISKS, the user must wear a safety helmet, goggles, gloves, elbow and knee pads and appropriate footwear.
- This manual contains important safety information. It is your responsibility to review this information and make sure that all riders understand all warnings, cautions, instructions and safety. We're not liable for incidental damages or consequential damages due directly or indirectly to the use of this product. Riding the electric scooter can be a hazardous activity. Certain conditions may cause the equipment to fail without fault of the manufacturer. Like other electric products, the scooter can and is intended to move and it is therefore possible to lose control, fall off and/or get into dangerous situations that no amount of care, instruction or expertise can eliminate. If such things occur you can be seriously injured or die, even when using safety equipment and other precautions. RIDE AT YOUR OWN RISK AND USE COMMON SENSE.

------ 011 ------

ALWAYS FOLLOW THE LOCAL LAWS AND REGULATIONS.

 Understand your local laws permitting the use of Electric scootersNever ride your scooter in conditions of poor visibility.

 Do not do stunts, wheelies or jumps. They will increase your chances of injury and damage your LAOTIE Es40 Pro. Never carry passengers

MAINTENANCE

Cleaning and storage

- If you see stains on the scooter's body, wipe them off with a damp cloth. · If the stains won't scrub off, put on some toothpaste, and brush them with a toothbrush, then wipe them off with a damp cloth.
- · If you see scratches on plastic parts, use sandpaper or other abrasive materials to polish them.

Notes: do not clean the scooter with alcohol, gasoline, kerosene or other corrosive and volatile chemical solvents to prevent dire damage. Do not wash the scooter with a high-pressure water spray.

• During cleaning, make sure that the scooter's turned off, the charging cable is unplugged, and the rubber flap is closed as water leakage may result in electric shock or other major problems.

 When the scooter's not in use, keep it indoors where it is dry and cool.Do not put it outdoors for long time. Excessive sunlight, overheating and over cooling accelerate tire aging and compromise the scooter and the battery pack's lifespan.

_____ 012 _____

Battery maintenance

- 1. Use original battery packs, use of other models or brands may bring about safety issues;
- Do not touch the contacts. Do not dismantle or puncture the casing. Keep the contacts away from metal objects to prevent short circuit which may result in battery damage or even injuries and deaths; 3. Use original power adapter to avoid potential damage or fire;
- 4. Mishandling of used batteries may do tremendous harm to the environment. To protect natural environment, please follow local regulations to properly dispose used batteries.
- 5. After every use, fully charge the battery to prolong its lifespan. Recommended charging time Charging with 1 charger: 12~13 hours

Charging with 2 chargers: 6~7 hours

- Do not place the battery in an environment where the ambient temperature
- is higher than 50°C or lower than -20°C (e.g., do not leave the scooter or the battery pack in a car under direct sunlight for an extended time). Do not throw the battery pack into fire as it may lead to battery failure, battery overheating, and even another fire.
- If the scooter is expected to be left idle for more than 30 days, please fully charge the battery and place it in a dry and cool place. Keep in mind to recharge it every 60 days to protect the battery from potential damage which is beyond limited warranty.
- Always charge before exhausting the battery to prolong the battery's lifespan. The battery pack performs better at normal temperature, and poor when it is below 0°C. For instance, when it is below -20°C, the riding range is only half or less at normal state. When the temperature rises, the riding

------ 013 ------

 Note: fully charged Es40Pro Electric Scooter will last for 120-180 days. The built-in intelligent chip will keep a log of its charging and discharging records. The damage caused by prolonged no charge is irreversible and beyond limited warranty. Once the damage is done, the battery can not be recharged (non-professionals are forbidden to dismantle the battery pack, as it may cause electric shock, short circuit or even major safety accidents).

CONTACT US

Technical support Team: support@laotie.zone

If you have any inquires please feel free to contact us, we will reply within 24 hours.

------ 014 ------