 


www.blitzwolf.com



EU REP: EUBRIDGE ADVISORY GMBH
Address: Virginia Str. 2 35510 Butzbach, Germany
Email: eubridge@outlook.com

UK ERP: KOVA ASSOCIATES LTD
Address: 72a Kingston Road, Portsmouth, Hampshire, PO2 7PA, United Kingdom
Email: KOVA.Compliance@outlook.com

MADE IN CHINA


BLITZWOLF

WIRELESS SPEAKER

BW-WA7

What's in box

- 1 x BW-WA7 Wireless speaker
- 1 x Rechargeable Wireless MIC
- 1 x Remote
- 1 x 3.5mm AUX in cable
- 1 x Type-Charge cable
- 1 x User

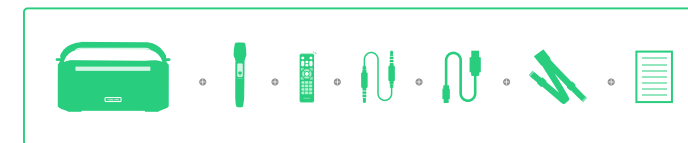


Specification

| | |
|--------------------|--------------------|
| Bluetooth Version: | 5.0 |
| Output Power: | 120W |
| Loudspeaker: | ∅78mm*2 |
| Wireless Range: | ≥ 12m |
| Battery Capacity: | 8000mAh |
| Power Input: | Type-C 5V≐3A |
| Charge Time: | 6 hours |
| Working Time | 15 hours |
| Size: | 300*110.4*184.84mm |
| Net Weight: | 2550g |

01

Button Configure

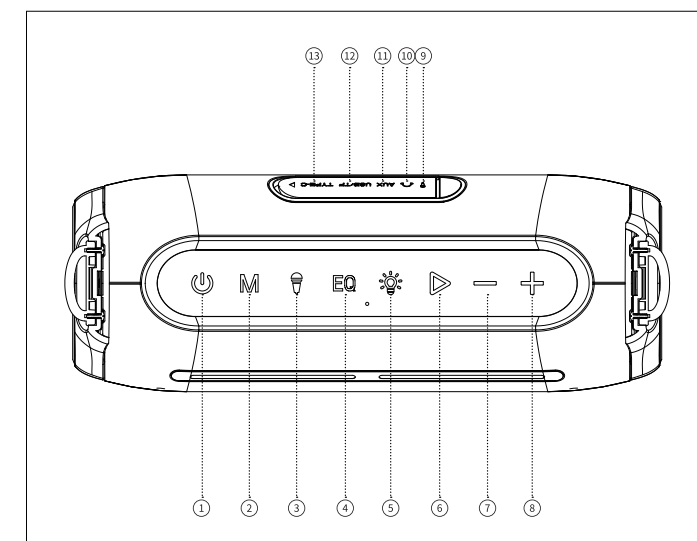

- ① ON/OFF
- ② MODE / BT Disconnect / Reset
- ③ Microphone
- ④ EQ / Power Bank Mode / Mute
- ⑤ RGB Light
- ⑥ Play/Pause
- ⑦ Volume Down / Previous Track
- ⑧ Volume Up/Next Track
- ⑨ 6.5mm Port
- ⑩ Headphone Port
- ⑪ AUX in
- ⑫ USB Port/TF Card Port
- ⑬ Type-C Port

02

Instructions

| Button | Operation | Instruction | Prompt & LED Status |
|--------|-----------------|--|---|
| POWER | Power On | Short press "POWER" button to turn on the speaker. If there is USB disk or TF card or Line in cable, speaker will play the device automatically, otherwise the speaker switch to Bluetooth pairing mode. | Prompt can be heard; Blue LED flash in BT pairing mode |
| | Power Off | Press "POWER" button 2 seconds again to power off the speaker | Prompt can be heard; LED off |
| Ⓜ | Force Shut down | Press "Power" and "MODE" button simultaneously to shut down the speaker when it is mal-function. | |
| MODE | Mode Switch | Short press "MODE" switch to BT/TF/AUX/USB modes | Prompt can be heard |
| | BT Disconnect | Hold "MODE" button for 3 seconds to disconnect the Bluetooth connection. | Prompt can be heard |
| MIC | Reset | Hold "MODE" button for 8 seconds to clean all the setting and reset the speaker | Prompt can be heard |
| | Microphone | Press Microphone button active Karaoke mode, the Blue LED will blinking. Once the microphone connected with speaker, the LED will stay on Blue. Press this button again to quit Karaoke mode. | |
| EQ | EQ Mode | The default EQ mode is Pop, short press the "EQ" button switch to 3D mode, press it again switch to Bass mode | Prompt can be heard Pop: Off 3D: White Bass: Green |
| | Power Bank Mode | After power on the speaker, hold the "EQ" button for 8 seconds, speaker switch to Power Bank Mode, power output 5V/1A | Prompt can be heard |
| EQ | Mute | Hold the "EQ" button for 1.5 seconds to mute the speaker. But the 3.5mm headphone jack still working. | |


03

| RGB Light | Operation | Instruction | Prompt & LED Status |
|--------------------|--------------------|---|--|
| PLAY/PAUSE | Play/Pause | In BT/TF/USB playing mode, short press this button to Play/ Pause playing. | Blue LED always on |
| | Answer the phone | When there is incoming call, short press this button to answer the phone call. | Blue LED always on when playing, Blue LED blinking in mute mode. |
| VOLUME | Reject | Or hold for 2 seconds to reject the phone call. | |
| | Hang up | Simple press the button to hang up the phone call. | |
| VOLUME | Volume Down | Short press this button to decrease the volume. | |
| | Previous Track | Hold this button for 2 seconds switch to previous track. | |
| VOLUME | Volume Up | Short press this button to increase the volume. | Prompt can be heard |
| | Next Track | Hold this button for 2 seconds switch to next track. | |
| Wireless Mic Vol - | Wireless Mic Vol - | Press Microphone button and Volume down together to decrease the volume of wireless microphone. There are 10 levels in total. | Prompt can be heard |

04

On line boardcasting & Record


Connect mobile and speaker by OTG USB cable to active on line boardcasting and recording the all boardcasting audio contents into TF card or USB flash disk.

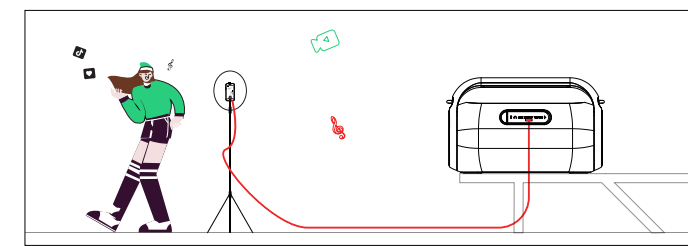

05

Power Bank Mode

After power on the speaker, hold the "EQ" button for 8 seconds, speaker switch to Power Bank Mode, power output 5V/1A

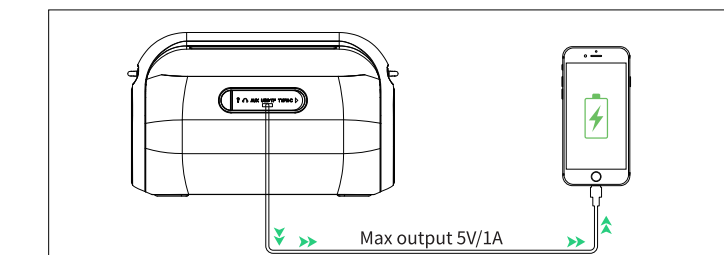

AUX Mode

When there is 3.5mm audio cable plug in, you will heard the prompt, an the speaker will play the audio source. The Blue LED always on when playing, or blinking when it is paused.

TF Card/USB Flash disk Mode

When there is TF Card or USB Flash disk plug in, you will heard the prompt, speaker will play the audio source in the device. he Blue LED always on when playing, or blinking when it is paused.


Power OFF

If there no Bluetooth connect with any device, the speaker will power off in 60 minutes. And if there is Bluetooth connection but no operation, the speaker will not turn off neither. When speaker battery is lower than 20%, you will heard the alarm sound, and if much lower than 10% the speaker will turn off automatically.

06


How to Bluetooth Pairing

1. Turn on the "BW-WA7" speaker, go to your Bluetooth device search and click "BW-WA7" to connect it.
2. In Bluetooth connection, press the MODE button for 3 seconds to quit the Bluetooth connection.

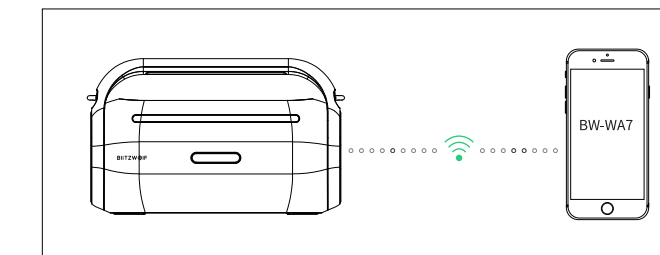

Charging the speaker

1. When speaker is low battery, power LED will flashing in Red, you will heard the alarm sound, please charging the speaker.
2. If the speaker is fully charged, the Red LED will turn off.

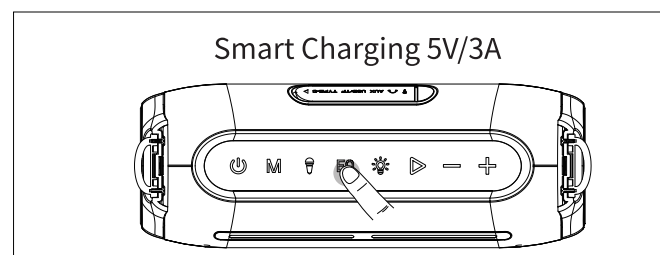

Charging: Red On Full: Red Off

07

彩色铜版纸 157g
尺寸:105*148mm