

Answers To The E Value Display Of ANGWATT Center Screen

E1: Motor failure, you need to check whether it is a connection line problem or a motor failure, and you can fix it by replacing the line or the motor. In many cases, it may be that the line is loose, and unplugging the corresponding line and plugging it back in will most likely fix the problem.

E2: Throttle failure, you need to check whether it is a connection line problem or a throttle failure, and you can fix it by replacing the line or the throttle. In many cases, it may be that the line is loose, and you can fix it by unplugging the corresponding line and plugging it back in will most likely fix the problem.

E3: Controller failure, you need to check whether it is a connection line problem or a controller failure, and you can fix it by replacing the line or the controller. In many cases, it may be that the line is loose, and you can fix it by unplugging the corresponding line and plugging it back in will most likely fix the problem.

E5: Undervoltage, that is, your battery drain, you can charge it.

E6/E7: The connection line between the instrument and the controller is abnormal, you can check whether the line or the socket is loose or damaged.