

 
 
SANSUI F51 7-inch Display Retro FM Radio Wireless Speaker

 
 
I. The first use of the speaker has two power mode.

1. Can use DC 5V interface power use.
2. There are rechargeable batteries in the accessory box, which can be directly used when installed in the speaker. Please charge and use again when the power is low.

II. Language modification:

1. After starting up, click the video button. When the screen displays, click the menu button.

2. Press the  key to select the last option on the screen(工具--Settings), click the  button to confirm, and enter the Settings.

3. Click the  to select the third option, click the  button to confirm, you can see that English is available, select English.

4. Finally, click the Back button to return to the main menu.



III. Function

1. MW key: short press to switch MW mode; long press MW to automatically search for the station.
2. FM key: short press to switch FM mode; long press FM to automatically search for stations.
3. SW key: short press to switch SW mode; long press SW to automatically search.
4. Menu key: Play the page in video mode, short press the menu key, view file

information, edit and select the playback mode and other operations.

5. Video key: short press the video key to switch to video mode; short press the video key under the video to turn on/off the screen function.

6. Return key: Short press the return key to return to the previous interface from the current interface.

7. Number [1-0] key: You can select the track you want to listen to through a single key and a number combination. In the receiver mode, enter the number and select the desired audio receiver rate.

8. Previous song • In video and music mode, press the key briefly to switch to the previous song;

Press for a long time to enter the fast retreat state, and briefly press the key again to exit the fast retreat state. In the receiver mode, switch to a radio station.

9. Next song > In video and music mode, short press the key to switch to the next song; long press to enter the fast-forn state, short press the key again to exit the fast-fork state. In the receiver mode, switch to the next radio station.

10. [MI] Play/Pause button: In MP3 mode, press the key briefly to play and pause the switch

11. Off/on key: push up to close, push down to open.

12. Headphone jack: Plug in the headphones to enter do not disturb mode.

13. DC 5V charging interface: You can use the charging power cord distributed by this machine for charging.

IV. Detailed function introduction

1. Bluetooth playback method: After power-on, press up/down on the home screen, select the Bluetooth icon, and enter Bluetooth mode. The machine will prompt "Bluetooth is waiting for pairing.", at this time, turn on the Bluetooth of your mobile phone or computer and search for "SANSUI F51". And after clicking the pairing is successful, it can be used.

2. How to use FM receiver: After power-on, press the "FM" button briefly to enter FM. In the audio mode, you can enter the frequency by rotating the modulator and pressing the number key to select the radio station you want to listen to. You can also press for a long time. "FM"Key, automatically search for concurrent stations. After the search is completed, short press the upper/lower song to select the corresponding radio station.

Note: MW. How to use SW is the same as above

3. How to play video:

Turn on the power or short press the "Video" button to open the home screen. Insert the USB flash drive or TF card with the video file into the machine. Then select by short pressing the upper/lower song. "Video" Icon, short press the pause button to confirm entering the video.