

Power on: Turn the switch POWER to the left OFF position to turn off the power, and the right ON position to turn on the power.

Power switch

Charging: Plug in the 5V power charger, red LED light means charging, red LED light means full.

- 1, Transmit Frequency Setting: Short press EMNU button once to flash FM character, press ADD or COT to change the transmit frequency, press EMNU button again to shift to set the transmit volume, press ADD or COT to change the transmit volume, press EMNU button again to shift to the transmit power, press ADD or COT to change the transmit gain, press EMNU button again or don't press it to save automatically. Press the EMNU button again or don't press it will automatically exit the save.
- 2, audio mode settings: power on the Bluetooth mode, if there is a good USB plugged in, it will prioritize the playback of USB content, USB format FAT32, long press the M button to switch the audio playback mode, Bluetooth, USB, FM radio, AUX input, switching between the four modes, in the FM radio receiving mode, the OLED display will be off at the same time to close the transmitter function.
- 3, radio reception: in radio reception mode, insert the headset or audio cable as the receiving antenna, short press the M button to start automatic radio reception, each received a radio station will be played for two seconds to automatically upward retrieval, retrieval is completed automatically play, short press ▶0r ◀ Up one down the next.
- 4, ◀ ▶ Long press function is volume up and down, short press is previous song next song.

Stereo FM transmitter

