
## Portable 2.8INCH-TEF6686 Radio Instruction Manual

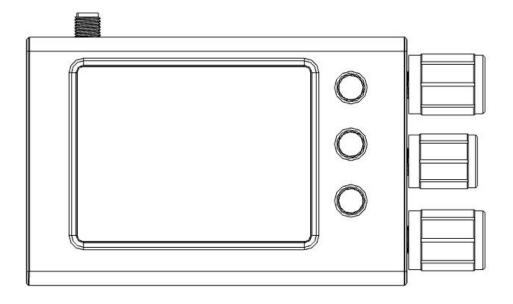

## Introduction

Adopting NXP's automotive-grade receiver chip TEF6686, it has high-tech anti-interference and excellent sound quality performance. 2.8-inch color display, with more radio station dynamic information display. Multiple adjustable bandwidths, RDS reception, adjustable frequency range (64-108MHZ), this machine is more suitable for enthusiasts to perform FMDX remote reception.

name	descr i be
Machine size	115*68*27mm
speaker	Cavity type 4Ω2W
Battery	4. 2V 2800MAH
Screen	ST7789 2.8 inch
Charging voltage	DC 5V
Antenna interface	SMA-K
weight	140g

Here, thanks to PE5PVB for the open source project. Github.com/PE5PVB/TEF6686 ESP32. Users can download the latest version for update. But please note that the crystal oscillator of the 6686 chip is 12mhz and the display is driven by ST7789. You need to change it before compiling and burning.

## 设备功能说明

FM: 65-108MHz, intelligent stepping 0.01MHz/0.1MHz/1MHz/10MHz

Adjustable bandwidth

56/64/72/84/97/144/133/151/168/184/200/217/236/254/287/311khz

Shortwave SW: 1700-27000kHz, intelligent stepping 1kHz/10kHz/100kHz,

adjustable bandwidth 3/4/6/8khz

Medium wave MW: 522-1620kHz, intelligent stepping 1kHz/10kHz/100kHz,

adjustable bandwidth 3/4/6/8khz

Long wave LW: 144-519kHz, intelligent stepping 1kHz/10kHz/100kHz, adjustable bandwidth 3/4/6/8khz

• Multiple channel selection methods: manual tuning, automatic tuning, and access to stored channels.

• Multi-language: Chinese, Norsk, Espanol, Portugues , English, Netherlands, Polski,

Hrvatski, Ltaliano, etc. (default English)

The display screen has adjustable backlight brightness and screen saver time. You can freely choose different themes and colors.


Supports knob SQ noise reduction adjustment, optional stereo headphone 3.5mm and speaker listening.

Support RDS, display radio station name, program name, etc.

Can be charged using a charger or computer, with charging status indicator light.

• TYPE-C interface, convenient for charging and connecting to computer.

• Portable design, more compact and more convenient to carry.

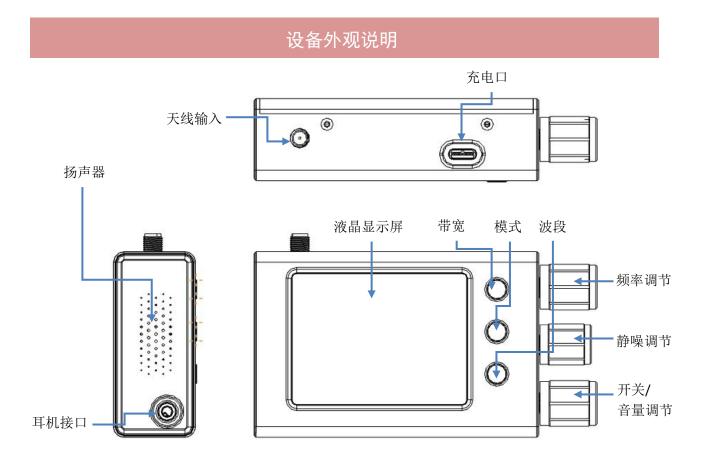

name	describe
Antenna input	SMA connector, connect antenna for signal input

speaker	Play the current radio station
Bandwidth button	Short press: Mono/stereo switch Long press: Manually adjust the bandwidth of the current radio station
Mode button	Short press: adjust manual tuning/auto search/storage mode Long press: Enter the settings menu
Band button	Short press: adjust the radio reception band FM/LW/MW/SW/OIRT Long press: Current radio station information
Headphone jack	3.5mm headphone audio output (speaker silent when headphones are plugged in)
Frequency Adjustment	Adjust the radio reception frequency
Squelch adjustment	Adjust the radio squelch threshold
Volume control/power switch	Adjust the current radio station's playback volume/power switch