## ATU-150 (200) Connection point:

- 1, POWR, DC12V, GND;
- 2, TO SCREEN

VCC to VCC

GND to GND


DAT to SDA

CLK to SCL

- 3. TUNE switch TUNE to switch GND to switch
- 4、RF IN RF IN to Block M by 50-3 coaxial line.
- 5、RF OUT

RF OUT to ANT by Metal end of porcelain post

6. GND GND to GND Screw

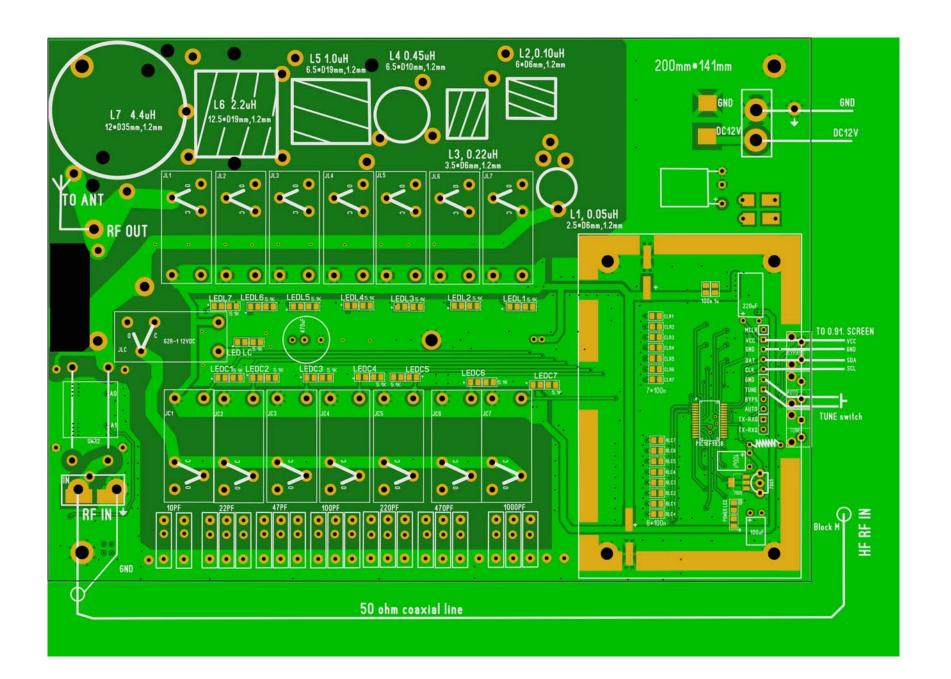



**POWR** line



