


POWERPLAY

SE Quick Start Guide Apr. 2025

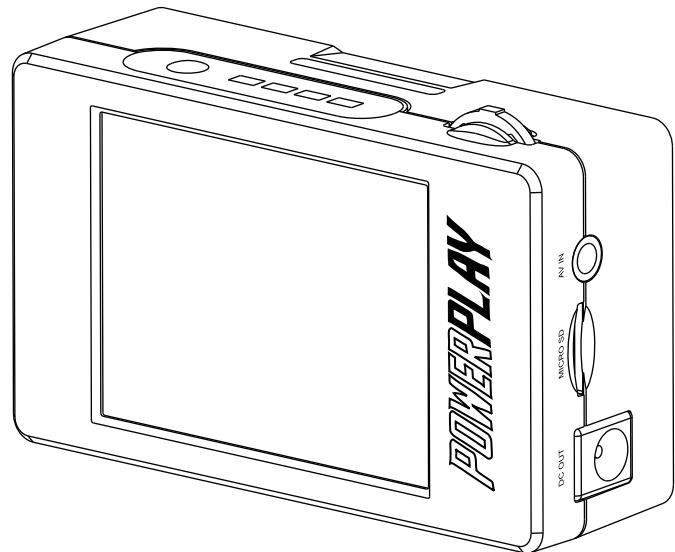

Warning


1. Only use certified 18500 lithium-ion batteries (recommended capacity $\geq 2400\text{mAh}$). Do not use batteries of other types or sizes, as this may cause device malfunction or safety risks.
2. The USB-C connector only supports 5V/2A charging, does not support USB-PD charging.
3. When this device is first installed with the 18500 battery or when the battery is replaced, if the device fails to power on, a USB-C data cable should be used to charge the device and activate the battery protection .



Specifications

Batteries	2x 18500 Li-ion cells
DC Power Output	DC Power Jack, with power switch, 6-8.4V/2A max
Video File Format	H.265 (HEVC)
Video File Resolution	AV 960x576 (PAL)50fps, 960x480 (NTSC)60fps
Video Data Rate	~ 6Mbps (variable)
	TF card, recommended 512G capacity (Class10)

Accessory kit

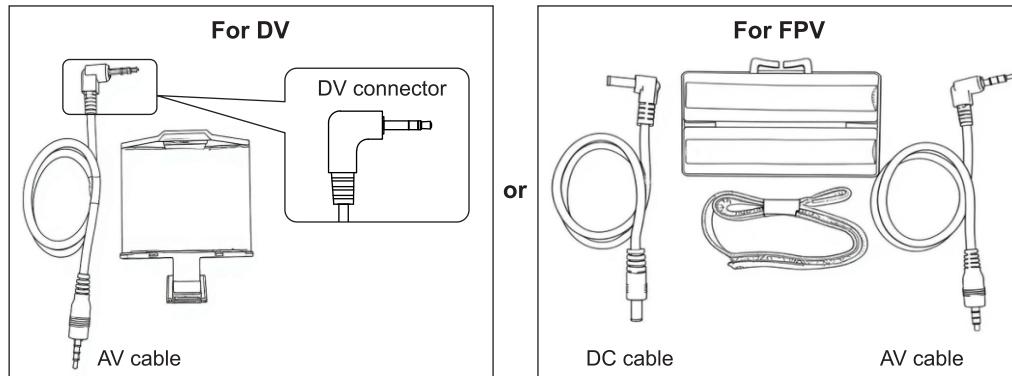

User Interface


Power Switch

The power switch has three functions:

- Short press: Show battery level
- Long press: Power on DVR
- Short press while powered on: Enter Menu

Rocker Switch

The rocker switch is used to start the DVR recording, with a single press. It is also used to navigate within the menu, for setup, and playback.

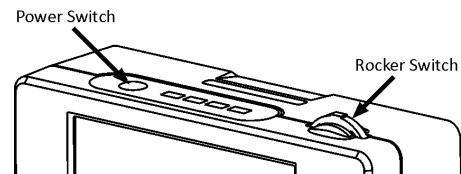

Support & Maintenance

DirectFPV provides customer service and maintenance support, for technical assistance, repair or warranty services, Please contact us via email: info@directFPV.com