

# DIGITAL PIANO INSTRUCTION MANUAL

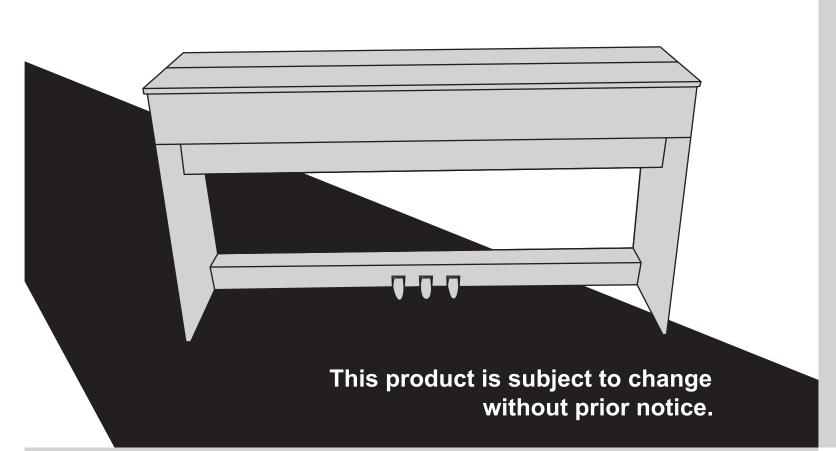

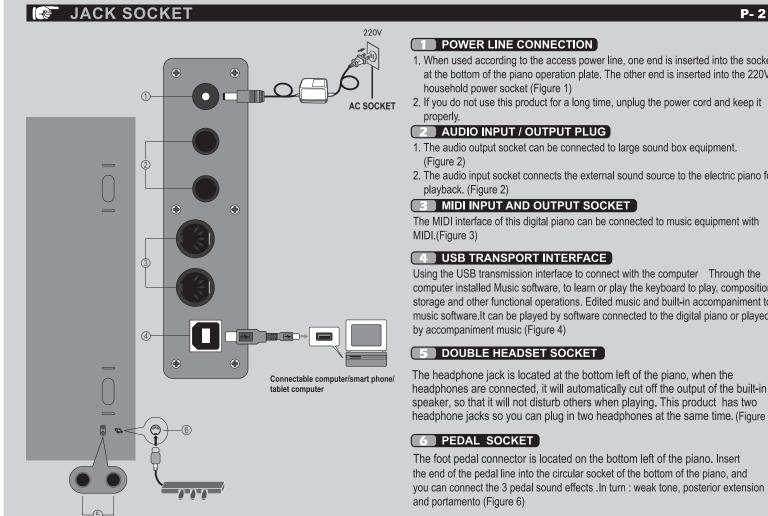

**OPERATION GUIDE** 

SOUND MASTER

PLAY 🔰

DEMO

1. When used according to the access power line, one end is inserted into the socket at the bottom of the piano operation plate. The other end is inserted into the 220V household power socket (Figure 1)

#### 2 AUDIO INPUT / OUTPUT PLUG

1. The audio output socket can be connected to large sound box equipment.

2. The audio input socket connects the external sound source to the electric piano for playback. (Figure 2)

#### **3** MIDI INPUT AND OUTPUT SOCKET

The MIDI interface of this digital piano can be connected to music equipment with MIDI.(Figure 3)

#### 4 USB TRANSPORT INTERFACE

Using the USB transmission interface to connect with the computer Through the computer installed Music software, to learn or play the keyboard to play, composition, storage and other functional operations. Edited music and built-in accompaniment to music software. It can be played by software connected to the digital piano or played by accompaniment music (Figure 4)

#### 5 DOUBLE HEADSET SOCKET

The headphone jack is located at the bottom left of the piano, when the headphones are connected, it will automatically cut off the output of the built-in speaker, so that it will not disturb others when playing. This product has two headphone jacks so you can plug in two headphones at the same time. (Figure 5)

#### 6 PEDAL SOCKET

The foot pedal connector is located on the bottom left of the piano. Insert the end of the pedal line into the circular socket of the bottom of the piano, and you can connect the 3 pedal sound effects .In turn : weak tone, posterior extension and portamento (Figure 6)

P- 6

P- 2



## **I** OPERATION GUIDE

(A)

→ MP3 VOL → PLAY NI

SPLIT DOUBLE VOICE EFFECT

RHYTHM DEMO

SOUND MASTER

≪ SELECT ▶

TONE

**FEATURES** 

combination of the latest electronic technology.

a lifelike auditory experience.

SPECIAL REMINDER

PRODUCT CARE

MULTIMEDIA MP3 PLAY

◆ Before using this instrument, you must read the instructions in detail.

**₩** USING DREAM SOUND SOURCE

With MP3 multimedia playback function, give full play to music entertainment

AVOID HEATING, DAMPNESS OR DIRECT SUNLIGHT

2 DO NOT USE NEAR THE TV OR RADIO.

4 DO NOT SHAKE, AVOID COLLISION

electronic components...

**₩** INSTALLATION

Thank you for choosing our digital piano. The digital piano is elegant and exquisite, and it is the perfect

Its core uses the top French DREAM sound source, digital sampling, for your performance to bring

Do not over expose the product to direct sunlight, or place it near air conditioning or extremely hot place.

NO PAINT, DILUENT OR SIMILAR CHEMICALS SHALL BE USED FOR CLEANING.

This product is an electronic and electronic vocal instrument product, which is in the horn (two or one of the horns) after power-on. Or plug in headphones) A little current

sound is normal. Stay away from "radio, TV, antenna receiver, router, refrigerator, TV, etc. "All RF electrical interference sources such as motorized appliances"

This product may cause video or audio interference to the reception of TV and radio. If this happens, the product should be removed from the TV or radio.

The pedal line needs to be inserted into a separate

circular socket near the horn at the bottom of the

main engine, You need to bend down to see it.

Clean the product with a soft cloth wetted with weak water solution and neutral detergent. Soak the cloth in a solution and wring it dry until it approaches drying.

When moving, the product should be handled carefully and lightly. Violent vibration and collision are strictly prohibited in order to avoid damage to the shell or internal

Careful maintenance and protection of this product plays an important role in prolonging the service life of the product and reducing the failure.

8 DOUBLE KEYBOARD

1. First enter the timbre mode and choose an instrument as the main timbre. 2. Press the "SPLIT" button to enter the split timbre selection mode. (Figure 10)

3. Use the "NUMERICAL SELECT" rotation to select another instrument as the segmented timbre. (Figure 4) 4. Play music on the keyboard, and then play the corresponding instrument sounds on both sides of the keyboard. 5. Press the "SPLIT" button again, cancel the keyboard segmentation, and return to the normal keyboard state.

**Progressive** 

hammer keyboard

• Left and right supporting plate

3 short screws (M6×20 = 4 PCS)

(M6×60 = 4 PCS) **⊘** Log bolt (4×40 = 4 PCS)

Pedal cross beam

Back fixed plate

Pedal plug wire

Body



## TRANSPOSITION

Press the "TRANS" button, then use the "NUMERICAL SELECT" rotation to adjust the keyboard tone, to the left to

reduce, to the right to increase. Adjustment range: 12 semitones. (Figure 11 / 4)

• This function enables you to adjust the tone of the keyboard in half tone without changing the playing position.

## 10 MP3 PLAY FUNCTION

1. Insert the flash disk containing MP3 songs into "USB SOCKET" and play MP3

songs automatically after 3 seconds. (Figure 12) 2. Press the "PLAY" button to pause or play MP3 songs. (Figure 13) 3. Press the control button of "Selection/-Volume+" in a short time to select the

front/back MP3 songs. (Figure 14) 4. Pressing the "Selection/-Volume+" control button for a long time can adjust

the volume of the song. (Figure 14) Maximum peak sound, need to turn the "VOLUME" knob control.

## Note! —

• Play only songs in MP3 format

## 1 PIANO PERFORMANCE

1. Push the "POWER" switch to the open position, and you can play on the keyboard. (Figure 1)  $\,$ 2. Turn off the power supply when not in use for the time being.

• Processor chips of this product are complex, similar to computer systems. Sometimes they can not respond. Please turn off the power switch and then turn it on to work properly.

## Use the "VOLUME" adjusting knob to increase or decrease the piano volume, please adjust the volume to a satisfactory

position. (Figure 2)

1. Press the "TONE" button to enter the instrument timbre selection mode. (Figure 3) 2. Rotate "NUMERICAL SELECT" to select the timbre of the instrument, and display the code and name of the instrument. (Figure 4)

4 RHYTHM SELECTOR

#### 1. Press the "RHYTHM" button to enter the rhythm style selection mode. (Figure 5) 2. Turn "NUMERICAL SELECT" to select the rhythm style. The display screen displays the selected rhythm code and name

5 MUSIC PLAY

1. Press the "DEMO" button to enter the demo mode. (Figure 7) 2. Rotate "NUMERICAL SELECT" to select the demo song to play. The display screen displays the code and name of the

at this time. (Figure 4)3. Press the "START/STOP" button to start playing the selected rhythm. To stop playing, press

## **6** DOUBLE TIMBRE

1. First enter the timbre mode and choose an instrument as the main timbre.

2. Press the "DOUBLE VOICE" button to start the dual tone selection mode. (Figure 8)

3. Rotate "NUMERICAL SELECT" and select another instrument as superimposed timbre. (Figure 4) 4. Play on the keyboard, at this time playing the keyboard emits a mixed sound of two instruments.

 
## 7 DYNAMIC TOUCH CONTROL

The function of dynamic tactile response is that the volume will produce the corresponding volume according to the power

of playing the keyboard, which is convenient for playing music with different feelings.

Press the "TOUCH" button to turn off or turn on the power touch. (Figure 9) Boot-up defaults to open state.

ABCDEFGABCDEFGABCDEFGABCDEFGABCDEFGABCDEFGABCDEFGABCDEFGABCD

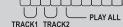



Track 1 Recording and Playing: 1. Hold down the "EFFECT" button, and press the "white key A2" in track 1 area to start track 1 recording. (Figure 15)

2. When you play the keys or step on the pedals, you begin to record notes.

3. Hold down the "EFFECT" button again and press the "white key A2" in track 1 area to stop track 1 recording. 4. Hold down the "EFFECT" button and press the "white key B2" in track 1 area to start playing the notes recorded in track 1.

Track 2 Recording and Playing:

1. Hold down the "EFFECT" button, and press the "white key C1" in track 2 area to start track 2 recording. (Figure 15)


2. When you play the keys or step on the pedals, you begin to record notes. 3. Hold down the "EFFECT" button again and press the "white key C1" in track 2 area to stop track 2 recording.

4. Hold down the "EFFECT" button and press the "white key D1" in track 2 area to start playing the notes recorded in track 2.

Hold down the "EFFECT" button and press the "white key E1" to play the notes recorded by track 1 and track 2 at the same

• The recording includes foot pedal operation, tone conversion, etc., such as when the amount of foot pedal operation increases, Keyboard playing recorded a relatively small number of notes. Record about 5000 operations

**OPERATION GUIDE** 

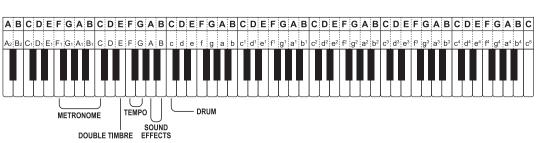

## 12 METRONOME

1. Hold down the "EFFECT" button and press the "white key F1" to start and close the metronome. (Figure 15) 2. Hold down the "EFFECT" button and press a corresponding "white key G1-C" in the metronomic selection area to select

the metronomic type. There are four types.

3. Hold down the "EFFECT" button and press a corresponding "white key F-G" in the speed regulation area to adjust the metronome speed.

## 13 DOUBLE TIMBRE

1. First enter the timbre mode and choose an instrument as the main timbre.

2. Press the "EFFECT" button while pressing the "white key E" to start the dual tone selection mode. (Figure 15)

3. Select another instrument as superimposed timbre by rotating "NUMERICAL SELECT" (Figure 4) 4. At this time, playing the keyboard emits a mixed sound of two instruments.

5. Press the "EFFECT" button again while pressing the "white key E", cancel the dual tone function and return to the normal keyboard state.

## 14 DIGITAL SOUND CONTROL

1. Pressing the "EFFECT" button while holding down the "white key A" in the sound effect area can turn on or off the tremolo effect. (Figure 15)

2. Pressing the "EFFECT" button while holding down the "White Key B" in the sound effect area can turn on or off the

#### extended sound effect. 15 KEYBOARD DRUM

1. Press the "EFFECT" button while pressing the "white key c" to switch the scale keyboard to the percussion instrument

2. Press the "EFFECT" button again while pressing the "white key c", then turn off this function.




**OPERATION GUIDE** 







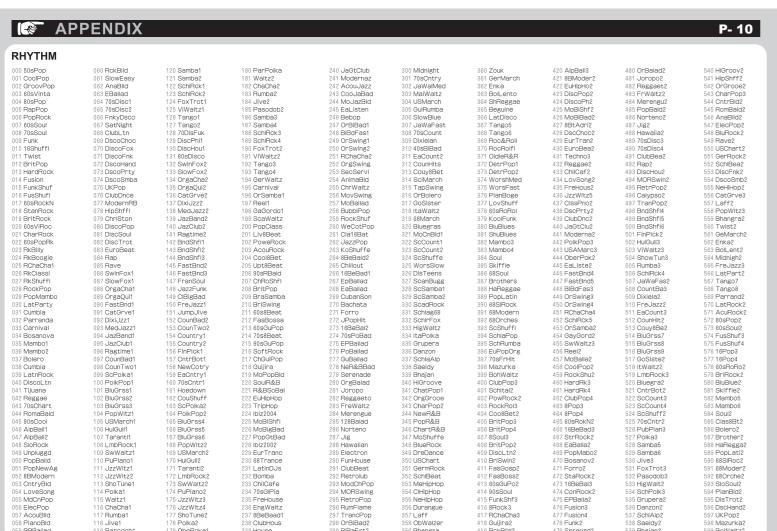

• Hold down the "EFFECT" button again and press the "white key a" to exit the mode.!

DEMO 00 Jockey Club 020 You set off to the chapeau 040 Hotel Pacific 060 American Beauty Rag 1 Yang On A Horse To Transport Grain 021 The Qinghai—Tibet Plateau 061 Crazy Arms 042 Family Restaurant 062 Before the Next TearDrop Falls 2 Steping Higher And Higher 022 Same Song 063 Waltz Op64 No.1 By Chopin 03 US Taihu Lake 023 Hill Road Bending 18 043 To Flush Waves Johnny 04 Osmanthus everywhere open in August 024 Farewell 044 Zimbada hand 064 Piano Sonata )5 Central government 025 Happy home 045 Paradise 065 The Beautiful Blue Danube 066 The Crave 06 Tathagata 026 Place peach bloom 046 Birthday 067 Tea for Two 07 Aobaoshan 027 New Century 047 Carmen 18 Yangming Chunxiao 028 Gave me a Red Rose 048 Cavatina 068 Sleigh Ride 049 Jingle Bells 069 Rudolph The Red Nose Reindeer 029 Kangding Love Song )9 Jasmine 050 Silent Night 070 Santa Claus Is Coming To Town 030 Dansolde 10 Jaunty 1 Good Day 031 Beijing Tune 051 O Christmas Santa Claus 071 Dream 13 Zi ZhuTiao 033 Rumanxilou 053 Oh Susanna 073 Humoresque 074 Frohlicher Landmann 14 Auspicious TREBLE 034 Goodbye Dabieshan 054 Moon River 15 Trials of a long journey always intelligence 035 Happy Chinese New Year 055 ABC Word 075 Canon 056 We Wish You A Merry Christmas 076 Waltz 16 In that faraway place 036 Dreams Of Riverboat 037 The Penghu bending Grandmother 057 Six Little Ducks 7 Prairie Song 077 Greensleeves 058 Mary Had A Little Lamb 18 Look at home 038 Heart-Throb 078 Polka 9 On affordable 039 Wish You Peaceful 059 Moonlight Bay 079 Arabesque

#### ACCESSORIES

**APPENDIX** 

P- 8

The power adapter	1 PCS	Back fixed plate	1 PCS
Body	1 PCS	spile	4 PCS
sostenuto pedal	1 PCS	screw	12 PCS
Left and right support plate	2 PCS	Instructions	1 PCS

#### MUSICAL INSTRUMENT PARAMETERS

P- 9

P- 11

 
P- 13

Keyboard: 88 key	Pitch: ≤ 3 tones.	
Voice range: A2-C5	Output power: > 25W*2	
Style: Upright piano	Power parameters: DC 18V 50/60Hz	

## **POWER SUPPLY** -

**PRECAUTIONS** 

This product can be powered by standard indoor wall sockets. Please only use the power cord specified in this product. When not in use, please turn off the power supply. When not in use for a long time, pull out



## MARKING MAP

To ensure that you use this product safely and correctly, to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs. The various signs and their

## **↑** WARNING

This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.

## **⚠ BE CAREFUL**

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly

## **EXAMPLE OF LOGO -**

This triangle sign  $(\triangle)$  indicates what users should pay attention to. (The left picture shows a

A circular sign ((\infty)) with an oblique line indicates prohibitions. The icons in or beside the logo indicate the contents specifically prohibited. (No disassembly is allowed on the left)



Black dots ( • ) indicate what must be observed. The diagrams in this sign indicate the contents of the specific matters that must be observed. (The left picture shows that the power



When the product smokes, smells or overheats, there is a danger of fire and electric shock when it is used continually. In case of the above situation. the following operations should be performed immediately.

 turn off the power. 2. Pull the plug out of the power outlet. 3. Contact your dealer

Power cord:

be used.

be observed.

on power lines.

power cord too much.

If the power cord or plug is

same type of power cord.

Do not place or heat heavy objects

• Do not attempt to alter or bend the

Do not twist or pull the power cord.

damaged, please replace the

Improper use of power cord may cause fire and electric shock. The following precautions must be observed.



• The special power cord designated Improper use of power cord may for this product must be used. cause fire and electric shock. The • The AC power supply with output following precautions must be voltage within the rated voltage observed. range for household use must • Do not put the power cord near



the furnace or other heat source. Do not overload power sockets Do not pull the power cord when and extension lines. unplugging the power socket, but The improper treatment of power must grasp the plug body. line will lead to damage or • The power cord plug must be breakage, which will lead to fire inserted in the socket to the end. and electric shock hazards. Make sure the power supply is off The following precautions must

> When thunderstorms occur or before traveling or other long-term departure, disconnect the power cord from the wall outlet,

before connecting or

the plug.

is a danger of electric shock.

Please use the power cord where it won't splash. Water is in danger of

causing fire and electric shock.

Never place vases or any other

container containing water on

this product. Water is dangerous

of causing fire and electric shock.

touch power lines or connection

 
electricity safety common sense

 
there is a risk of electric shock.

— ∴ BE CAREFUL —

Do not allow minors to unplug and

boards, minors do not have





#### **I** PRECAUTIONS P- 12

Do not burn down this product Otherwise, it will lead to the burning of wood products and the explosion of internal electronic components, which will cause fire and personnel injury.

> Water and foreign bodies Water, other liquids and (metal sheets, Water, other liquids and (metal sheets, etc.) entering this product are in danger following operations should be

of causing fire and electric shock. In case of the above situation, the performed immediately, 1. turn off the power. 2. If you are using a power cord for power supply, unplug it from the wall outlet. 3. Contact your distributor.

Don't dismantle and transform Do not dismantle or transform this product in any way. Otherwise, there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and

maintenance operations should be entrusted to your distributor. Fall or impact This product is in danger of fire and electric shock after falling or being

case of the above situation, the following operations should be performed immediately. 1, turn off the power, 2. If you are using a power cord for power supply, unplug it from the

damaged by strong impact. In

wall outlet,

Contact your distributor.

Plastic bag for this product on his head or in his mouth. Otherwise, there is a risk of

asphyxia. Families with young

children should pay special attention Do not climb piano or bracket Climbing on the piano body or its support is dangerous of overturning or damage. Families with young

Placing products Avoid placing the product on an uneven surface or any other unstable place. Otherwise, it will

cause the product to fall down, which will lead to the risk of injury. Move this product

Before moving this product, you must unplug the power cord plug from the wall outlet and pull out all other cables and connecting wires. Otherwise, it will lead to wire damage, fire and electric shock.

Clean this product Before cleaning this product, you must unplug the power cord plug from the wall outlet, otherwise there is a risk of fire and electric shock,

Socket connection devices can be connected to the sockets of this product. Connecting non-designated equipment or devices is dangerous of causing fire and electric shock.

**Location selection** a danger of fire and electric shock. children should pay special attention

high temperature. Volume Don't play music long and loud, Pay special attention when using

risk of injury.

over, and there is a risk of injury to

Avoid placing this product in the following places. Otherwise, there is

 High temperature or dusty places. Kitchen or other place with

lampblack. Where the product is exposed to direct sunlight, or any other place where the product will produce

headphones. Excessive volume can

damage your hearing, Heavy objects Do not place heavy objects on this product. Otherwise, the top of the product will be overweight, causing

the product to overturn or drop

objects on it, which will lead to the

the personnel. Therefore, it must be assembled in accordance with the instructions attached to the instructions to ensure that the product is properly mounted on its bracket.

Correct assembly of scaffolds

bracket will cause the product to fall



## WARRANTY CARD

## **Warranty clause:**

plug must be pulled out of the socket)

1. Faults arising from normal use of this product can be guaranteed free of charge for "\_\_\_\_\_\_" days from the date of purchase. 2. Failure occurs during the warranty period. This warranty card and shopping ticket must be presented during maintenance.

3. In the following cases, no free warranty will be provided:

A. You can't show both the warranty card and the purchase ticket at the same time.

B. The date of purchase is altered. C. Damage caused by improper use by users.

D. Damage caused by irresistible factors such as fires, floods, earthquakes and lightning strikes.

E. Failure due to unauthorized self-disassembly.

4. After exceeding the warranty period, the company is responsible for maintenance, at the discretion of cost.

MAINTENANCE LOCATION:	
CONTACT NUMBER:	

MANUFACTURER: Quanzhou Jiewei Electronic Technology Co., LTD

ADDRESS: No. 596, Donghu Street, Dongshiyonghu Village, Jinjiang City, Fujian Province

## MAINTENANCE RECORD CARD

DATE	MAINTENANCE RECORD	REPAIRMAN