

Zeus F722

Flight Controller

Manual

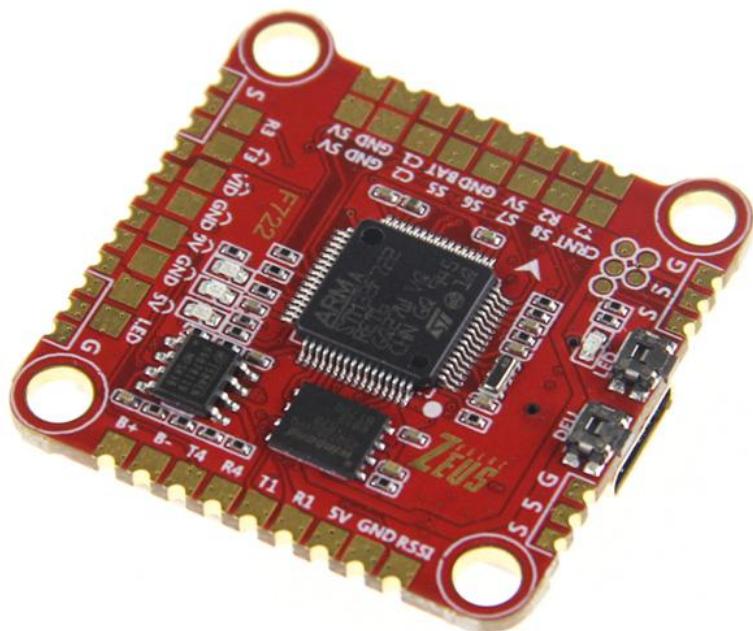

Contents

Product Specifications.....	1
Interface Description.....	2
Check the flight control drive.....	3
Calibration accelerometer.....	4
URAT serial port use.....	5
Select aircraft model.....	6
Choose ESC protocol.....	7
Select ESC telemetry.....	8
Voltage and current parameters setting.....	9
Setting up the receiver.....	10
VTX serial port use.....	11
GPS parameters setting.....	12
Check receiver signal.....	13
Select flight mode startup mode.....	14
OSD settings.....	15
LED settings.....	16
Troubleshooting.....	17

Package Included


Zeus F722 Flight Controller*1	Accessory Bag*1
-------------------------------	-----------------



1. Product Specifications

Product parameters	
Model	Zeus F722 Flight Controller
Weight	8.1g
Usage	for 100mm-450mm Frame Kit
MPU	MPU6000
CPU	STM32F722 RET6
Black Box	16M
Support receiver	SBUS .IBUS.DSMX/R9MM
Input Voltage	3-6S Lipo
BEC Output	5V/3A, 9V/2A
LED Output	5V/3A
Size	37.3x37.3mm board, 30.5mm mounting holes

2. Interface Description

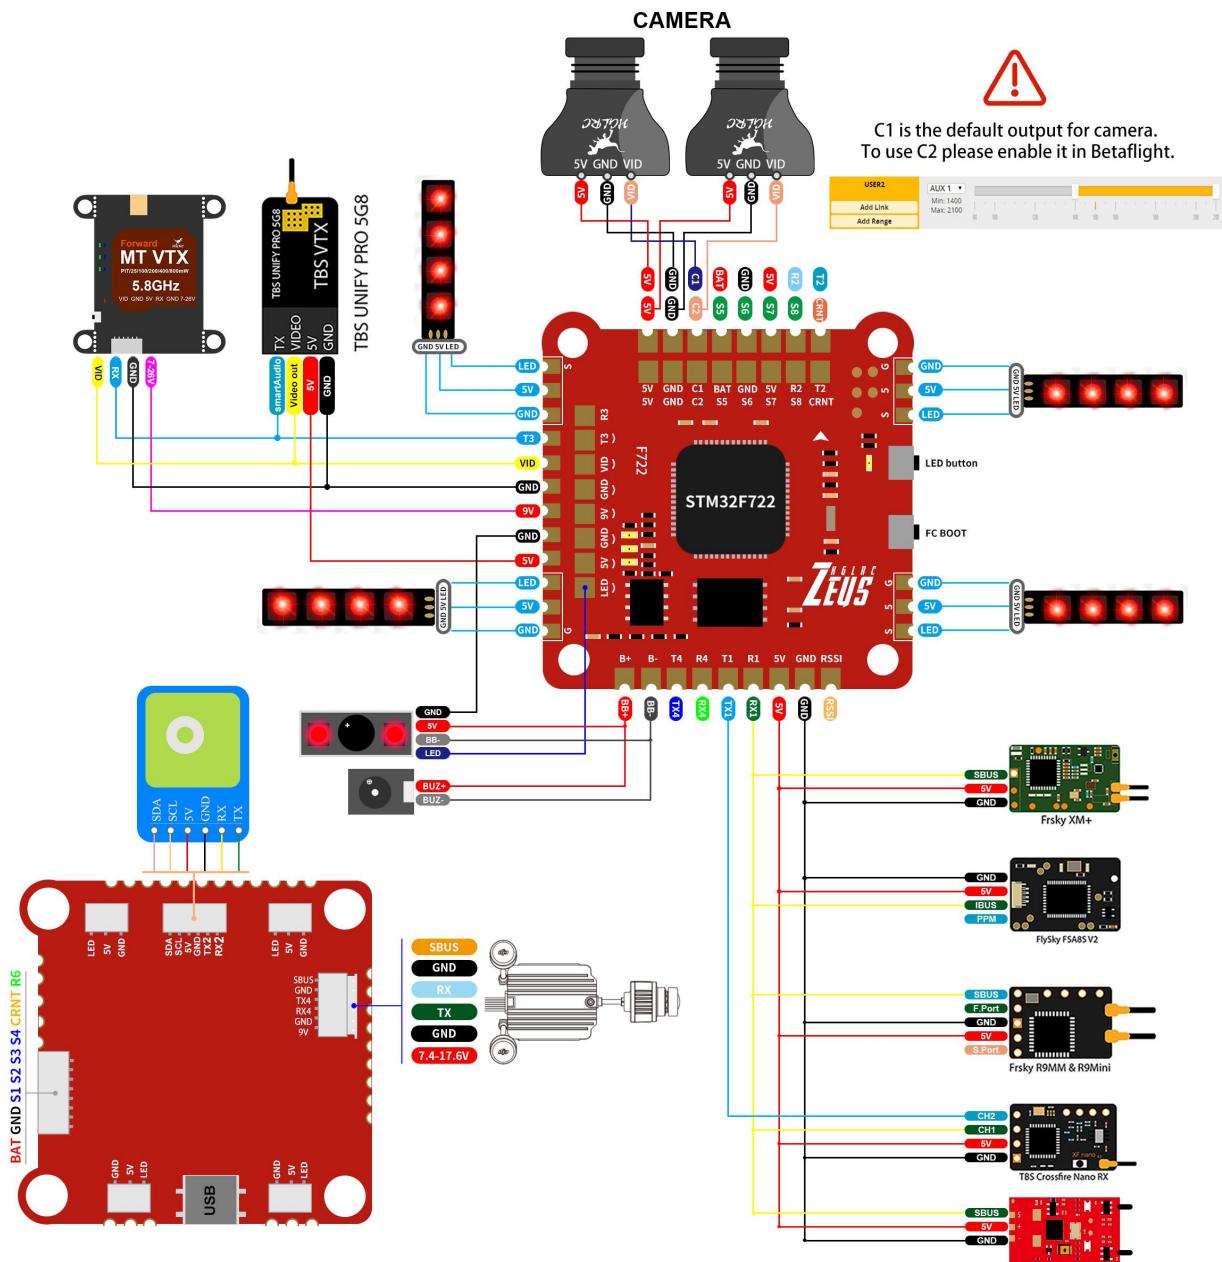

3.Check the flight control drive


1. Long Press BOOT buttons.connect USB.The system automatically install the driver




2.Driver cannot be installed, please download ImpulseRC_Driver_Fixer



3.Double-click on the run(Plug in the flight controller to automatically install the driver)

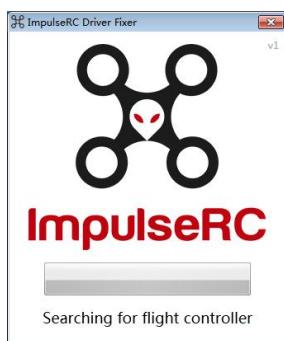


4.open betaflight configurator , enter DFU mode

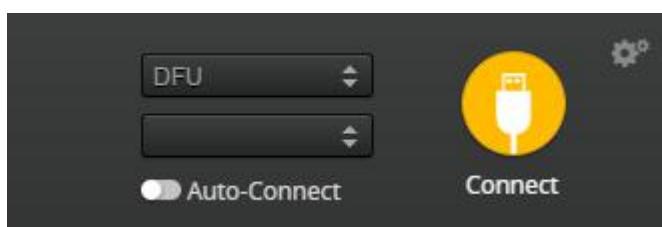




5.Click Firmware Flasher Select firmware version

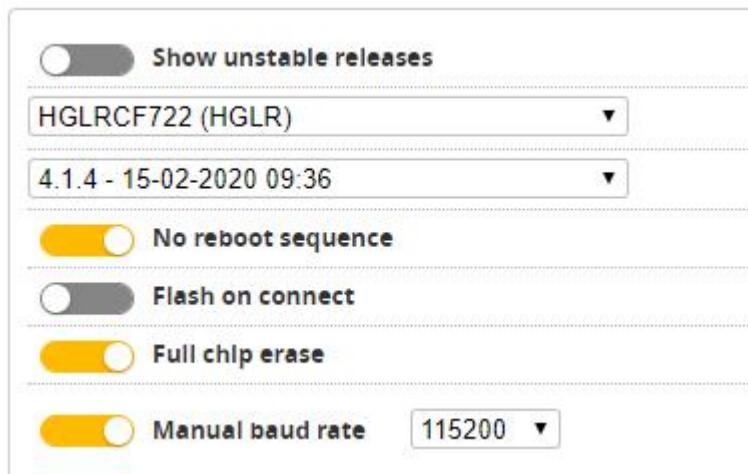

6.Click Load firmware. Waiting for completion It will be prompted upon completion.


7. open betaflight configurator .Controller plugged into the computer. Betaflight Automatically assigned port, click “Connect” Enter setup interface (Different computer COM)

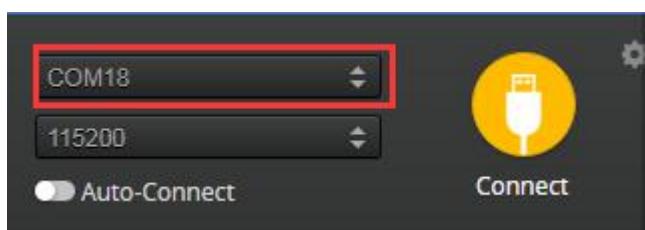

4. Calibration accelerometer

1. Put the aircraft horizontal and click “Reset Z axis”

Click again Calibrate Accelerometer

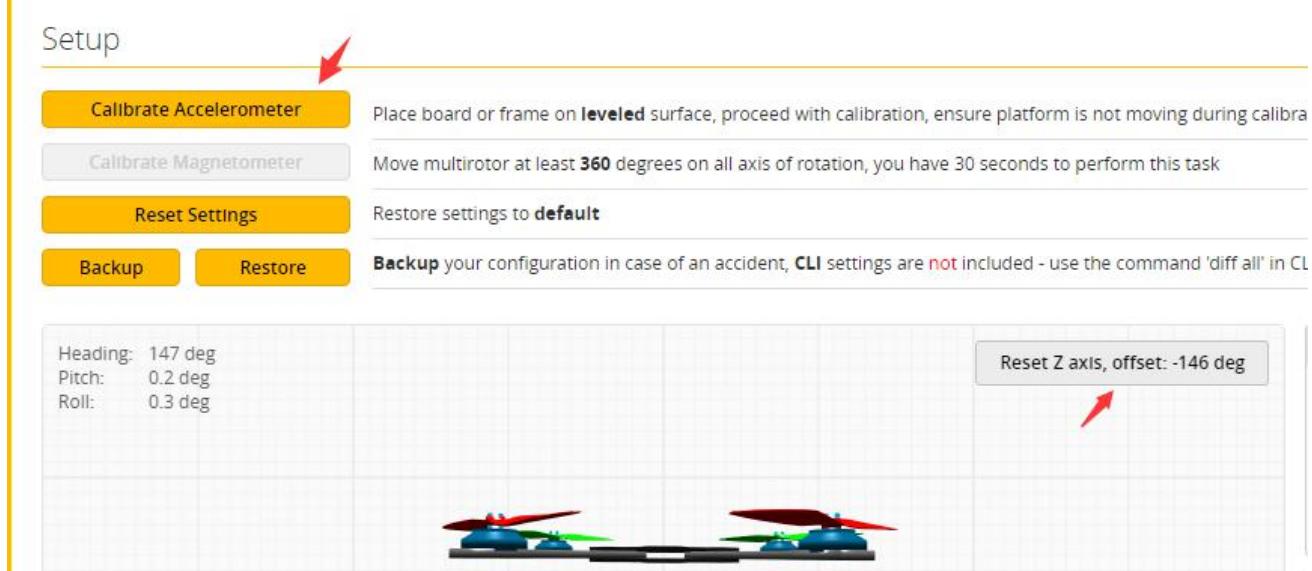


5. URAT serial port use


- 1.URAT1 uses the receiver
- 2.URAT2 uses GPS
- 3.URAT3 uses VTX image transmission
- 4.URAT4 uses DJI
- 5.URAT6 uses ESC telemetry

6. Select aircraft model

1. Click  Configuration Select model

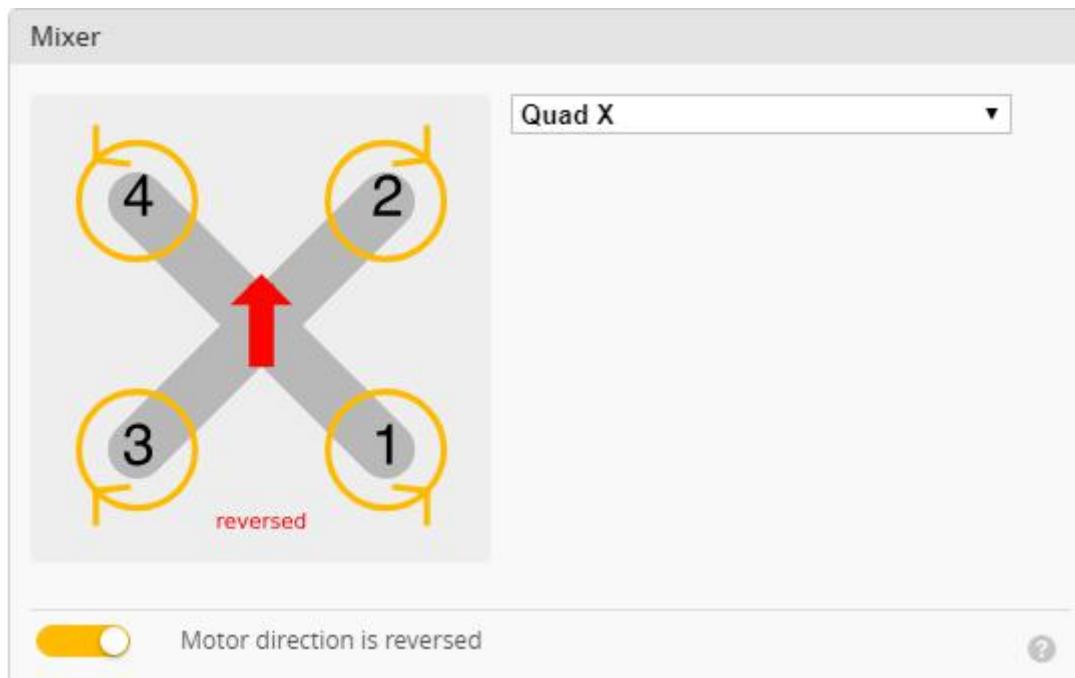

2. Click  Motors Click “I understand the risks” Push Master to check motor steering “Master” Steering can be changed at [BLHeliSuite](#)

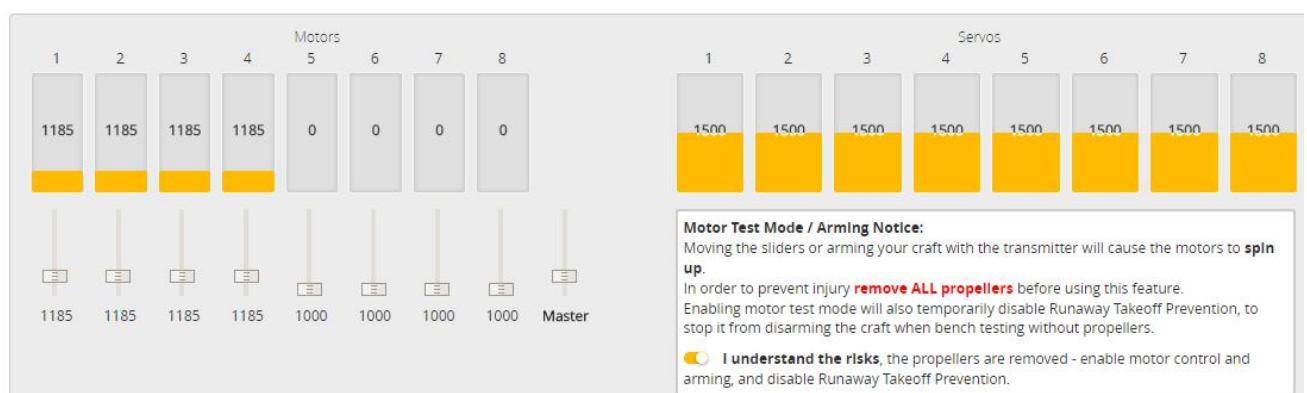

7. Choose ESC protocol

1. Choose the right ESC protocol, the optional universal protocol DSHOT600.

ESC/Motor Features

DSHOT600	ESC/Motor protocol	←
<input type="checkbox"/> MOTOR_STOP	Don't spin the motors when armed	
<input checked="" type="checkbox"/> ESC_SENSOR	Use KISS/BLHeli_32 ESC telemetry over a separate wire	
<input type="checkbox"/>	Bidirectional DShot (requires supported ESC firmware)	
14	Motor poles (number of magnets on the motor bell)	
5.5	Motor Idle Throttle Value [percent]	

8. Turn on ESC telemetry

1. Use BLHeli_32 ESC telemetry over a separate wire

ESC/Motor Features

DSHOT600	ESC/Motor protocol	?
<input type="checkbox"/> MOTOR_STOP	Don't spin the motors when armed	
<input checked="" type="checkbox"/> ESC_SENSOR	Use KISS/BLHeli_32 ESC telemetry over a separate wire	
<input type="checkbox"/>	Bidirectional DShot (requires supported ESC firmware)	
14	Motor poles (number of magnets on the motor bell)	
5.5	Motor Idle Throttle Value [percent]	


2. Open ESC telemetry serial port.TX on the ESC needs to be connected to the RX6 on the flight controller to use the ESC telemetry

Ports

Note: not all combinations are valid. When the flight controller firmware detects this the serial port configuration will be reset.
Note: Do NOT disable MSP on the first serial port unless you know what you are doing. You may have to flash and erase your configuration if you do.

Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	<input checked="" type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾
UART1	<input type="checkbox"/> 115200	<input checked="" type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾
UART2	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾
UART3	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	VTX (IRC Tran ▾ AUTO ▾)
UART4	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	GPS ▾ 115200	Disabled ▾ AUTO ▾
UART6	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	ESC ▾ AUTO ▾	Disabled ▾ AUTO ▾

3. View telemetry data on OSD

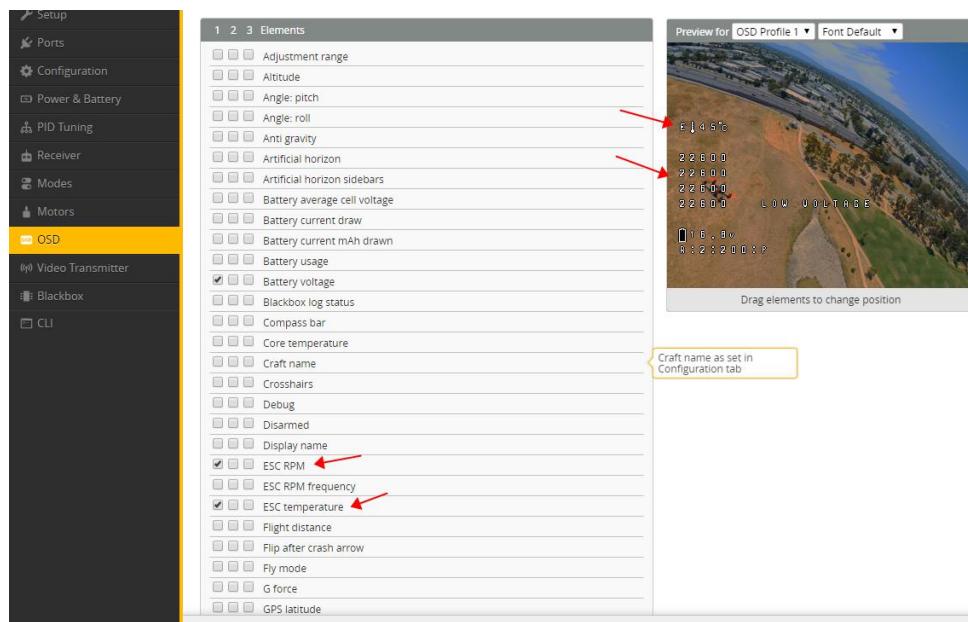

9. Voltage and current parameters setting

1. Click  Power & Battery Setting parameters

Power & Battery

Battery

Onboard ADC	Voltage Meter Source
Onboard ADC	Current Meter Source
3.3	Minimum Cell Voltage
4.3	Maximum Cell Voltage
3.5	Warning Cell Voltage
0	Capacity (mAh)

Voltage Meter


Battery	0 V	Scale	112
		Divider Value	10
		Multiplier Value	1

Amperage Meter

Battery	0.00 A	Scale [1/10th mV/A]	179
		Offset [mA]	0

10. Setting up the receiver

1. Receiver connection diagram

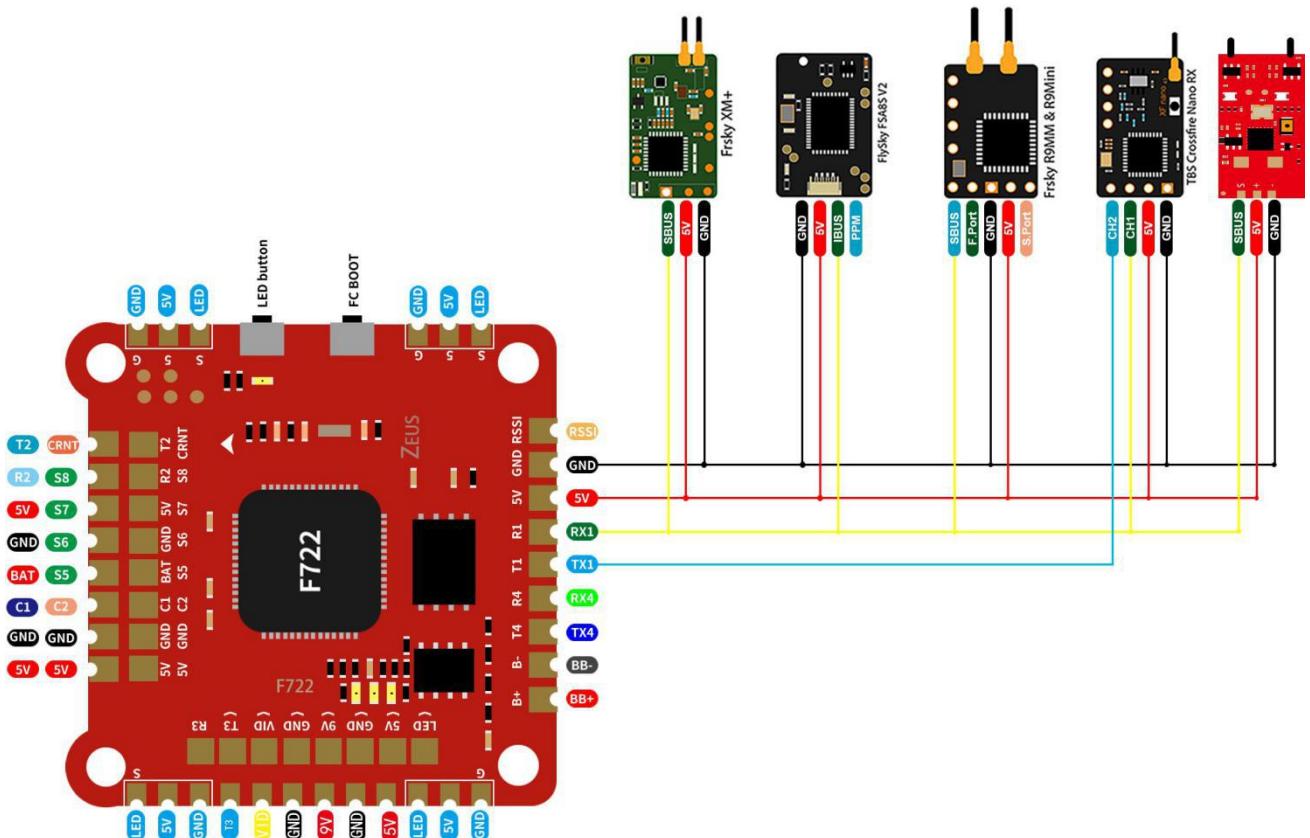

2. Click have found “UART1” Open the receiver serial port

Ports

WIKI

Note: not all combinations are valid. When the flight controller firmware detects this the serial port configuration will be reset.
Note: Do NOT disable MSP on the first serial port unless you know what you are doing. You may have to refresh and erase your configuration if you do.

Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	115200	<input checked="" type="checkbox"/>	Disabled AUTO	Disabled AUTO	Disabled AUTO
UART1	115200	<input checked="" type="checkbox"/>	Disabled AUTO	Disabled AUTO	Disabled AUTO
UART2	115200	<input type="checkbox"/>	Disabled AUTO	Disabled AUTO	Disabled AUTO
UART3	115200	<input type="checkbox"/>	Disabled AUTO	Disabled AUTO	VTX (IRC Tran AUTO
UART4	115200	<input type="checkbox"/>	Disabled AUTO	GPS 115200	Disabled AUTO
UART6	115200	<input type="checkbox"/>	Disabled AUTO	ESC AUTO	Disabled AUTO



3. Set the SBUS receiver

Receiver

Serial-based receiver (SPEKSAT, S ▾) Receiver Mode

Note: Remember to configure a Serial Port (via Ports tab) and choose a Serial Receiver Provider when using RX_SERIAL feature.

SBUS ▾ Serial Receiver Provider

4. Set the PPM receiver

Receiver

PPM RX input ▾ Receiver Mode

5. Set the DSMX receiver

Receiver

Serial-based receiver (SPEKSAT, S ▾) Receiver Mode


Note: Remember to configure a Serial Port (via Ports tab) and choose a Serial Receiver Provider when using RX_SERIAL feature.

SPEKTRUM2048 ▾ Serial Receiver Provider


11.VTX serial port use wiring .

DJI serial port use wiring

1. 5.8VTX connection

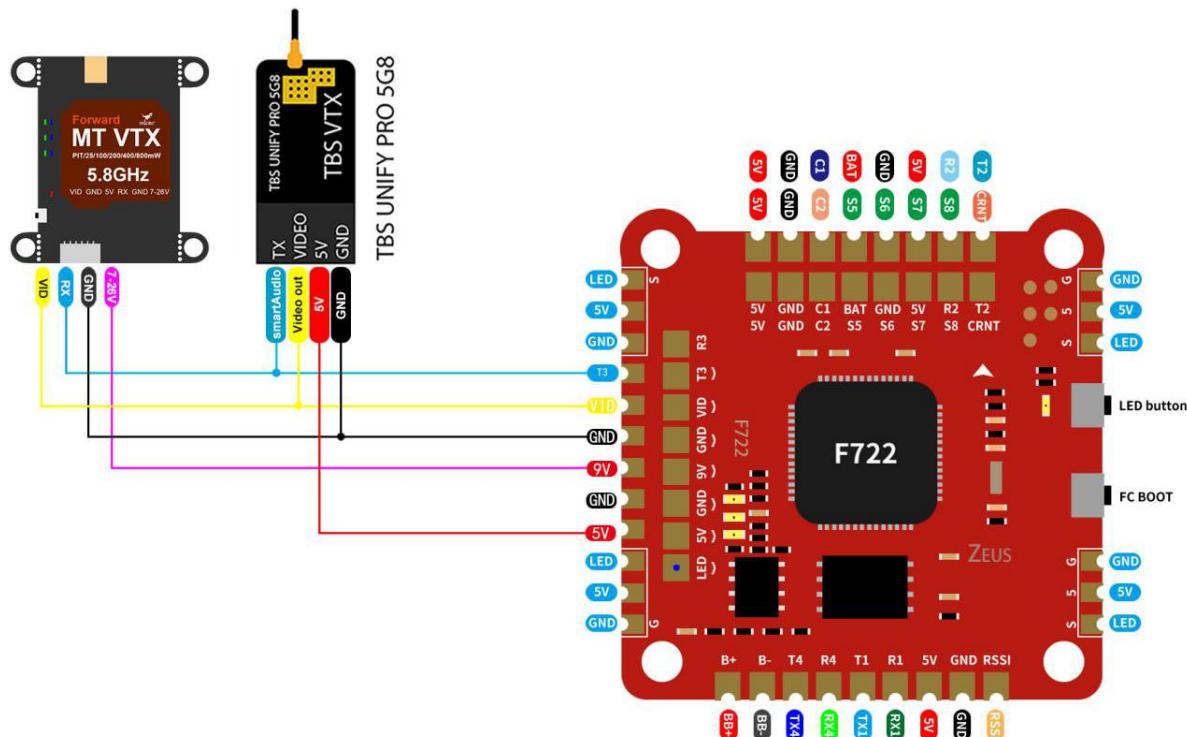

2. DJI FPV Air Unit wiring

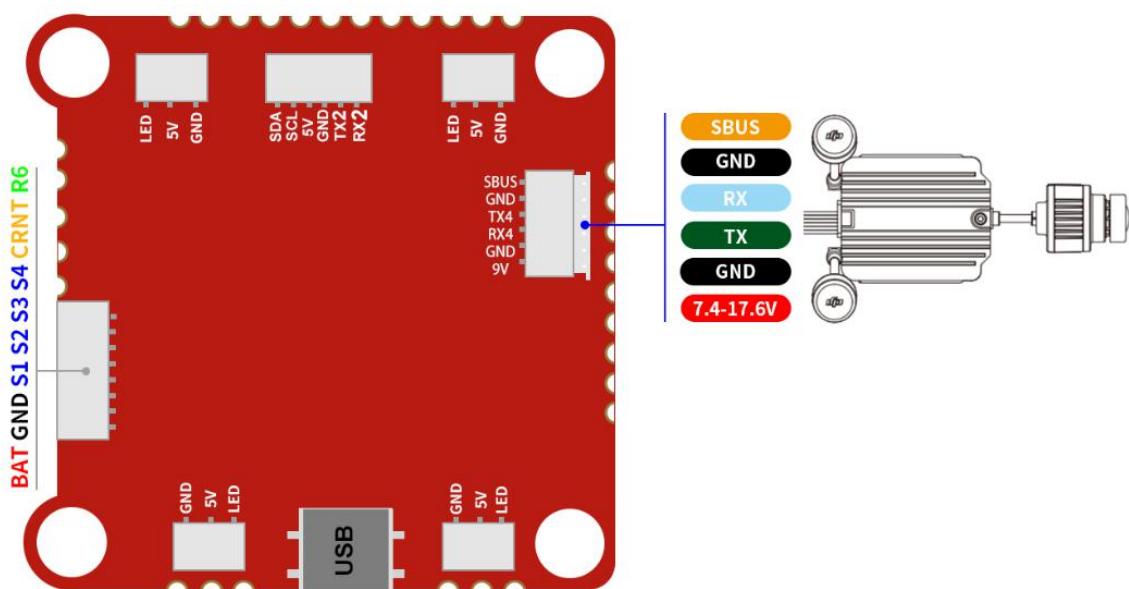



3. 5.8G VTX serial port opens. The protocol is selected according to its own VTX protocol.

Ports

WIKI

Note: not all combinations are valid. When the flight controller firmware detects this the serial port configuration will be reset. Note: Do NOT disable MSP on the first serial port unless you know what you are doing. You may have to reflash and erase your configuration if you do.					
Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	<input checked="" type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾
UART1	<input type="checkbox"/> 115200	<input checked="" type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾
UART2	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾
UART3	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	VTX (IRC Tran ▾ AUTO ▾)
UART4	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	GPS ▾ 115200	Disabled Blackbox logging VTX (TBS SmartAudio)
UART6	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	ESC ▾ AUTO ▾	VTX (IRC Tramp ▾ AUTO ▾) Camera (RunCam Protocol) Benewake LIDAR

4. DJI serial port opens

Ports

WIKI


Note: not all combinations are valid. When the flight controller firmware detects this the serial port configuration will be reset. Note: Do NOT disable MSP on the first serial port unless you know what you are doing. You may have to reflash and erase your configuration if you do.					
Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	<input checked="" type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾
UART1	<input type="checkbox"/> 115200	<input checked="" type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾
UART2	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾
UART3	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	VTX (IRC Tran ▾ AUTO ▾)
UART4	<input checked="" type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾	Disabled ▾ AUTO ▾
UART6	<input type="checkbox"/> 115200	<input type="checkbox"/>	Disabled ▾ AUTO ▾	ESC ▾ AUTO ▾	Disabled ▾ AUTO ▾

3. Use OSD to adjust VTX

which displays information like battery voltage and mAh consumed while you fly. In addition, the Betaflight OSD can be used to configure the quadcopter, making in-field adjustments and tuning more convenient.

MODE2

MODE1

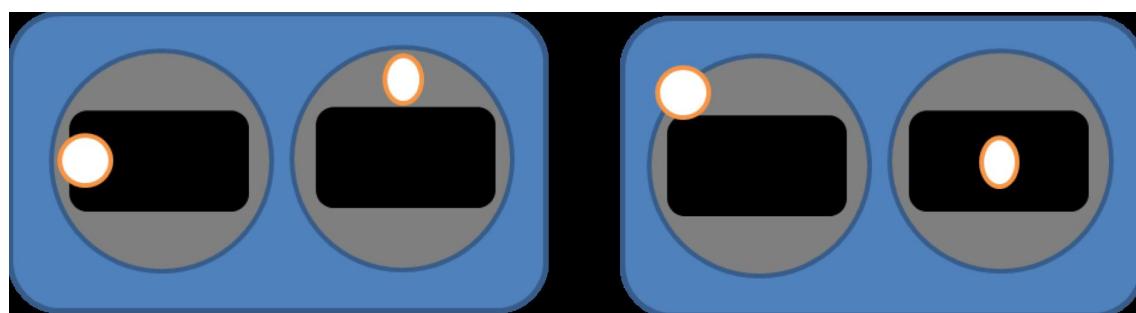



The graphics above show the stick command to bring up the OSD menu. The stick command is: throttle centered, yaw left, pitch forward. The exact stick command therefore depends on which mode your transmitter sticks are in.

In the OSD menu, use pitch up/down to move the cursor between menu items. When a menu option has a > symbol to the right of it, this indicates that it contains a sub-menu.

Roll-right will enter the sub-menu. For example, in the screen to the right, moving the cursor to “Features” and then moving the roll stick to the right will enter the “Features” sub-menu.

If you are using a video transmitter that supports remote configuration, enter the “Features” menu to configure the vTX. From there, enter either “VTX SA” if you are using SmartAudio (TBS Unify) or “VTX TR” if you are using IRC Tramp Telemetry.




To adjust PIDs, rates, and other tuning-related parameters, enter the “Profile” sub-menu.

In the “Scr Layout” sub-menu, you can move the OSD elements (like battery voltage, mAh, and so forth) around on the screen.

The “Alarms” sub-menu lets you control when the OSD will try to alert you that battery voltage is too low or mAh consumed is too high.


When a parameter can be modified, the parameter’s current value will be shown on the right-hand side of the screen. In this case, roll left/right will adjust the parameter up and down.

The screen to the right shows the current vTX settings. From here, you can change the frequency band, channel, and power level of the video transmitter. After making the changes, move the cursor to “Set” and press roll-right to confirm the settings.

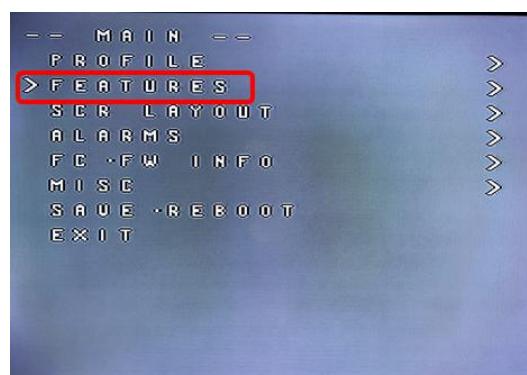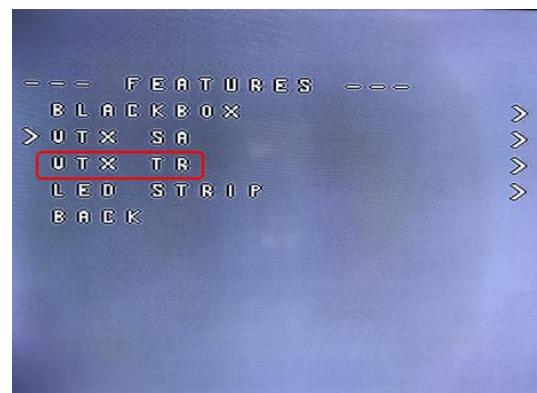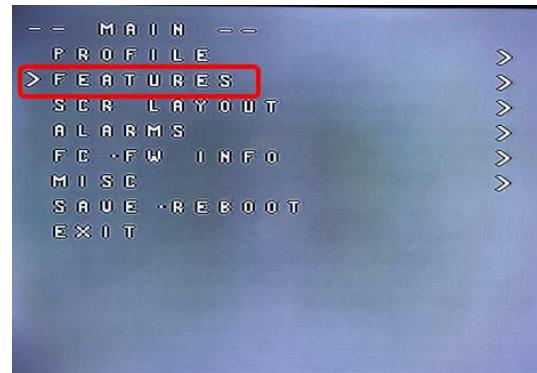

12.GPS parameters setting

1. GPS connection diagram

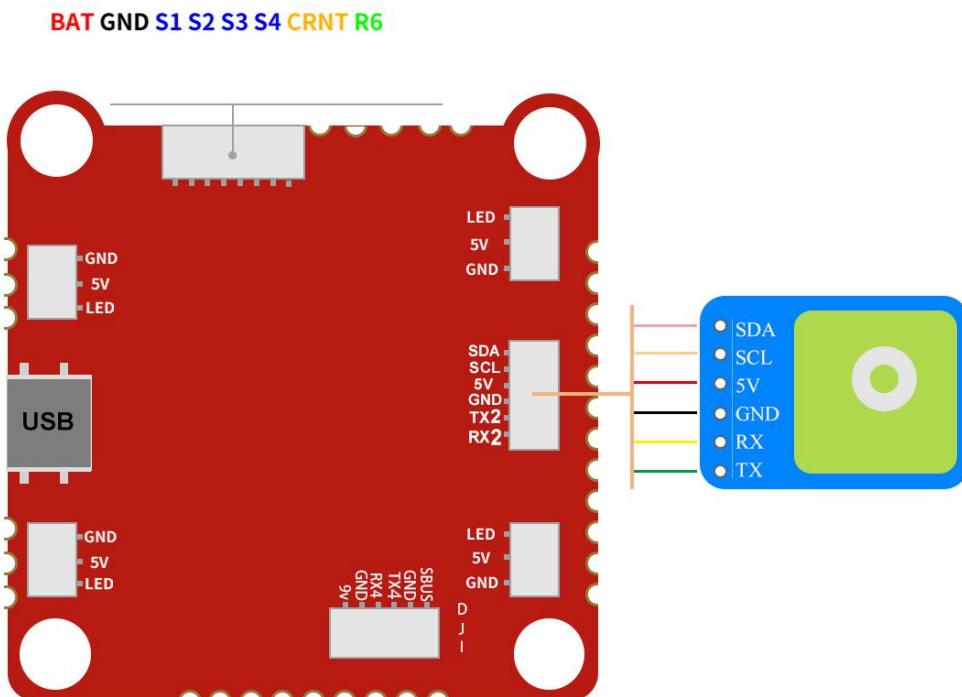

2. Open the GPS serial port


Ports

WIKI

Note: not all combinations are valid. When the flight controller firmware detects this the serial port configuration will be reset.
Note: Do **NOT** disable MSP on the first serial port unless you know what you are doing. You may have to reflash and erase your configuration if you do.


Identifier	Configuration/MSP	Serial Rx	Telemetry Output	Sensor Input	Peripherals
USB VCP	115200	<input checked="" type="checkbox"/>	Disabled AUTO	Disabled AUTO	Disabled AUTO
UART1	115200	<input checked="" type="checkbox"/>	Disabled AUTO	Disabled AUTO	Disabled AUTO
UART2	115200	<input checked="" type="checkbox"/>	Disabled AUTO	GPS 115200	Disabled AUTO
UART3	115200	<input checked="" type="checkbox"/>	Disabled AUTO	Disabled AUTO	VTX (IRC Tran AUTO)
UART4	115200	<input checked="" type="checkbox"/>	Disabled AUTO	Disabled AUTO	Disabled AUTO
UART6	115200	<input checked="" type="checkbox"/>	Disabled AUTO	Disabled AUTO	Disabled AUTO

3. When using the GPS function, remember to configure the serial port (via the Ports tab).

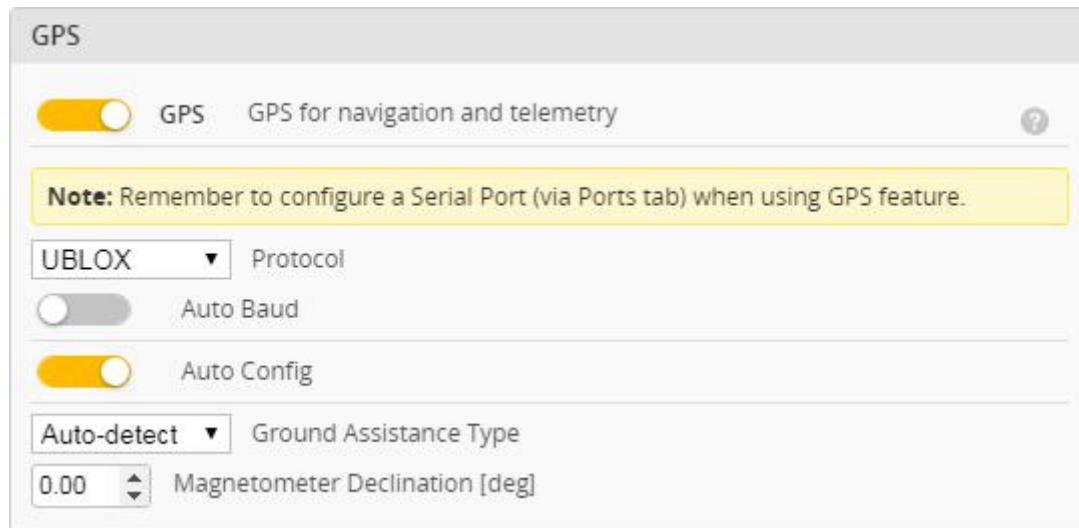


13. Check receiver signal

1. Click  Check the remote control output signal

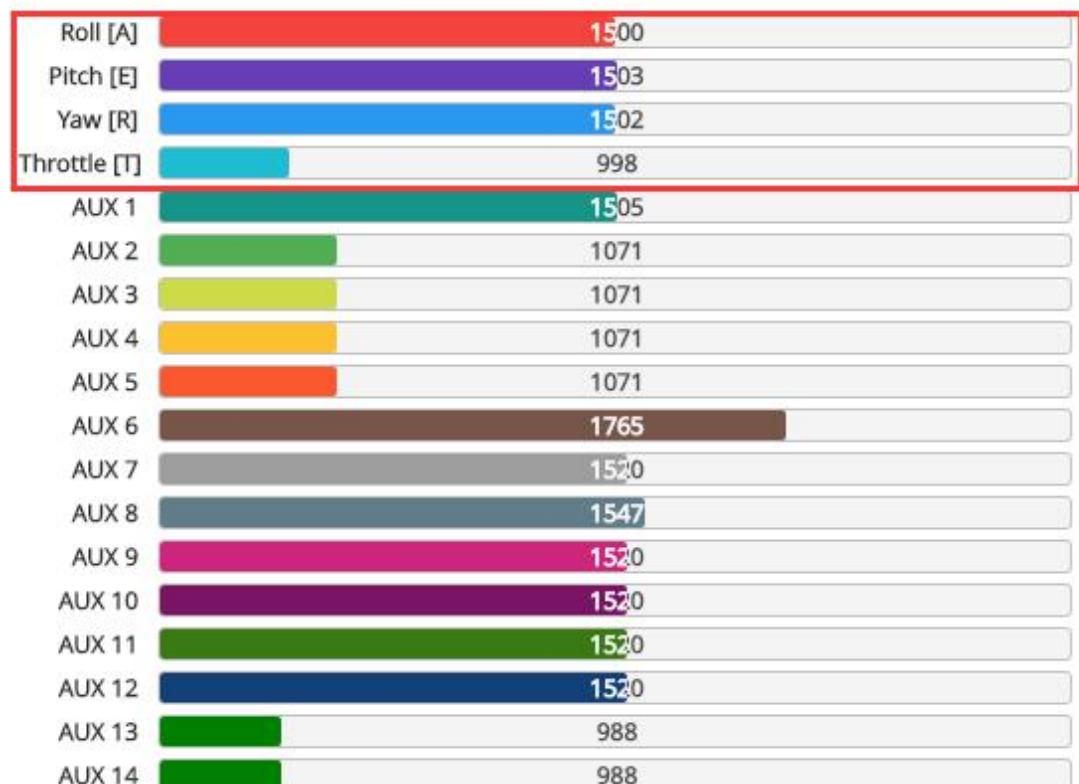

14. Select flight mode startup mode

1. Click  Modes set up the function of remote control switch across the channel (below are for reference only)

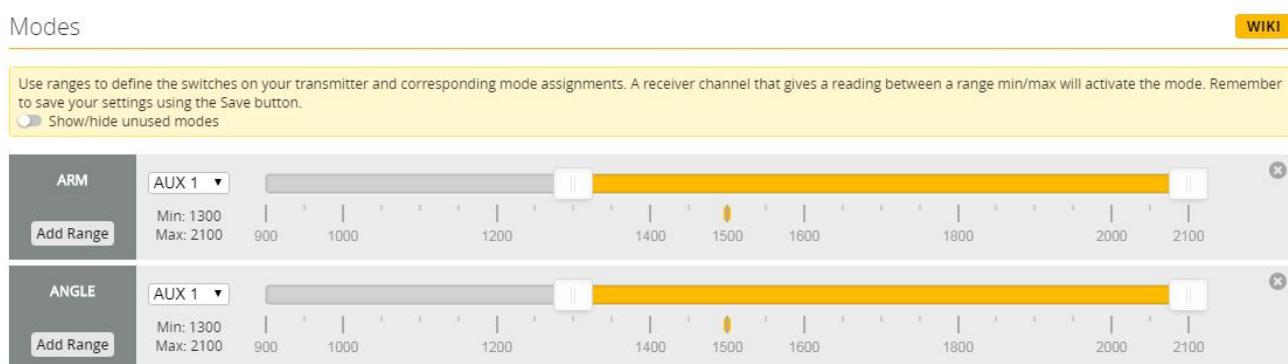

15. OSD settings

1. Click  OSD the OSD Settings, according to the need to choose, drag the OSD schematic diagram of the parameters can be adjusted.



16.LED settings

1.LED function buttons:

Short press to switch colors.

Press and hold for 3 seconds to enter the blinking mode switch
(LED status light is always on)

2.Blinking mode:


Steady / Fast Flash / Breathing Light / Colorful Slow Flash

3.LED light can be controlled via **CH5(AUX1)** of transmitter with
Channel_Forwarding enabled.


Click  enter:

resource servo 1 A08
SAVE

4.Click  Turn on LED support



5.Click  LED Strip .Click Wire Ordering Mode set according to need

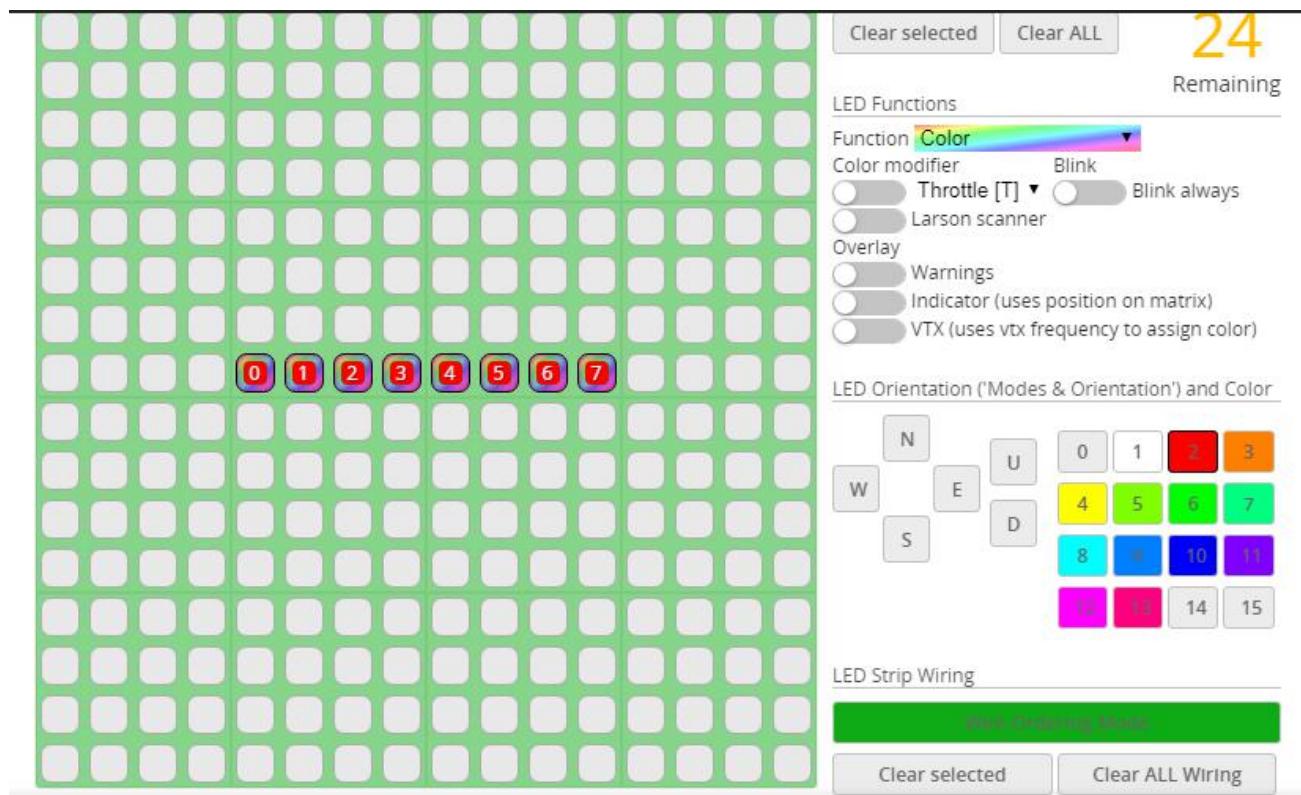

17.Troubleshooting

Warning:

Please read the cautions as follows, otherwise stability of your flight controller cannot be ensured, your flight controller will even get damaged.

- Keep focus on the polarity. Check carefully before power supply.
- Cut off the power when you connect, plug and pull anything.
- The refresh rate of PID and Gyroscope is up to 8K/8K.



after sales question:

1. After receiving the goods, it is found that the product can not be used normally. If the return to the factory is a quality problem, the repair service will be provided free of charge.
2. If the product is damaged due to improper operation, the repair service may be provided under the condition that the inspection can be repaired.
3. For domestic customers, please contact the after-sales service personnel. For overseas customers, please contact the official website for after-sales service.

Product daily problems

1.OSD garbled:

If you find garbled characters, please open Betaflight, click “**OSD**” .and click “**Font Manager**” clicks on “**Upload Font**” to update

1. When plugged in the battery, the aircraft does not pass the self-test without "BBB" sound. There is only one sound.

Please check if the ESC agreement is correct

3.The spin of the aircraft keeps spinning

1. Please check if the propeller is correct
2. Please check if the motor direction is correct