


NIWALKER®

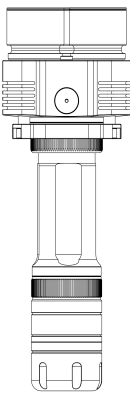

MinMax ES3Pro

说明书

多合一三头多功能手电筒

感谢阁下惠顾本公司产品，使用前敬请详细阅读说明书

保修条款

- 1. 15 天免费包换:产品自出售之日起15天内,用户在正常使用情况下出现品质问题,则享受免费包换。
- 2. 5 年有限保修：在超过免费包换时间外，公司将提供有偿保修，费用以实际更换材料费用为准（邮费自理）

警示

- 1. 手电亮度高，请勿直视发光体，以免造成视力损伤。
- 2. 为了保护电池，电路板以及LED灯珠，我们建议操作极亮模式不要过长。
- 3. 请远离儿童防止其误食。
- 4.请勿使用配套的充电器给其他电子设备充电

耐沃克国际有限公司

+86-0769-82050520
sales@niwalkerlight.com
niwalkerflashlight
http://www.niwalkerlight.com
广东省东莞市樟木头镇百果洞百达工业
区艺峰园区




RoHS FC CE X
Made in China

注:本说明书的所有图片,陈述及文字信息仅供参考,产品改进设计和规格参数如有变化,恕不另行通知,请以官网实际信息为准。
耐沃克国际有限公司拥有对说明书内容的解释权和修改权。


包装清单	ES3Pro手电筒(标配远射灯头,冷白泛光灯头,暖白泛光灯头<可拆卸>,3UV灯头<储存仓内>),双头Type-C USB 充电线*1,Type-C转USB转接头,手绳*1,说明书*1,5000mAh 21700充电电池(选配),三色柔光罩(选配)
------	--

产品介绍

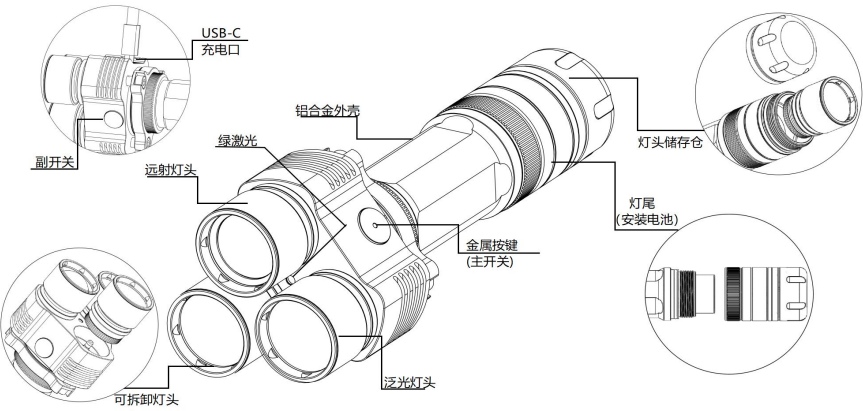

配件安装（3色柔光罩）

尺寸和重量

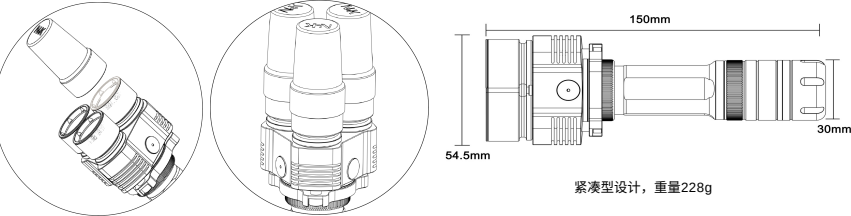


技术参数												
	泛光单灯头(冷白6500K)			泛光单灯头(暖白4000k)				远射单灯头(冷白6500K)				
FL1 STANDARD	极亮档	高亮档	低亮档	月光档	极亮档	高亮档	低亮档	月光档	极亮档	高亮档	低亮档	月光档
 亮度	2280流明	900流明	150流明	2流明	1620流明	900流明	100流明	2流明	500流明	150流明	25流明	1流明
 续航时间	3小时	3小时20分	18小时	500小时	3小时30分	3小时40分	18.5小时	500小时	3小时39分	4小时45分	26小时	500小时
 最大光强	9550cd	-	-	-	8200cd	-	-	-	46,500cd	-	-	-
 最大射程	195米	-	-	-	181米	-	-	-	431米	-	-	-
 跌落高度	1米											
 防水等级	IP65											

	3灯头 (远射&冷白泛光&暖白泛光)				UV单灯头(365nm)			绿激光
FL1 STANDARD	极亮档	高亮档	低亮档	月光档	极亮档	高亮档	低亮档	
亮度	3500流明	1200流明	200流明	4流明	-	-	-	-
续航时间	4小时	4.5小时	12.5小时	168小时	3小时30分	3小时40分	18.5小时	50小时
最大光强	54,100cd	-	-	-	-	-	-	-
最大射程	465米	-	-	-	-	-	-	-
跌落高度	1米							
防水等级	IP65							

注:技术参数只是一个近似值,以一颗NIWALKER 21700 5000mAh电池在实验环境中测试所得,可能会随着手电,电池和使用环境而发生变化。

电池电压指示

手电筒开启和换挡操作过程中，位于主开关下面的指示灯亮起，将通过指示灯颜色提示电池电压状态

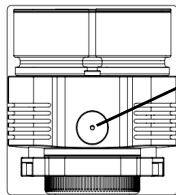

电池电压指示灯
充电指示灯

电池电量大于30%，
指示灯显示蓝灯，
当电池电量小于30%时，
指示灯显示红灯，
请及时充电


充放电功能说明

充电指示：
插上USB-C充电线，使用5V2A充电器进行充电。
在电池充电状态下，开关下面指示灯会亮红灯。
在电池充满电状态下，开关下面指示灯会亮蓝灯。

电池放电指示(应急充电宝功能):
ES3pro可以作为移动电源对外充电，给手机灯电子设备充电。

操作说明

带指示灯按键为主开关(主功能开关),另一侧按键为副开关(转换开关)

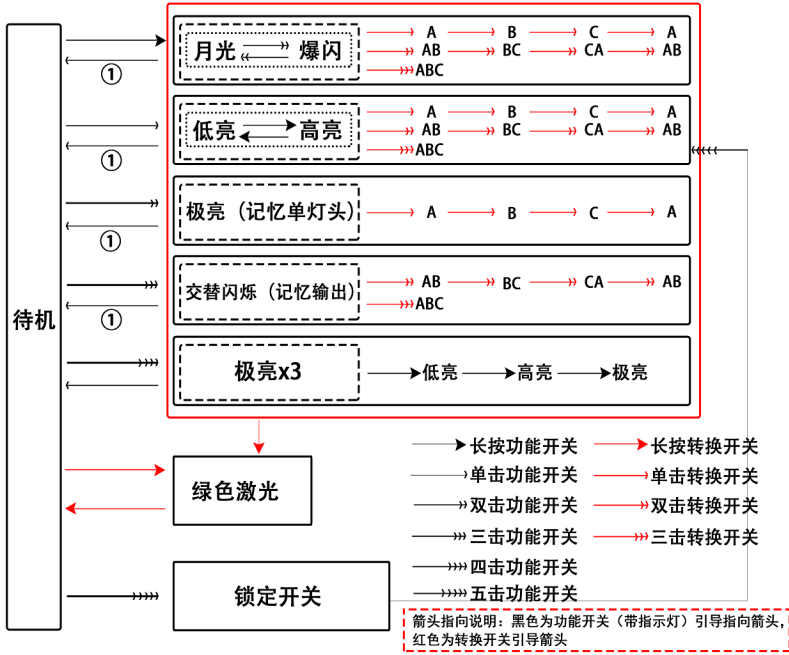


操作详细说明：

- 待机状态下，长按主开关进入月光模式(再次双击主开关进入爆闪)，单击副开关选择任意一个灯头月光模式，双击副开关选择任意两个灯头月光模式，三击副开关三个灯头月光模式。
- 待机状态下，单击主开关进入普通档模式(长按主开关调节低亮和高亮)，单击副开关选择任意一个灯头亮，双击副开关选择任意两个灯头亮，三击副开关三个灯头亮。
- 待机状态下，双击主开关进入一个灯头极亮，单击副开关选择任意一个灯头极亮。
- 待机状态下，三击主开关进入交替闪烁模式，双击副开关选择任意两个灯头交替闪烁，三击副开关三灯头交替闪烁。
- 待机状态下，四击主开关进入三个灯头同时极亮，长按主开关选择低亮，高亮，极亮，在需要的亮度下松开开关即为选定亮度。
- 长按副开关开启绿激光，再次长按副开关关闭绿激光
- 待机状态下，五击主开关进入手电锁定(主开关上的指示灯会闪烁3次,表示锁定成功)，再次五击主开关回到关闭前的档位。
- 1~5项操作都是单击主开关关闭；1-4项操作都有记忆模式(图示标注了①)，关闭后再开启是回到关闭前的档位。

Battery Voltage Indication

When flashlight is on, the light indicator under the button will change different colors to indicate remaining battery voltage.

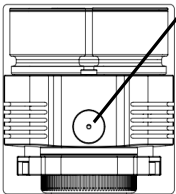

Battery Voltage Indicator
Battery charging indicator

Battery power >30%,
the indicator is blue light,
battery power <30%,the
indicator will be red light,
please charging ASAP.

Battery Charging&Discharging


USB-C charging, please use 5V 2A Charger to charging.When battery is charging, the indicator under button will be red light. After battery has been fully charged, the indicator will be blue light.

Powerbank Function:
ES3Pro can work as powerbank to change other devices such as cell phone.

Operating Instrucitons

(The button with indicator is Master Switch,The button on the other side is the auxiliary switch)


Arrow directions: The black arrow is for the master switch operation
The red arrow is for the auxiliary switch operation

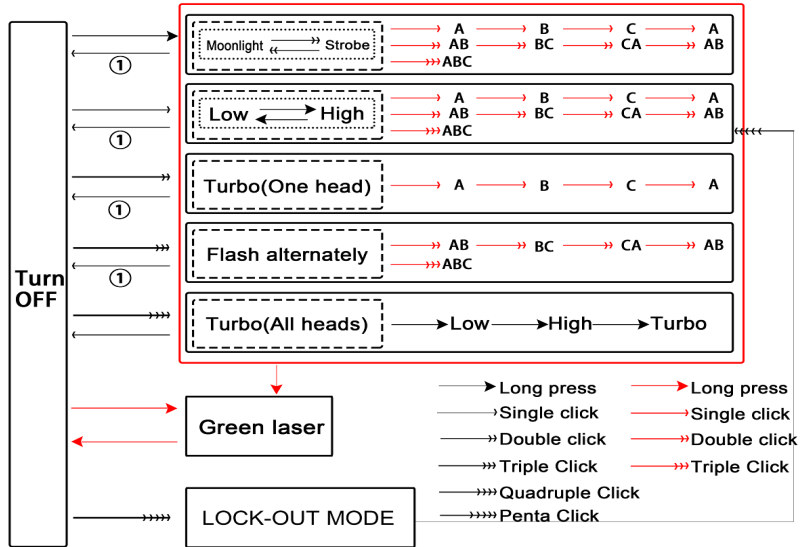

UI Details：

- Long press the master switch to get moonlight(then double click the master switch to turn to strobe); single click the auxiliary switch to select any head, double click the auxiliary switch to select any two heads, triple click the auxiliary switch to open three heads.
- Single click the master switch to get general mode,then long press the master switch to select low brightness and high brightness; single click the auxiliary switch to select any head, double click the auxiliary switch to select any two heads, triple click the auxiliary switch to open three heads.
- Double click the master switch to turn to Turbo for one head; single click the auxiliary switch to select any head.
- Triple click the master switch to turn to flash alternately mode,double click the auxiliary switch to select any two heads flash alternately, triple click the auxiliary switch to select three heads flash alternately.
- Quadruple click the master switch to turn to Turbo for three heads, then long press the master switch to cycle different brightness(Low-High-Turbo),release the switch to get the selected brightness.
- Long press the auxiliary switch to open green laser, long press the auxiliary switch again to OFF.
- Penta click the master switch to Lock the light(the indicator under the button will blink 3 times), penta click the master switch again to unlock.
- Single Click the master switch to OFF for operations 1 to 5; memory function for 1-4 operations(remarks①), memory function stores last used and one brightness level at the last used.

NIWALKER®

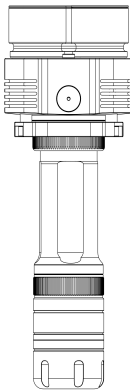

MinMax ES3Pro

User Manual

All in One Mutli-Purpose Flashlight

Thank you for choosing Niwalker products!
Please read the user manual fully before use.

NIWALKER INTERNATIONAL Co., Ltd

+86-0769-82050520
sales@niwalkerlight.com
http://www.niwalkerlight.com
Building B, Yifeng Industrial park,
Yifeng road Baida Industrial Estate,
Baiqudong,Zhangmutou, Dongguan,

RoHS FC CE X
Made in China

Warranty

- 1.15days free replacement: We will offer free replacement within 15days of purchase if problems develop with normal use.
2. 5-year limited warranty: As to those exceed 30days free replacement time, we will still provide with maintenance service, but the cost of parts will becharged Warranty and freight should be paid by customers.

Warnings

- 1.Niwalker flashlights are high-intensity lighting devices capable of causing eye damage or other harms, so please avoid shining our light directly into anyone's eyes.
- 2.Please keep flashlights away from children.
- 3.To protect the battery,driver circuit and LED,we do NOT recommend you run the light at max mode more

Note:All images, text and statements specified herein this user manual are for reference purposeonly.
Niwalker reserves the rights to interpret andamend the content of this document at any time without prior notice.

Notes: The above parameters tested by one NIWALKER 5000mAh 21700 battery are approximate and mayvary between lights, batteries and environment.