


# User Manual

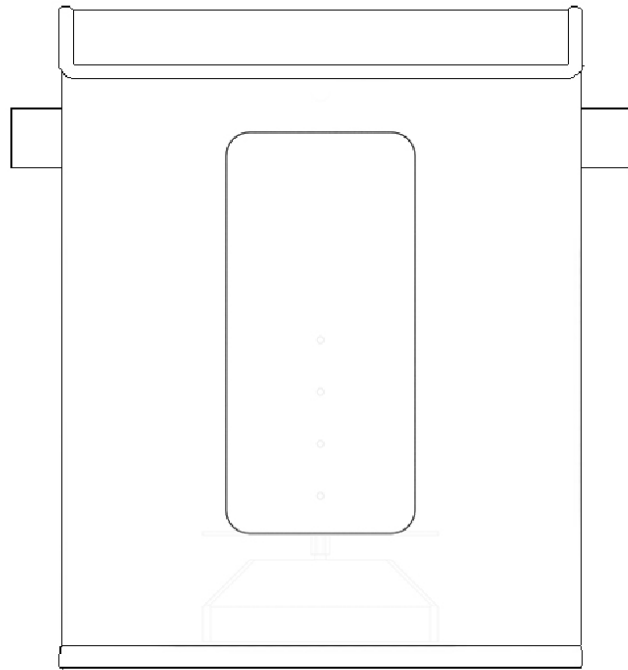


CE FC RoHS REACH ♻️ ♻️ ♻️


Please read this manual thoroughly before operating the equipment and keep it for unexpected situation !

## HOW TO USE


1. Unfold the curing box on the horizontal table, put the bottom plate into the bottom support of the curing box, and put the turntable in the middle of the bottom.

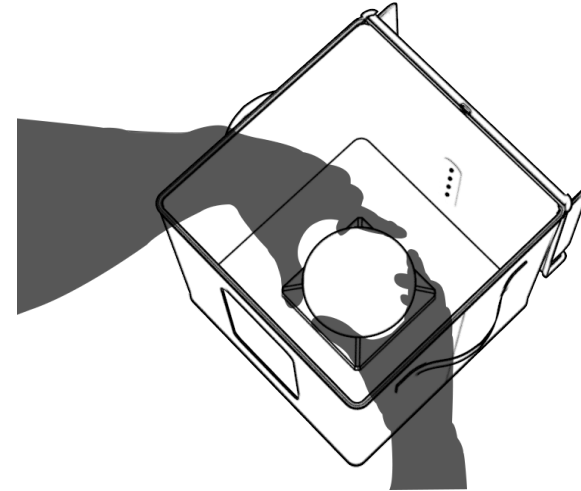


2. Place the model to be cured on the turntable.

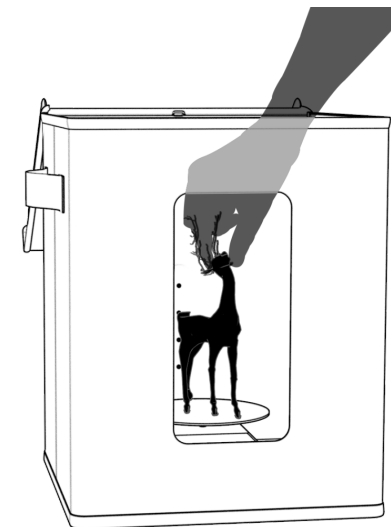

3. Close the top cover and connect the power.

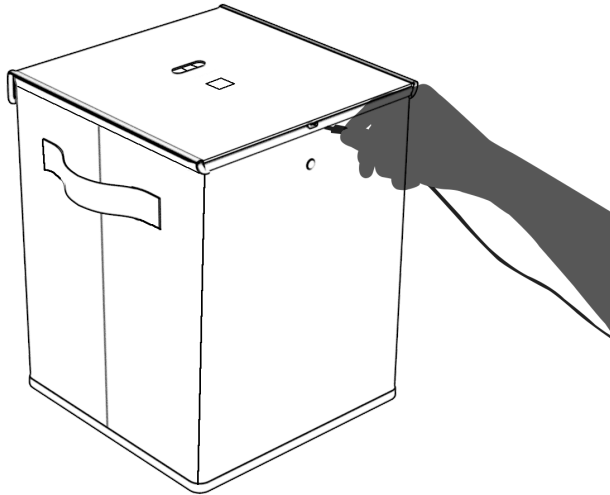

4. Long press the power button to turn on, set the curing time, click the power button to start working.

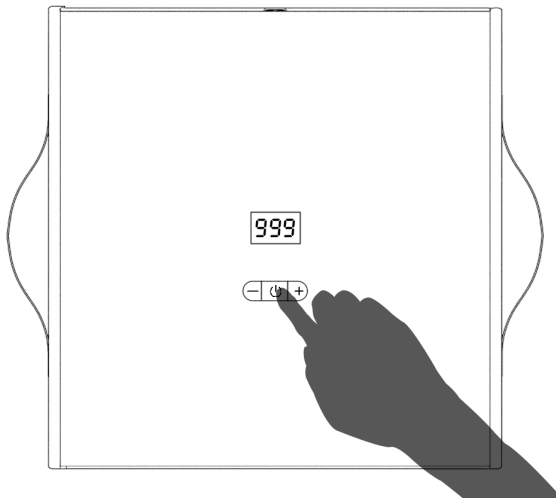

## INTELLIGENT PROTECTION

The product has a special safety protection design, it will automatically stop working after opening the lid, and continue working after closing the lid.

## INSTRUCTIONS

Buttons	Operating	Description
	Power ON/OFF	Press and hold for 2 seconds to switch on and switch off
	Start/Pause	Click to start and pause work
	Increase The Time	Click once to increase the time by 30 seconds, press and hold for 1.5 seconds can increase 100s every 1 second
	Reduce The Time	Click once to reduce the time by 30 seconds, press and hold for 1.5 seconds can reduce 100s every 1 second

## PRODUCT SPECIFICATION SHEET

<b>Package Size</b>	375(L)×275(W)×55(H) mm
<b>Curing Box Size</b>	220(L)×220(W)×270(H) mm
<b>Product Weight</b>	730g
<b>UVA QTY</b>	4 PCS
<b>UV Wavelength</b>	395~405 nm
<b>Working Time Range</b>	30~999 s
<b>Power Output</b>	5V 2A
<b>Charging Mode</b>	USB Charging
<b>Turntable Size</b>	120(L)×120(W)×55(H) mm
<b>Rotating Speed</b>	3r/min
<b>Maximum Load-bearing</b>	300 g

## PACKING LIST

1. Curing box \*1
2. Turntable base \*1
3. Disc \*1
4. USB data cable \*1
5. User manual \*1

## PRODUCT FEATURES



Convenient operation



Uniform curing



Support Mobile Power



Large curing size



Intelligent protection



Smart time setting



Professional lamp beads



Unique appearance

## ATTENTION

Do not approach strong magnets during use.

please place the product on a horizontal table when using.

Do not let children operate it without supervision.

Do not touch the light board in the curing box to avoid burns.

Do not cover or touch the light board with flammable substances to avoid fire.

Do not use it in a humid environment.

Please switch off the power if the curing box is not used.

Please make sure the model that needs secondary curing has been cleaned in advance, otherwise the surface of the finished model will be pale.

After the model is printed, please clean and blow-dry the model before putting it into the machine.

If the model become yellow after curing, please reduce the curing time. Over curing will lead to a yellowish model.

Cut off the power and contact us immediately when something is wrong.



Do not allow children to touch this product



No trampling



No exposure to eyes and skin



No washing or soaking